



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
<b>2 Body dimensions</b>	<b>2</b>
2.1 Body - front	2
2.2 Body - centre	5
2.3 Body - rear	10
2.4 Floor group - front	12
2.5 Floor group - centre	14
2.6 Floor group - rear	15
<b>3 Body panel gaps/shut lines</b>	<b>17</b>
3.1 Body - front	17
3.2 Body - rear	18
<b>4 Moulded foam elements</b>	<b>19</b>
<b>5 Strengthened steel body panels</b>	<b>24</b>
<b>6 Galvanized body parts</b>	<b>25</b>
<b>7 Alignment bracket set</b>	<b>26</b>
<b>8 Portal gauge</b>	<b>27</b>
<b>50 - Body - front</b>	<b>29</b>
<b>1 Renewing mounting bracket for subframe</b>	<b>29</b>
1.1 Removing	29
1.2 Installing	30
<b>2 Renewing headlight carrier</b>	<b>32</b>
2.1 Removing	32
<b>3 Renewing extension of upper longitudinal member</b>	<b>34</b>
3.1 Removing	34
<b>4 Reinforcement plate for wheel housing</b>	<b>37</b>
4.1 Removing	37
<b>5 Renewing connecting plate for wheel housing</b>	<b>39</b>
5.1 Removing	39
<b>6 Renewing reinforcement for wheel housing</b>	<b>41</b>
6.1 Removing	41
<b>7 End plate for wheel housing</b>	<b>43</b>
7.1 Removing	43
<b>8 Repairing threads for securing subframe (suspension subframe)</b>	<b>46</b>
8.1 Tools	47
8.2 Contents of thread repair kit	47
8.3 Contents of thread repair kit	48
8.4 Repairing thread	49
<b>9 Renewing front wheel housing</b>	<b>52</b>
9.1 Removing	52
<b>10 Renewing front longitudinal member</b>	<b>54</b>
10.1 Removing	54
<b>11 Renewing front part of longitudinal member - subpart</b>	<b>58</b>
11.1 Removing	58
<b>51 - Body - centre</b>	<b>62</b>
<b>1 Renewing roof</b>	<b>62</b>
1.1 Removing	62
<b>2 Renewing roof</b>	<b>66</b>



2.1	Removing	67
2.2	Installing	68
<b>3</b>	<b>Renewing front roof cross member</b>	<b>78</b>
3.1	Removing	78
<b>4</b>	<b>Renewing middle roof cross member</b>	<b>80</b>
4.1	Removing	80
<b>5</b>	<b>Renewing rear roof cross member</b>	<b>82</b>
5.1	Removing	82
<b>6</b>	<b>Renewing A-pillar</b>	<b>84</b>
6.1	Removing	84
<b>7</b>	<b>Renewing reinforcement for side panel</b>	<b>88</b>
7.1	Removing	88
<b>8</b>	<b>Renewing outer B-pillar</b>	<b>91</b>
8.1	Outer B-pillar	92
<b>9</b>	<b>Renewing B-pillar reinforcement</b>	<b>95</b>
9.1	Removing	95
<b>10</b>	<b>Renewing outer side member</b>	<b>97</b>
10.1	Removing	98
<b>11</b>	<b>Renewing side member reinforcement</b>	<b>103</b>
11.1	Removing	103
<b>12</b>	<b>Renewing side member reinforcement</b>	<b>106</b>
12.1	Removing	106
12.2	Installing	109
<b>13</b>	<b>Renewing web plate for side member</b>	<b>112</b>
13.1	Removing	112
<b>14</b>	<b>Renewing web plate for side member</b>	<b>114</b>
14.1	Removing	114
14.2	Installing	117
<b>15</b>	<b>Renewing seat anchor bracket in sill</b>	<b>120</b>
15.1	Removing	120
15.2	Installing	121
<b>16</b>	<b>Renewing floor panel - part section</b>	<b>122</b>
16.1	Removing	122
16.2	Installing	124
<b>17</b>	<b>Renewing front seat cross member</b>	<b>126</b>
17.1	Removing	126
17.2	Installing	127
<b>18</b>	<b>Renewing rear seat cross member</b>	<b>129</b>
18.1	Removing	129
18.2	Installing	130
<b>19</b>	<b>Renewing rear seat rail mounting bracket</b>	<b>132</b>
19.1	Removing	132
19.2	Installing	133
<b>53 - Body - rear</b>		<b>134</b>
<b>1</b>	<b>Renewing reinforcing for rear cross panel</b>	<b>134</b>
1.1	Removing	134
<b>2</b>	<b>Renewing rear cross panel</b>	<b>136</b>
2.1	Removing	136
<b>3</b>	<b>Renewing tail light mounting</b>	<b>138</b>
3.1	Removing	138
<b>4</b>	<b>Renewing side panel</b>	<b>140</b>



---

4.1	Removing .....	141
<b>5</b>	<b>Renewing spare wheel well .....</b>	<b>144</b>
5.1	Removing .....	144
<b>6</b>	<b>Renewing luggage compartment floor, part section .....</b>	<b>147</b>
6.1	Removing .....	147
<b>7</b>	<b>Renewing rear longitudinal member .....</b>	<b>149</b>
7.1	Removing .....	149

