



Contents

82 - Supplementary heating	1
1 Auxiliary coolant heater Thermo Top Z/C B (petrol) or D (diesel)	1
1.1 Safety precautions for working on vehicles with auxiliary heater	1
1.2 Safety measures for when working on vehicles with a start-stop system	2
1.3 Safety precautions when working on the fuel system	2
2 Notes on general repairs on vehicles with auxiliary heaters	3
3 Rules for cleanliness for working on the auxiliary heater and the fuel system	4
4 Switching auxiliary coolant heater on and off	5
4.1 Switching auxiliary coolant heater on and off, vehicles up to week 44/2008	5
4.2 Switching auxiliary coolant heater on and off, vehicles from week 45/2008	6
5 Repairing auxiliary coolant heater Thermo Top Z/C-B or -D, components overview	8
5.1 Auxiliary coolant heater Thermo Top Z/C-B or -D	8
5.2 Removing and installing remote control receiver for auxiliary coolant heater R149	12
5.3 Add-on parts for auxiliary coolant heater	12
6 Removing and installing auxiliary coolant heater Thermo Top Z/C-B or -D	14
6.1 Auxiliary coolant heater Thermo Top Z/C-B or -D	14
6.2 Removing and installing air intake silencer	16
6.3 Removing and installing circulation pump V55	16
6.4 Removing and installing auxiliary coolant heater bracket	18
6.5 Dismantling and assembling auxiliary coolant heater Thermo Top Z/C-B or -D	18
7 Connecting auxiliary coolant heater into cooling circuit	25
7.1 Engine codes: BMK, CARA, CARB and CEXA	25
7.2 Engine codes BGH and BGJ	26
7.3 Engine code: AJS	27
7.4 Engine codes CHNA, CMVA and CPFA	29
7.5 Engine codes BAN, BAP, BRN, BRP and BTT	30
7.6 Engine codes AYT, BKL and BRK	31
7.7 Removing and installing heater coolant shut-off valve N279	31
8 Fuel supply for auxiliary coolant heaters Thermo Top Z/C-B or -D	34
8.1 Fuel supply for auxiliary coolant heaters Thermo Top Z/C-B or -D	34
8.2 Regulation of auxiliary coolant heater Thermo Top Z/C-B	39
9 Functional description of "large" remote control	41
10 Functional description of "small" remote control	43

