



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Location on gearbox .....	1
1.2 Identification code, assembly allocation, ratios, capacities .....	2
<b>2 Overview - power transmission</b> .....	<b>3</b>
2.1 Designation .....	3
<b>3 Calculating overall gear ratio "i"</b> .....	<b>5</b>
<b>4 General repair instructions</b> .....	<b>6</b>
4.1 Components .....	6
<b>30 - Clutch</b> .....	<b>9</b>
<b>1 Repairing clutch mechanism</b> .....	<b>9</b>
1.1 Assembly overview - pedal cluster .....	10
1.2 Removing and installing over-centre spring .....	11
1.3 Removing and installing clutch pedal .....	12
1.4 Removing and installing mounting bracket .....	15
1.5 Assembly overview - hydraulic system .....	18
1.6 Removing and installing master cylinder .....	21
1.7 Bleeding clutch system .....	23
<b>2 Repairing clutch release mechanism</b> .....	<b>25</b>
2.1 Removing and installing slave cylinder .....	28
<b>3 Repairing clutch</b> .....	<b>30</b>
3.1 Resetting adjusting ring of self-adjusting pressure plate .....	32
<b>34 - Controls, housing</b> .....	<b>35</b>
<b>1 Repairing selector mechanism</b> .....	<b>35</b>
1.1 Installation position of selector mechanism .....	35
1.2 Removing and installing selector lever knob and cover .....	38
1.3 Repairing selector lever and selector lever housing .....	39
1.4 Assembly overview - removing and installing selector cables .....	41
1.5 Removing and installing selector mechanism .....	42
1.6 Removing and installing cable locking devices .....	45
1.7 Adjusting selector mechanism .....	46
1.8 Additional adjustment of selector mechanism .....	49
<b>2 Removing and installing gearbox</b> .....	<b>52</b>
2.1 Removing gearbox .....	53
2.2 Transporting gearbox .....	58
2.3 Installing gearbox .....	58
2.4 Removing and installing gearbox support with damper weight and gearbox mounting .....	63
<b>3 Checking gear oil</b> .....	<b>66</b>
<b>4 Dismantling and assembling gearbox</b> .....	<b>67</b>
4.1 Assembly overview .....	67
4.2 Removing and installing manual gearbox and end cover .....	68
4.3 Removing and installing 5th and 6th gear .....	69
4.4 Removing and installing input shaft, pinion shaft and gear selector mechanism, gearbox side .....	71
4.5 Assembly sequence .....	72
<b>5 Repairing end cover</b> .....	<b>89</b>
<b>6 Repairing bearing plate</b> .....	<b>96</b>
6.1 Redetermining shim S4 .....	100
<b>7 Repairing gearbox housing</b> .....	<b>103</b>



7.1	Renewing selector shaft oil seal with gearbox removed but not dismantled	110
7.2	Dismantling and assembling selector shaft complete	112
<b>35</b>	<b>Gears, shafts</b>	<b>115</b>
1	Dismantling and assembling input shaft	115
2	Dismantling and assembling pinion shaft	121
<b>39</b>	<b>Final drive - differential</b>	<b>131</b>
1	Renewing oil seals for flange shafts	131
2	Differential	133
2.1	Removing and installing differential	133
2.2	Dismantling and assembling differential	134
3	Adjusting pinion shaft and crown wheel	143
3.1	Adjustment and marking of drive pinion sets	143
3.2	Position of shims	144
3.3	Adjustment overview	144
3.4	Recommended sequence for new adjustment pinion drive set	145
3.5	Adjusting pinion shaft	145
3.6	Adjusting crown wheel	150