



Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on 5-speed automatic gearbox four wheel drive 01L	2
3 Code letters, engine allocation	3
4 Capacities	4
4.1 Planetary gearbox	4
4.2 Front final drive	4
4.3 Transfer box	4
5 General repair notes	5
5.1 »Vorsprung durch Technik«	5
5.2 Special tools	6
5.3 Gearbox	6
5.4 Electrical components	7
5.5 Seals and sealing rings	7
5.6 Locking devices	8
5.7 Nuts and bolts	8
5.8 Guided fault finding, vehicle self-diagnosis and testing	8
5.9 Emergency release of selector mechanism	8
5.10 Bearing	8
5.11 Oil	9
32 - Torque converter	10
1 Torque converter	10
1.1 Installing torque converter	10
1.2 Secure torque converter to prevent it from falling out	11
1.3 Checking torque converter	11
1.4 Removing and installing torque converter oil seal	11
1.5 Draining torque converter	12
37 - Controls, housing	14
1 Connecting VAS 5051 and selecting functions	14
2 Electrical and electronic components and their locations	16
3 Renewing multifunction switch F125	22
3.1 Removing	22
3.2 Installing	22
4 Repairing selector mechanism	23
4.1 Checking selector mechanism	23
4.2 Removing and installing selector lever handle	24
4.3 Removing and installing selector mechanism	25
4.4 Dismantling and assembling selector mechanism	30
4.5 Checking and adjusting selector lever cable	31
4.6 Adjusting selector lever cable	33
4.7 Removing and installing selector lever cable	35
4.8 Releasing selector lever without electrical current (emergency release)	38
5 Removing and installing gearbox	40
5.1 Removing gearbox	40
5.2 Installing gearbox	40
5.3 Specified torques	40
5.4 Removing and installing gearbox mounting	42
6 Checking ATF level and topping up	47
6.1 Checking ATF level	47



6.2	Topping up ATF	50
6.3	Renewing ATF	50
6.4	Filling empty additional ATF cooler	52
7	Schematic overview - power train, four wheel drive	54
7.1	Position of selector elements	54
8	ATF lines and ATF cooler	56
8.1	Removing and installing ATF lines and ATF cooler	56
8.2	Cleaning ATF lines and ATF cooler	59
38 - Gears, control		60
1	Overview - valve body	60
2	Removing and installing oil pan	63
2.1	Removing	63
2.2	Installing	63
3	Removing and installing ATF strainer	65
3.1	Removing	65
3.2	Installing	65
4	Removing and installing valve body	66
4.1	Removing	66
4.2	Installing	66
4.3	Removing and installing wiring harness in gearbox	67
4.4	Renewing gear oil temperature sender (ATF) G93	68
5	Renewing oil seal for selector shaft	69
5.1	Removing	69
5.2	Installing	69
39 - Final drive - front differential		71
1	Overview - gear oil in front final drive	71
1.1	Checking and topping up gear oil level in front final drive	71
1.2	Filling front final drive with gear oil following repair	72
2	Assembly overview - front final drive	74
2.1	Removing and installing left flange shaft	76
2.2	Renewing oil seal for left flange shaft	78
2.3	Removing and installing drive wheel for speedometer sender G22	78
2.4	Renewing ball bearing for left flange shaft	78
2.5	Removing and installing right flange shaft	78
2.6	Renewing seal for right flange shaft	79
2.7	Renewing O-ring on final drive cover	80
3	Assembly overview - gear oil drain and inspection plugs in transfer box	82
3.1	Checking and replenishing gear oil level in transfer box	82
3.2	Changing gear oil in transfer box or replenishing oil after repairs	83
4	Assembly overview - transfer box	85
4.1	Removing and installing rear flange shaft	88
4.2	Renewing seal for rear flange shaft	89
4.3	Removing and installing transfer box	89
4.4	Removing and installing intermediate flange for front axle drive	89
4.5	Renewing twin-lip oil seal in intermediate flange for front axle drive	90
4.6	Renewing twin-lip oil seal in output pinion	90
4.7	Renewing needle bearing for spur gear 2	90