



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vorsprung durch Technik</b>	<b>1</b>
1.1 General repair instructions	1
1.2 Special tools	2
<b>2 Rules for cleanliness when working on the automatic gearbox</b>	<b>4</b>
<b>3 Frequently occurring faults</b>	<b>5</b>
3.1 No power transfer in reverse gear	5
3.2 Hard jolt during shift, power transmission problems in 4th and 5th gear	5
3.3 Power transfer problems in 4th and 5th gear, ATF pump squeaks	6
3.4 No power transmitted in any gear	6
3.5 Reverse gear delayed (about 5 ... 6 seconds) after gear is selected	7
<b>32 - Torque converter</b>	<b>8</b>
<b>1 Torque converter</b>	<b>8</b>
1.1 Checking clutch lining of torque converter clutch	8
1.2 Draining torque converter	8
1.3 Checking torque converter	9
<b>37 - Controls, housing</b>	<b>10</b>
<b>1 Securing gearbox to assembly stand</b>	<b>10</b>
<b>2 Dismantling and assembling planetary gearbox</b>	<b>11</b>
2.1 Component overview - planetary gearbox	11
2.2 Dismantling and assembling planetary gearbox	12
<b>3 Dismantling and assembling clutch "F" with freewheel</b>	<b>37</b>
3.1 Component overview - clutch "F" with freewheel	37
3.2 Dismantling clutch "F"	38
3.3 Dismantling freewheel	39
3.4 Assembling freewheel	41
3.5 Assembling clutch "F"	42
<b>4 Dismantling and assembling body "I"</b>	<b>46</b>
4.1 Component overview - clutch "C" with sun shaft	46
4.2 Dismantling and assembling clutch "C" with sun shaft	47
4.3 Component overview - clutch "D"	51
4.4 Component overview - clutch "E"	53
4.5 Dismantling and assembling clutch "D/E"	54
4.6 Component overview - planetary drive	62
4.7 Dismantling and assembling planetary drive	63
4.8 Assembling body "I"	68
<b>5 Dismantling and assembling body "II"</b>	<b>71</b>
5.1 Component overview - body "II"	71
5.2 Dismantling body "II"	72
5.3 Component overview - clutch "A"	74
5.4 Dismantling and assembling clutch "A"	75
5.5 Component overview - clutch "B"	79
5.6 Dismantling and assembling clutch "B"	80
5.7 Assembling body "II"	85
<b>6 Removing and installing selector shaft</b>	<b>87</b>
<b>39 - Final drive - rear differential</b>	<b>91</b>
1 Repairing final drive, rear differential	91
<b>39 - Final drive - front differential</b>	<b>92</b>



<b>1</b>	<b>Dismantling and assembling ATF supply unit</b>	<b>92</b>
1.1	Component overview - ATF supply unit	92
1.2	Dismantling and assembling ATF supply unit	93
1.3	Removing and installing stator shaft	96
1.4	Checking flow control valve in ATF supply unit	97
<b>2</b>	<b>Removing and installing ATF pipes</b>	<b>98</b>
2.1	Removing and installing ATF pipes	98
2.2	Removing and installing ATF xxx pipe for final drive	99
<b>3</b>	<b>Assessment of wear on gearbox components</b>	<b>100</b>
3.1	Assessment of wear by checking ATF for colour and contamination	100
3.2	Clutch "F" with freewheel	100
3.3	Clutch "C" with sun shaft	103
3.4	Clutch "D"	105
3.5	Clutch "E"	107
3.6	Planetary drive	109
3.7	Clutch "A"	112
3.8	Clutch "B"	114
3.9	ATF supply unit	116