



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Gearbox identification</b>	<b>1</b>
1.1 Location of code letters on gearbox	1
<b>2 Notes on the 6-speed automatic gearbox 09F, four-wheel drive</b>	<b>2</b>
2.1 Gearbox	2
2.2 Torque converter	2
2.3 Gear change point variations for grades	2
2.4 Gearbox breathing - odour	2
2.5 Guided fault finding, vehicle self-diagnosis and testing	2
<b>3 Code letters, engine allocations</b>	<b>3</b>
<b>4 Capacities</b>	<b>4</b>
4.1 Planetary gearbox	4
4.2 Front final drive	4
4.3 Transfer box	4
<b>5 General repair notes</b>	<b>5</b>
5.1 Special tools	5
5.2 Gearbox	5
5.3 Electrical components	6
5.4 Mechatronic unit	6
5.5 Seals and sealing rings	7
5.6 Locking devices	7
5.7 Nuts and bolts	8
5.8 Guided fault finding, vehicle self-diagnosis and testing	8
5.9 Emergency release of selector mechanism	8
<b>32 - Torque converter</b>	<b>9</b>
<b>1 Torque converter</b>	<b>9</b>
1.1 Secure torque converter to prevent it from falling out	9
1.2 Identification of torque converter	10
1.3 Checking torque converter	10
1.4 Draining torque converter	10
1.5 Removing and installing torque converter oil seal	11
1.6 Installing torque converter	12
<b>37 - Controls, housing</b>	<b>13</b>
<b>1 Connecting VAS 5051 and selecting functions</b>	<b>13</b>
<b>2 Repairing selector mechanism</b>	<b>15</b>
2.1 Checking selector mechanism	15
2.2 Removing and installing selector lever handle	16
2.3 Removing and installing selector mechanism	17
2.4 Dismantling and assembling shift mechanism	22
2.5 Checking and adjusting selector lever cable	23
2.6 Adjusting selector lever cable	24
2.7 Removing and installing selector lever cable	26
2.8 Releasing selector lever without electrical current (emergency release)	29
2.9 Renewing oil seal for selector shaft	30
<b>3 Removing and installing gearbox</b>	<b>32</b>
3.1 Removing gearbox	33
3.2 Installing gearbox	36
3.3 Dismantling and assembling left and right gearbox supports	41
3.4 Transporting automatic gearbox	42
<b>4 Checking ATF level and topping up</b>	<b>45</b>



4.1	Checking ATF level	45
4.2	Topping up ATF	48
4.3	Renewing ATF	48
4.4	Filling empty ATF cooler	50
<b>5</b>	<b>Overview - four-wheel drive power train</b>	<b>52</b>
5.1	Position of selector elements	52
<b>6</b>	<b>ATF lines and ATF cooler</b>	<b>54</b>
6.1	Removing and installing ATF pipes	54
6.2	Removing and installing ATF cooler	57
6.3	Removing and installing bracket for ATF cooler	60
6.4	Cleaning ATF lines and ATF cooler	61
<b>38</b>	<b>Gears, control</b>	<b>63</b>
<b>1</b>	<b>Removing and installing oil pan</b>	<b>63</b>
1.1	Removing	63
1.2	Installing	64
<b>2</b>	<b>Removing and installing ATF strainer</b>	<b>65</b>
2.1	Removing	65
2.2	Installing	65
<b>3</b>	<b>Removing and installing mechatronic unit</b>	<b>67</b>
3.1	Removing	67
3.2	Installing	68
<b>4</b>	<b>Removing and installing mechatronic unit wiring harness</b>	<b>70</b>
4.1	Removing	70
4.2	Installing	71
<b>39</b>	<b>Final drive - front differential</b>	<b>72</b>
<b>1</b>	<b>Checking gear oil in front final drive and transfer box</b>	<b>72</b>
<b>2</b>	<b>Renewing oil seals for flange shafts</b>	<b>74</b>
2.1	Renewing left flange shaft oil seal	74
2.2	Renewing oil seal for right flange shaft	76
2.3	Definitions:	78