



Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on 6-speed automatic gearbox 09L, four-wheel drive	2
2.1 Gearbox	2
2.2 Torque converter	2
2.3 Gear change point variations for gradients	2
3 Codes, engine allocations	3
4 Capacities	4
4.1 Planetary gearbox	4
4.2 Front final drive	4
4.3 Transfer box	4
5 General repair notes	5
5.1 Special tools	5
5.2 Gearbox	5
5.3 Electrical components	6
5.4 Mechatronic unit	6
5.5 Seals and sealing rings	7
5.6 Locking devices	7
5.7 Nuts and bolts	8
5.8 Guided fault finding, vehicle self-diagnosis and testing	8
5.9 Emergency release of selector mechanism	8
32 - Torque converter	9
1 Torque converter	9
1.1 Securing torque converter to prevent it from falling out	9
1.2 Identification of torque converter	9
1.3 Checking torque converter	9
1.4 Draining torque converter	10
1.5 Removing and installing torque converter oil seal	10
1.6 Installing torque converter	11
37 - Controls, housing	13
1 Connecting VAS 5051 and selecting functions	13
2	15
3 Repairing selector mechanism	17
3.1 Checking selector mechanism	17
3.2 Removing and installing selector lever handle	18
3.3 Removing and installing selector mechanism	22
3.4 Dismantling and assembling selector mechanism	27
3.5 Checking and adjusting selector lever cable	29
3.6 Checking selector lever cable	29
3.7 Adjusting selector lever cable	29
3.8 Adjusting support bracket on gearbox	30
3.9 Adjusting selector lever to selector cover gate	33
3.10 Adjusting selector lever cable at selector mechanism	33
3.11 Removing and installing selector lever cable	33
3.12 Releasing selector lever without electrical current (emergency release)	37
3.13 Renewing oil seal for selector shaft	38
4 Removing and installing gearbox	40
4.1 Removing and installing gearbox, vehicles with 6 and 8-cylinder engines	40
4.2 Dismantling and assembling left and right gearbox supports	46
4.3 Transporting automatic gearbox	49



4.4	Removing and installing gearbox, vehicles with V6 TDI engine	51
5	Checking ATF level and topping up	64
5.1	Checking ATF level	64
5.2	Topping up ATF	67
5.3	Renewing ATF	67
5.4	Filling empty additional ATF cooler	69
6	Overview - all-wheel drive power train	70
6.1	Position of selector elements	70
7	Removing and installing ATF lines, ATF cooler and additional ATF cooler	72
7.1	Installation position for ATF lines, ATF cooler and additional ATF cooler	72
7.2	Assembly overview	72
7.3	Removing and installing ATF lines from gearbox to ATF cooler	74
7.4	Removing and installing ATF cooler	77
7.5	Removing and installing bracket for ATF cooler	79
7.6	Removing and installing additional ATF cooler	81
7.7	Removing and installing thermostat	82
7.8	Cleaning ATF lines and ATF cooler	83
38 - Gears, control		86
1	Removing and installing sump	86
1.1	Removing	86
1.2	Installing	87
2	Removing and installing ATF strainer	88
2.1	Removing	88
2.2	Installing	88
3	Removing and installing mechatronic unit	90
3.1	Removing	90
3.2	Installing	91
4	Removing and installing mechatronic unit wiring harness	94
4.1	Removing	94
4.2	Installing	95
39 - Final drive - front differential		96
1	Checking oil in front final drive	96
2	Checking gear oil in front transfer box	98
3	Renewing seal for right flange shaft	99
3.1	Removing	99
3.2	Installing	100
3.3	Specified torques	101
4	Renewing left flange with bearing	102
4.1	Removing	102
4.2	Installing	103
4.3	Specified torques	104
5	Definitions:	105