



Contents

00 - Technical data	1
1 Vorsprung durch Technik	1
2 Repair instructions	2
2.1 General repair notes	2
2.2 Special tools	4
3 Rules for cleanliness when working on the automatic gearbox	13
4 Frequently occurring faults	14
4.1 No power transmitted in any gear	14
4.2 Hard jolt during shift; individual gears slipping; shifts take too long	15
4.3 Hard jolt during shift, power transmission problems in 4th and 5th gear	16
4.4 ATF leaking between engine and gearbox	16
4.5 Speed-dependent noise with vehicle moving	17
32 - Torque converter	18
1 Torque converter	18
1.1 Checking torque converter lock-up clutch	18
1.2 Draining torque converter	20
1.3 Checking torque converter	20
37 - Controls, housing	22
1 Securing gearbox to assembly stand	22
2 Dismantling and assembling planetary gearbox	23
2.1 Component overview - planetary gearbox	23
2.2 Dismantling and assembling planetary gearbox	25
3 Dismantling and assembling body "I"	56
3.1 Component overview - body "I"	56
3.2 Dismantling body "I"	57
3.3 Component overview - clutch "F"	58
3.4 Dismantling and assembling clutch "F"	59
3.5 Component overview - clutch "D/G" with freewheel	62
3.6 Dismantling and assembling clutch "D/G" with freewheel	64
3.7 Component overview - planet carrier "III"	73
3.8 Dismantling and assembling planetary drive "III"	75
3.9 Assembling body "I"	75
4 Dismantling and assembling body "II"	77
4.1 Component overview - body "II"	77
4.2 Dismantling body "II"	78
4.3 Component overview - clutch "B"	79
4.4 Dismantling and assembling clutch "B"	80
4.5 Component overview - clutch "A"	84
4.6 Dismantling and assembling clutch "A"	85
4.7 Component overview - clutch "E"	89
4.8 Dismantling and assembling clutch "E"	90
4.9 Assembling body "II"	95
5 Dismantling and assembling clutch "C"	98
5.1 Component overview - clutch "C"	98
5.2 Dismantling and assembling clutch "C"	99
38 - Gears, control	104
1 Dismantling and assembling ATF supply unit	104
1.1 Component overview - ATF supply unit	104
1.2 Removing and installing complete ATF supply unit with gearbox assembled	105



1.3	Removing ATF pump from housing for ATF supply unit and installing	120
1.4	Removing and installing housing for ATF supply unit and stator shaft	124
1.5	Removing and installing stator shaft	128
1.6	Renewing oil seal for ATF pump	129
2	Repair work on installed gearbox	130
2.1	Removing and installing valve body	130
2.2	Removing and installing internal oil pipe	133
2.3	Removing and installing gearbox speed sender G38 or gearbox output speed sender G195	134
2.4	Removing and installing gearbox input speed sender G182 gearboxes with hydraulic control "E17"	135
2.5	Removing and installing gearbox input speed sender G182 gearboxes with hydraulic control "E18/2"	136
2.6	Removing and installing wiring harness in gearbox	137
3	Assessment of wear on gearbox components	139
3.1	Assessment of wear by checking ATF for colour and contamination	139
3.2	Clutch "F"	139
3.3	Clutch "D/G" with freewheel	141
3.4	Planet carrier "III"	144
3.5	Clutch "B"	146
3.6	Clutch "A"	148
3.7	Clutch "E"	150
3.8	Clutch "C"	153
3.9	ATF supply unit	155
39	Final drive - front differential	159
1	Repairing front axle drive and transfer box	159
1.1	Removing and installing transfer box with Torsen differential	159
1.2	Component overview - front axle drive and transfer box	159
1.3	Renewing oil seal on output flange for propshaft	163
1.4	Renewing oil seal in intermediate flange for front axle drive	163
1.5	Renewing oil seal in input pinion	164
1.6	Renewing needle bearing for gear wheel 2	165