



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 General notes	2
2.1 Numbering of cylinders	2
3 Safety information	3
3.1 Safety precautions during work on fuel system	3
3.2 Safety precautions when using testers and measuring instruments during a road test	3
3.3 Safety precautions when working on cooling system	4
3.4 Safety precautions when working on ignition system	4
4 Repair notes	6
4.1 Rules for cleanliness	6
4.2 Foreign objects in engine	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Securing engine on engine and gearbox support	19
1.3 Installing engine	21
13 - Crankshaft group	25
1 Cylinder block (pulley end)	25
1.1 Assembly overview - cylinder block (pulley end)	25
1.2 Removing and installing engine bracket	28
1.3 Removing and installing poly-V belt	30
1.4 Removing and installing sealing flange on pulley end	31
2 Cylinder block, gearbox end	35
2.1 Assembly overview - cylinder block, gearbox end	35
2.2 Renewing crankshaft oil seal (gearbox end)	36
2.3 Removing and installing sealing flange on gearbox side	37
2.4 Removing and installing drive plate	40
2.5 Removing and installing bracket for ancillaries	42
3 Crankshaft	44
3.1 Assembly overview - crankshaft	44
3.2 Removing and installing sender wheel	45
3.3 Allocation of main bearing shells	46
4 Pistons and conrods	51
4.1 Assembly overview - pistons and conrods	51
4.2 Checking pistons and cylinder bores	53
4.3 Removing and installing pistons	54
15 - Cylinder head, valve gear	60
1 Cylinder head	60
1.1 Assembly overview - cylinder head	60
1.2 Assembly overview - vacuum pump	63
1.3 Removing and installing cylinder head	63
1.4 Removing and installing cylinder head cover	71
1.5 Removing and installing vacuum pump	72
1.6 Checking compression	75
2 Cover for timing chain	79
2.1 Assembly overview - cover for timing chain	79
2.2 Installing timing chain cover seals	80



2.3	Assembly overview - valve timing housing, engine code CHNA	81
2.4	Assembly overview - valve timing housing, engine codes CMVA, CPFA	82
3	Chain drive	83
3.1	Assembly overview - camshaft timing chains	83
3.2	Removing and installing camshaft timing chain	85
3.3	Removing and installing chain drive sprocket for high-pressure pump	88
3.4	Removing and installing chain drive for oil pump	89
3.5	Checking valve timing	99
4	Valve gear	102
4.1	Assembly overview - valve gear	102
4.2	Measuring axial play of camshaft	104
4.3	Removing and installing camshaft control valve	105
4.4	Removing and installing camshaft	108
4.5	Camshaft identification	115
4.6	Removing and installing camshaft adjuster	115
4.7	Removing and installing valve stem seal	120
5	Inlet and exhaust valves	123
5.1	Valve dimensions	123
5.2	Checking valve guides	123
5.3	Reworking valve seats	124
17 - Lubrication	126	
1	Sump, oil pump	126
1.1	Assembly overview - sump/oil pump	126
1.2	Removing and installing oil sump	131
1.3	Removing and installing oil pump	133
1.4	Engine oil:	143
2	Oil filter, oil pressure switch	145
2.1	Assembly overview - oil filter housing, oil pressure switch	145
2.2	Checking oil pressure and oil pressure switch	147
3	Oil circuit	150
3.1	Oil spray jets/nozzles	150
19 - Cooling	151	
1	Cooling system/coolant	151
1.1	Connection diagram - coolant hoses	151
1.2	Draining and adding coolant	154
1.3	Checking cooling system for leaks	157
2	Coolant pump, regulation of cooling system	158
2.1	Assembly overview - coolant pump, thermostat	158
2.2	Removing and installing coolant pump	159
2.3	Removing and installing thermostat	160
2.4	Checking thermostat	162
3	Coolant pipes	163
3.1	Assembly overview - coolant pipes	163
4	Radiator, radiator fan	168
4.1	Assembly overview - radiator/radiator fan	168
4.2	Assembly overview - radiator cowl and radiator fan	169
4.3	Removing and installing radiator cowl with radiator fan	169
4.4	Removing and installing radiator fan	171
4.5	Removing and installing radiator	172
24 - Mixture preparation - injection	175	
1	Vacuum system	175



1.1	Checking vacuum system	175
2	Injectors	178
2.1	Assembly overview - fuel rail with injectors	178
2.2	Assembly overview - injectors for cylinders 1, 3 and 5	184
2.3	Assembly overview - injectors for cylinders 2, 4 and 6	185
2.4	Removing and installing injectors	185
2.5	Renewing seals on injectors	188
3	High-pressure pump	193
3.1	Assembly overview - high-pressure pump	193
3.2	Removing and installing high-pressure pump	194
4	Senders and sensors	198
4.1	Checking fuel pressure sender G247	198
5	Lambda probe	201
5.1	Assembly overview - Lambda probe	201
5.2	Removing and installing Lambda probe	201
6	Intake manifold	204
6.1	Assembly overview - intake manifold	204
6.2	Removing and installing intake manifold upper part	206
6.3	Removing and installing lower part of intake manifold with fuel rail	209
7	Air filter	214
7.1	Assembly overview - air filter housing	214
8	Engine (motor) control unit	216
8.1	Removing and installing engine control unit J623	216
26 - Exhaust system	217
1	Exhaust pipes, silencers	217
1.1	Assembly overview - silencers	217
1.2	Aligning exhaust system free of stress	218
1.3	Separating exhaust pipes, silencers	218
1.4	Installation position of clamp	219
2	Exhaust gas cleaning	220
2.1	Assembly overview - emission control	220
2.2	Removing and installing starter catalytic converter	221
3	Exhaust manifold	223
3.1	Assembly overview - exhaust manifold	223
28 - Ignition system	224
1	Ignition system	224
1.1	Assembly overview - ignition system	224
1.2	Removing and installing ignition coils with output stage	226
1.3	Removing and installing Hall sender	228
1.4	Removing and installing engine speed sender G28	229
1.5	Test data, spark plugs	230

