



Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Numbering of cylinders	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Securing engine to assembly stand	11
1.2 Installing engine	12
2 Assembly mountings	16
2.1 Assembly overview - assembly mountings	16
2.2 Supporting engine in installation position	17
2.3 Removing and installing engine mounting	19
2.4 Removing and installing engine bracket or engine mounting	20
13 - Crankshaft group	22
1 Dismantling and assembling engine	22
1.1 Part I: assembly overview - toothed belt drive	23
1.2 Assembly overview - part II, cylinder block	25
1.3 Removing and installing poly-V belt	26
1.4 Checking alignment of poly V-belt	26
2 Assembly overview - sealing flanges and drive plate	28
2.1 Removing and installing sealing flange at drive plate end	30
2.2 Removing and installing drive plate	31
2.3 Renewing crankshaft oil seal, vibration damper end	33
15 - Cylinder head, valve gear	35
1 Assembly overview - cylinder head	35
1.1 Removing and installing cylinder head cover (right side)	37
1.2 Removing and installing left cylinder head cover	39
1.3 Removing, installing and tensioning toothed belt	41
1.4 Removing and installing left cylinder head	47
1.5 Removing and installing right cylinder head	50
1.6 Checking compression	53
2 Assembly overview - valve gear	55
2.1 Camshafts, checking axial clearance	58
2.2 Renewing camshaft oil seals	59
2.3 Renewing Hall sender seals	60
2.4 Removing and installing camshafts and camshaft adjusters - left cylinder head	62
2.5 Removing and installing camshafts and camshaft adjusters - right cylinder head	68
2.6 Removing and installing roller rocker finger	73
2.7 Renewing valve stem seals	74
2.8 Checking valve guides	78
2.9 Reworking valve seats	79
17 - Lubrication	81
1 Removing and installing parts of lubrication system	81
1.1 Engine oil	81
1.2 Checking oil level	82
1.3 Assembly overview - oil filter housing	82
1.4 Removing and installing oil filter housing	83
1.5 Assembly overview - sump	84



1.6	Removing and installing lower part of sump	85
1.7	Removing and installing upper part of sump	87
1.8	Removing and installing oil level and oil temperature sender G266	91
1.9	Assembly overview - dismantling and assembling oil pump	92
1.10	Checking oil pressure and oil pressure switch	95
19	- Cooling	98
1	Removing and installing parts of cooling system	98
1.1	Assembly overview - radiator	98
1.2	Assembly overview - radiator fan	100
1.3	Parts of cooling system, body side	101
1.4	Parts of cooling system - engine side, front	102
1.5	Parts of cooling system - engine side, rear	103
1.6	Parts of cooling system - engine side, right	104
1.7	Coolant hose connection diagram	105
1.8	Draining and adding coolant	106
1.9	Removing and installing fan mounting with fans	109
1.10	Removing and installing radiator fans	110
1.11	Removing and installing radiator	111
1.12	Removing and installing coolant pump and thermostat	113
1.13	Checking cooling system for leaks	115
20	- Fuel supply system	116
1	Removing and installing parts of fuel supply system	116
1.1	Assembly overview - fuel tank with attachments and fuel filter	116
1.2	Assembly overview - right side fuel delivery unit, fuel gauge sender and suction-jet pump	118
1.3	Assembly overview - left side fuel delivery unit, fuel gauge sender and suction-jet pump	120
1.4	Schematic diagram of fuel lines and components in fuel tank	122
1.5	Safety regulations for working on fuel supply	123
1.6	Rules for cleanliness	124
1.7	Emptying fuel tank	124
1.8	Removing and installing fuel delivery unit, fuel gauge sender and suction-jet pump, right side	127
1.9	Removing and installing fuel delivery unit, fuel gauge sender and suction-jet pump, left side	130
1.10	Removing and installing fuel tank with attachments and fuel filter	132
1.11	Checking fuel pumps	135
1.12	Checking electronic power control (EPC)	143
2	Activated charcoal filter system	146
2.1	Assembly overview - parts of activated charcoal filter system	146
2.2	Checking activated charcoal filter system for leaks	148
3	Activated charcoal filter system (vehicles with fuel system diagnostic pump V144)	151
3.1	Assembly overview - parts of activated charcoal filter system	151
24	- Mixture preparation - injection	153
1	Repairing injection system	153
1.1	Assembly overview - intake manifold	153
1.2	Assembly overview - fuel rail with injectors	155
1.3	Assembly overview - air filter	156
1.4	Vacuum hoses on intake manifold	157
1.5	Removing and installing intake air duct to throttle valve module J338	157
1.6	Safety precautions	160
1.7	Rules for cleanliness	161
1.8	Technical data	161



2	Checking components	162
2.1	Checking injectors	162
2.2	Checking fuel pressure regulator and holding pressure	164
3	Engine (motor) control unit	168
3.1	Removing and installing engine control unit	168
3.2	Reading and erasing engine control unit fault memory	168
26	- Exhaust system	170
1	Exhaust manifold, catalytic converters and silencers with mountings	170
1.1	Assembly overview - exhaust manifold with starter catalytic converters and attachments	170
1.2	Removing and installing starter catalytic converter with exhaust pipe	173
1.3	Assembly overview - silencers with mountings	173
2	Lambda probes	176
2.1	Removing and installing Lambda probe G39	176
2.2	Removing and installing Lambda probe after catalytic converter G130	177
2.3	Removing and installing Lambda probe 2 G108 and Lambda probe 2 after catalytic converter G131	178
3	Secondary air system	180
3.1	Assembly overview - parts of secondary air system, vehicle side	180
3.2	Assembly overview - parts of secondary air system, engine side	181
28	- Ignition system	183
1	Repairing ignition system	183
1.1	Assembly overview - parts of ignition system	183
1.2	Safety precautions	184
1.3	Removing and installing ignition coils with output stage	184
1.4	Test data, spark plugs	186

