



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Technical data</b>	<b>1</b>
1.1 Engine number	1
1.2 Engine data	1
<b>10 - Removing and installing engine</b>	<b>3</b>
<b>1 Removing and installing engine</b>	<b>3</b>
1.1 Removing engine	3
1.2 Notes on installing	15
1.3 Specified torques	16
1.4 Front engine mounting	16
<b>13 - Crankshaft group</b>	<b>18</b>
<b>1 Dismantling and assembling engine</b>	<b>18</b>
1.1 Assembly overview - poly V-belt drive	20
1.2 Removing and installing poly V-belt	23
1.3 Renewing crankshaft oil seal - belt pulley end	24
1.4 Removing and installing front sealing flange	26
1.5 Assembly overview - drive plate/dual-mass flywheel	29
1.6 Removing and installing dual-mass flywheel	30
1.7 Extracting and driving in needle roller bearing for dual-mass flywheel	31
1.8 Removing and installing drive plate	32
1.9 Renewing crankshaft oil seal on timing chain end	33
1.10 Assembly overview - timing chain covers	35
1.11 Removing and installing timing chain covers	36
1.12 Assembly overview - balancer shaft	43
1.13 Removing and installing balancer shaft	44
<b>2 Chain drive (engine code BMK)</b>	<b>47</b>
2.1 Assembly overview - drive chain for valve gear	47
2.2 Removing and installing drive chain for valve gear	48
2.3 Assembly overview - chain for balancer shaft and oil pump	49
2.4 Removing and installing chain for balancer shaft and oil pump	51
<b>3 Chain drive (engine codes CARA, CEXA, CEXB)</b>	<b>55</b>
3.1 Assembly overview - drive chain for valve gear	55
3.2 Removing and installing drive chain for valve gear	56
3.3 Assembly overview - chain for balancer shaft and oil pump	57
3.4 Removing and installing chain for balancer shaft and oil pump	59
<b>4 Removing and installing crankshaft</b>	<b>63</b>
4.1 Assembly overview - crankshaft	63
4.2 Crankshaft dimensions	65
4.3 Measuring axial clearance	65
4.4 Measuring radial clearance	66
<b>5 Pistons and conrods</b>	<b>67</b>
5.1 Assembly overview - pistons and conrods	67
5.2 Checking piston projection at TDC	70
5.3 Piston and cylinder dimensions	71
5.4 Checking radial clearance of conrods	71
<b>15 - Cylinder head, valve gear</b>	<b>72</b>
<b>1 Cylinder head</b>	<b>72</b>
1.1 Assembly overview - cylinder head	72
1.2 Assembly overview - cylinder head cover	75



1.3	Removing and installing cylinder head cover	78
1.4	Removing and installing cylinder head	84
1.5	Checking compression	91
1.6	Assembly overview - vacuum pump	93
<b>2</b>	<b>Valve gear</b>	<b>95</b>
2.1	Assembly overview - valve gear	95
2.2	Checking axial clearance of camshafts	96
2.3	Renewing camshaft oil seal	97
2.4	Removing and installing camshafts	100
2.5	Renewing valve stem seals	104
2.6	Checking hydraulic valve compensation elements	108
2.7	Valve dimensions	110
2.8	Checking valve guides	110
<b>3</b>	<b>Chain drive for camshafts</b>	<b>112</b>
3.1	Camshaft timing chains (engine code BMK)	112
3.2	Camshaft timing chains (engine codes CARA, CEXA, CEXB)	131
<b>17</b>	<b>Lubrication</b>	<b>151</b>
<b>1</b>	<b>Engine oil</b>	<b>151</b>
1.1	Oil capacities	151
1.2	Checking engine oil level	151
<b>2</b>	<b>Parts of lubrication system</b>	<b>152</b>
2.1	Assembly overview - oil pump, lower part of sump	152
2.2	Removing and installing lower part of sump	153
2.3	Removing and installing oil pump	155
2.4	Assembly overview - upper part of sump	156
2.5	Removing and installing upper part of sump	157
<b>3</b>	<b>Oil cooler, pressure control valve and oil filter housing</b>	<b>161</b>
3.1	Assembly overview - oil cooler, pressure control valve, and oil filter housing	161
3.2	Removing and installing oil cooler	162
3.3	Removing and installing oil filter housing	163
3.4	Removing and installing pressure control valve for crankcase breather system	164
3.5	Removing and installing mounting plate for oil cooler, pressure control valve and oil filter housing	165
3.6	Removing and installing oil pressure switch F1 / oil pressure switch for reduced oil pressure F378	166
3.7	Checking oil pressure and oil pressure switch	167
<b>19</b>	<b>Cooling</b>	<b>170</b>
<b>1</b>	<b>Parts of cooling system</b>	<b>170</b>
1.1	Assembly overview - radiator	170
1.2	Removing and installing fan support	171
1.3	Assembly overview - fans	172
1.4	Checking cooling system for leaks	173
1.5	Draining and filling coolant	173
1.6	Assembly overview - coolant pump and thermostat	177
1.7	Removing and installing coolant pump	177
1.8	Removing and installing continued coolant circulation pump V51	178
1.9	Removing and installing hose connection with thermostat	179
1.10	Assembly overview - pump for exhaust gas recirculation cooler V400	180
1.11	Removing and installing pump for exhaust gas recirculation cooler V400	181
1.12	Assembly overview - coolant pipes	182
1.13	Removing and installing coolant pipes	185
1.14	Removing and installing coolant temperature sender G62	192
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>194</b>



<b>1</b>	<b>Charge air system with turbocharger</b>	<b>194</b>
1.1	Rules for cleanliness	194
1.2	Assembly overview - turbocharger (engine code BMK)	194
1.3	Removing and installing turbocharger (engine code BMK)	196
1.4	Assembly overview - turbocharger (engine codes CARA, CEXA und CEXB)	198
1.5	Removing and installing turbocharger (engine codes CARA, CEXA und CEXB)	200
1.6	Removing and installing turbocharger 1 control unit J724	204
1.7	Assembly overview - parts of charge air cooling	213
1.8	Removing and installing charge air cooler	214
<b>23</b>	<b>Mixture preparation - injection</b>	<b>216</b>
<b>1</b>	<b>Diesel direct injection system</b>	<b>217</b>
1.1	Safety precautions	218
1.2	Rules for cleanliness and instructions for working on fuel system	218
1.3	Schematic overview of fuel system (engine code BMK)	219
1.4	Schematic overview of fuel system (engine codes CARA, CEXA und CEXB)	221
1.5	Assembly overview - fuel system (engine code BMK)	223
1.6	Assembly overview - fuel system (engine codes CARA, CEXA und CEXB)	225
1.7	Assembly overview - intake manifold	228
1.8	Removing and installing intake manifold upper part	232
1.9	Removing and installing intake manifold flap motor V157 or intake manifold flap 2 motor V275	236
1.10	Removing and installing lower parts of intake manifold (engine code BMK)	243
1.11	Removing and installing lower parts of intake manifold (engine codes CARA, CEXA und CEXB)	249
1.12	Removing and installing injectors (piezo injectors)	253
1.13	Checking fuel pressure regulating valve N276	259
1.14	Removing and installing fuel pressure regulating valve N276	259
1.15	Removing and installing fuel pressure sender G247	261
1.16	Checking return flow rate of injectors (piezo injectors) with engine running	262
1.17	Checking return flow rate of injectors (piezo injectors) at starting speed	265
1.18	Checking for injectors sticking open (piezo injectors).	266
1.19	Installing high-pressure lines	267
1.20	Checking pressure retention valve in fuel return	270
1.21	Assembly overview - toothed belt for high-pressure pump (engine code BMK)	271
1.22	Removing and installing toothed belt for high-pressure pump (engine code BMK)	273
1.23	Assembly overview - high-pressure pump (engine code BMK)	277
1.24	Removing and installing high-pressure pump (engine code BMK)	280
1.25	Assembly overview - toothed belt for high-pressure pump (engine codes CARA, CEXA, CEXB)	283
1.26	Removing and installing toothed belt for high-pressure pump (engine codes CARA, CEXA, CEXB)	284
1.27	Assembly overview - high-pressure pump (engine codes CARA, CEXA und CEXB)	292
1.28	Removing and installing high-pressure pump (engine codes CARA, CEXA und CEXB)	293
1.29	Bleeding fuel system	294
1.30	Assembly overview - air filter	295
<b>2</b>	<b>Engine control unit</b>	<b>298</b>
2.1	Reading and clearing engine control unit fault memory	298
2.2	Adapting functions and components	299
2.3	Removing and installing engine control unit	300
2.4	Fitting locations	300
<b>26</b>	<b>Exhaust system</b>	<b>303</b>
<b>1</b>	<b>Parts of the exhaust system</b>	<b>303</b>
1.1	Assembly overview - exhaust system	303
1.2	Assembly overview - front exhaust pipe and catalytic converter	306



1.3	Assembly overview - exhaust manifold and intermediate pipes .....	307
<b>2</b>	<b>Exhaust gas recirculation system, engine code BMK .....</b>	<b>308</b>
2.1	Assembly overview - exhaust gas recirculation system .....	308
2.2	Checking mechanical exhaust gas recirculation valve .....	309
2.3	Removing and installing mechanical exhaust gas recirculation valve .....	310
2.4	Removing and installing exhaust gas recirculation cooler .....	310
<b>3</b>	<b>Exhaust gas recirculation, engine codes CARA, CEXA, CEXB .....</b>	<b>312</b>
3.1	Assembly overview - exhaust gas recirculation system .....	312
3.2	Removing and installing exhaust gas recirculation control motor V338 .....	313
3.3	Removing and installing exhaust gas recirculation cooler .....	314
3.4	Removing and installing exhaust gas recirculation temperature sensor G98 .....	316
<b>28</b>	<b>- Glow plug system .....</b>	<b>318</b>
<b>1</b>	<b>Glow plug system .....</b>	<b>318</b>
1.1	Glow plug characteristics .....	318
1.2	Removing, installing and checking ceramic glow pin plugs .....	318
1.3	Removing and installing metal glow plugs .....	320
1.4	Checking metal glow plugs .....	321