



Contents

1	Engine list	1
2	Service work	4
2.1	Information about flexible or fixed service	4
2.2	Service tables	7
3	General information	17
3.1	Raising vehicle with lifting platform or trolley jack	17
3.2	Entries in service schedule	19
3.3	Vehicle diagnostic tester	19
3.4	Vehicle identification number	20
3.5	Vehicle data sticker	21
3.6	Severe operating conditions	22
3.7	Countries with hot climate	23
3.8	Country overview for petrol not compliant with EN 228	24
3.9	Country overview for diesel not compliant with EN 590	25
3.10	Engine code and engine number	26
3.11	Countries with high levels of dust	26
3.12	Identification plate	27
3.13	Shortened intervals for spark plug replacement	28
4	Descriptions of work	33
4.1	Removable towing bracket: checking and cleaning if necessary	34
4.2	Swivel joints and suspension link mountings: inspecting	37
4.3	Automatic headlight control and static cornering light: checking function	38
4.4	Front passenger front airbag: checking key switch and "ON/OFF function"	40
4.5	Battery: checking battery terminal clamps for secure seating	41
4.6	Battery: checking with battery tester (always refer to workshop manual)	42
4.7	Status of battery: reading, sending diagnosis protocol online	43
4.8	Tyres: checking condition, wear pattern, tyre pressure and tread depth	43
4.9	Brake and clutch system: change brake fluid	49
4.10	Brake system and shock absorbers: inspecting for leaks and damage	56
4.11	Checking thickness of pads/linings on front and rear brakes and condition of brake discs/ drums	57
4.12	Brake fluid level: Check	60
4.13	Diesel particulate filter: checking	62
4.14	Electric windows: checking positioning (open and close functions)	62
4.15	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	63
4.16	Boots: inspecting	63
4.17	Interior and exterior body: inspecting for corrosion with doors and flaps open	63
4.18	Poly V-belt: renewing	64
4.19	Poly V-belt: checking condition	64
4.20	Cooling system: checking frost protection and coolant level	66
4.21	Diesel fuel filter: renewing	69
4.22	Air filter: cleaning housing and renewing filter element	71
4.23	Multi-purpose additive for diesel fuel: adding	83
4.24	Multi-purpose additive for petrol fuel: adding	85
4.25	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	87
4.26	Engine cover panel "top": removing and installing	88
4.27	Motor compartment cover (noise insulation) "bottom": removing and installing	89
4.28	Engine oil level: checking	89
4.29	Draining or extracting engine oil, renewing oil filter and replenishing engine oil	91
4.30	Engine oil: capacities and specifications	100
4.31	Panoramic sliding sunroof	102
4.32	Road test: performing (driving behaviour, noises, air conditioner etc.)	109



4.33	Wheel securing bolts: tightening to specified torque	110
4.34	Tyre pressure monitoring: performing basic setting	111
4.35	Tyre repair set: Checking	112
4.36	Window wash/wipe system and headlight washer system: checking function	113
4.37	Headlight adjustment: checking gas discharge headlights	119
4.38	Headlight adjustment: checking halogen headlights	123
4.39	Headlight adjustment: checking LED headlights	129
4.40	Headlight adjustment: checking fog lights	133
4.41	Sliding sunroof drains at rear: checking for blockage, cleaning if necessary	136
4.42	Service interval display: Reset	136
4.43	Service interval display: recoding	138
4.44	Track rods: checking clearance, attachment and boots	139
4.45	Dust and pollen filter: cleaning housing and renewing filter element	139
4.46	Transportation mode: switching off	140
4.47	Transportation devices: removing blocking pieces from springs on front axle	141
4.48	Clock and date: setting	142
4.49	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	143
4.50	Toothed belt (petrol engines): renewing	143
4.51	Camshaft drive toothed belt (diesel engines): renewing	144
4.52	Spark plugs: Renew	144
5	Exhaust emissions test	162
5.1	Exhaust emissions test for petrol engines	162
5.2	Exhaust emissions test for diesel engines	164
6	Glossary	167
7	---Change history---	170