



Contents

00 - Technical data	1
1 Evaluating accident vehicles	1
1.1 Checklist for evaluating running gear on accident vehicles	1
2 Safety information	3
2.1 Safety measures when working on vehicles with a start/stop system	3
2.2 Safety precautions when working on subframe	3
3 Repair instructions	4
3.1 Steering rack	4
3.2 Gaskets and seals	4
3.3 Nuts and bolts	4
3.4 Repairing damaged threads in longitudinal member (subframe to body)	4
3.5 Electrical components	5
3.6 Raising suspension to unladen position (vehicles with coil springs)	5
40 - Front suspension	10
1 Front axle	10
1.1 Overview - front axle	10
2 Subframe	11
2.1 Assembly overview - subframe	11
2.2 Fixing position of subframe	13
2.3 Removing and installing subframe without steering rack	15
2.4 Removing and installing subframe with steering rack	17
2.5 Removing and installing anti-roll bar	19
2.6 Renewing anti-roll bar bushes	21
3 Suspension strut, upper suspension link	24
3.1 Assembly overview - suspension strut, upper suspension link	24
3.2 Removing and installing suspension strut	27
3.3 Repairing suspension strut	41
4 Lower suspension link, swivel joint	45
4.1 Removing and installing lower suspension link	45
4.2 Checking swivel joint	50
4.3 Removing and installing swivel joint	50
4.4 Renewing front bonded rubber bush for lower suspension link	53
4.5 Renewing rear bonded rubber bush for lower suspension link	56
5 Wheel bearing	59
5.1 Assembly overview - wheel bearing	59
5.2 Removing and installing wheel bearing housing	60
5.3 Removing and installing wheel bearing unit	62
6 Drive shaft	71
6.1 Overview - drive shaft	71
6.2 Assembly overview - drive shaft	72
6.3 Removing and installing drive shaft	80
6.4 Removing and installing joint body	92
6.5 Removing and installing drive shaft heat shield	96
6.6 Dismantling and assembling drive shaft	96
6.7 Checking outer constant velocity joint	118
6.8 Checking inner constant velocity joint	119
42 - Rear suspension	121
1 Rear axle	121
1.1 Overview - rear axle	121
1.2 Removing and installing rear axle	123



2	Axle beam	127
2.1	Assembly overview - axle beam	127
2.2	Renewing bonded rubber bush for axle beam	131
3	Suspension strut, shock absorber, spring	137
3.1	Assembly overview - suspension strut, shock absorber, spring	137
3.2	Removing and installing shock absorbers	139
3.3	Repairing shock absorber	142
3.4	Removing and installing spring	146
4	Wheel bearing assembly, trailing arm	149
4.1	Assembly overview - wheel bearing	149
4.2	Removing and installing wheel bearing unit	151
43	- Self-levelling suspension	155
1	Electronically controlled damping system	155
1.1	Assembly overview - electronically controlled damping system	155
1.2	Removing and installing electronically controlled damping control unit J250	155
2	Vehicle level sender	157
2.1	Assembly overview - rear vehicle level senders	157
2.2	Removing and installing rear vehicle level senders G76 / G77	157
44	- Wheels, tyres, vehicle geometry	159
1	Wheels, tyres	159
1.1	Pressing tyre off wheel rim	159
1.2	Removing tyre from wheel	159
1.3	Mounting tyre	160
1.4	Wheel change	160
1.5	Specified torques for wheel bolts	164
1.6	Tyre sealant	164
1.7	Tyre sealant disposal	164
1.8	Models with breakdown set	164
2	Tyre pressure monitoring system	165
2.1	System description - tyre pressure monitoring system	165
3	Wheel alignment	167
3.1	Notes for wheel alignment	167
3.2	Conditions for testing	167
3.3	Test preparations	168
3.4	Specifications for wheel alignment	170
3.5	Wheel alignment procedure	172
3.6	Necessity of wheel alignment	173
3.7	Vehicle data sticker	174
3.8	Adjusting camber at front wheels	174
3.9	Adjusting camber on rear axle	175
3.10	Adjusting toe at rear axle	176
3.11	Adjusting front axle toe	176
3.12	Checking maximum wheel lock	176
4	Vibration due to wheels/tyres - causes and rectification	178
4.1	Causes of rough running	178
4.2	Conducting a road test before balancing wheels	178
4.3	Balancing wheel	179
4.4	Vibration control system	183
4.5	Checking radial and lateral runout of wheels and tyres	183
4.6	Checking radial and lateral run-out on wheel rim	184
4.7	Matching wheels and tyres	185
4.8	Determining flat spots on tyres	186



5	Adaptive cruise control	188
5.1	Calibrating adaptive cruise control	188
48 - Steering		194
1	Steering wheel	194
1.1	Assembly overview - steering wheel	194
1.2	Removing and installing steering wheel	194
2	Steering column	197
2.1	Assembly overview - steering column	197
2.2	Removing and installing steering column	198
2.3	Handling and transporting steering column	207
2.4	Removing and installing intermediate steering shaft	209
2.5	Repairing steering column	210
2.6	Removing and installing power steering control unit J500	211
3	Steering rack	221
3.1	Assembly overview - steering rack	221
3.2	Removing and installing steering rack	222
3.3	Repairing steering rack	225
3.4	Removing and installing track rod	227
3.5	Removing and installing track rod ball joint	230
3.6	Adjusting steering rack	231
4	Sensors	232
4.1	Removing and installing steering angle sender G85	232