



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Operation and safety notes for gas discharge lamps	2
2 Repair notes	4
2.1 Contact corrosion	4
2.2 Routing and attachment of lines	4
3 Battery	5
3.1 Types of battery	5
3.2 Battery - general notes	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Assembly overview - battery	6
1.2 Assembly overview - battery isolator	9
1.3 Removing and installing battery	10
1.4 Disconnecting and connecting battery	15
1.5 Removing and installing battery tray	18
1.6 Checking battery	21
1.7 Charging battery	21
1.8 Removing and installing earth wire with battery monitor control unit J367	22
1.9 Removing and installing battery isolator	23
1.10 Adapting battery monitor control unit J367	24
2 Jump start point	25
2.1 Assembly overview - jump-start terminal	25
2.2 Removing and installing jump starting point	25
3 Alternator	27
3.1 Assembly overview - alternator	27
3.2 Removing and installing alternator	30
3.3 Checking alternator	42
3.4 Checking poly V-belt	42
3.5 Removing and installing poly V-belt pulley	42
3.6 Removing and installing voltage regulator C1	50
4 Starter motor	55
4.1 Assembly overview - starter	55
4.2 Removing and installing starter	62
4.3 Checking starter	70
5 Cruise control system (CCS)	71
6 Start/stop system	72
6.1 General description - start/stop system	72
7 Adaptive cruise control	73
7.1 Overview of fitting locations - adaptive cruise control	73
7.2 Removing and installing adaptive cruise control unit J428	74
7.3 Removing and installing trim for radar sensor	77
7.4 Calibrating adaptive cruise control	77
90 - Gauges, instruments	79
1 Dash panel insert	79
1.1 Assembly overview - dash panel insert	79
1.2 Removing and installing dash panel insert KX2	79



2	Horn	82
2.1	Assembly overview - horn	82
2.2	Removing and installing treble horn H2 and bass horn H7	83
92	Windscreen wash/wipe system	85
1	Windscreen wiper system	85
1.1	Assembly overview - windscreen wiper system	85
1.2	Moving wipers to service position	86
1.3	Removing and installing wiper blade	87
1.4	Removing and installing wiper arms	88
1.5	Adjusting wiper arms	89
1.6	Removing and installing wiper motor V	90
1.7	Renewing wiper motor	92
1.8	Removing and installing rain and light sensor	94
2	Windscreen washer system	97
2.1	Assembly overview - windscreen washer system	97
2.2	Removing and installing washer fluid reservoir	98
2.3	Removing and installing windscreen washer fluid level sender G33	100
2.4	Removing and installing windscreen and rear window washer pump V59	101
2.5	Removing and installing washer jets	101
2.6	Adjusting spray jets	102
3	Rear window wiper system	103
3.1	Assembly overview - rear window wiper system	103
3.2	Removing and installing wiper blade	104
3.3	Removing and installing wiper arm	104
3.4	Adjusting wiper arm	105
3.5	Removing and installing rear window wiper motor V12	106
4	Rear window washer system	108
4.1	Assembly overview - rear window washer system	108
4.2	Removing and installing washer fluid reservoir	109
4.3	Removing and installing rear window washer pump	109
4.4	Removing and installing spray jet	109
4.5	Adjusting spray jet	110
5	Headlight washer system	111
5.1	Assembly overview - headlight washer system	111
5.2	Removing and installing washer fluid reservoir	112
5.3	Removing and installing headlight washer system pump V11	112
5.4	Removing and installing washer jets	113
5.5	Adjusting spray jets	113
5.6	Removing and installing pop-up cylinder	113
6	Washer fluid lines	116
6.1	Repairing washer fluid lines	116
94	Lights, bulbs, switches - exterior	117
1	Headlights	118
1.1	Assembly overview - headlight	118
1.2	Removing and installing headlight	125
1.3	Adjusting headlights	127
1.4	Adjusting headlight installation position	127
1.5	Removing and installing front turn signal bulb M5 / M7	128
1.6	Installing repair kit for headlight housing	133
1.7	Converting headlights from driving on right to driving on left	134
1.8	Converting headlights from driving on left to driving on right	139
1.9	Removing and installing headlight range control motor V48 / V49	144
1.10	Removing and installing headlight dipped beam bulb M29 / M31	152



1.11	Removing and installing headlight main beam bulb M30 / M32	156
1.12	Removing and installing gas discharge bulb L13 / L14	161
1.13	Removing and installing side light bulb M1 / M3	162
1.14	Removing and installing daytime running light bulb L174 / L175	166
1.15	Removing and installing headlight screen adjustment solenoid N395 / N396	166
1.16	Removing and installing bulbs for cornering light M51 / M52	167
1.17	Removing and installing headlight starter for gas discharge light J426 / J427	168
1.18	Removing and installing LED modules for daytime running light and side light L176 / L177	169
1.19	Removing and installing starter unit for gas discharge bulb	169
1.20	Removing and installing output module 1 for LED headlight A27 / A31	170
1.21	Removing and installing control unit for daytime running light and side light J860 / J861	171
2	Fog lights	172
2.1	Assembly overview - fog lights	172
2.2	Removing and installing fog light	174
2.3	Removing and installing fog light bulb L22 / L23	179
2.4	Adjusting fog lights	180
3	Daytime running light	181
3.1	Assembly overview - daytime running lights	181
3.2	Removing and installing daytime running light bulb L174 / L175	182
4	Lights in exterior mirror	184
4.1	Assembly overview - lights in exterior mirror	184
4.2	Removing and installing turn signal	185
4.3	Removing and installing turn signal repeater bulb L131 / L132	185
5	Tail lights	186
5.1	Assembly overview - tail lights in body	186
5.2	Removing and installing bulb carrier	186
5.3	Removing and installing tail light cluster	187
6	High-level brake light	189
6.1	Assembly overview - high-level brake light	189
6.2	Removing and installing high-level brake light	190
6.3	Removing and installing bulb for high-level brake light M25	192
7	Number plate light	193
7.1	Removing and installing number plate light X4 / X5	193
7.2	Removing and installing bulb for number plate light X4 / X5	194
8	Steering column switch module	195
8.1	Assembly overview - steering column switch module	195
8.2	Removing and installing airbag coil connector and return ring with slip ring F138	196
8.3	Removing and installing steering column combination switch E595	198
8.4	Removing and installing turn signal switch E2	200
8.5	Removing and installing cruise control system switch E45	200
8.6	Removing and installing intermittent wiper switch E22	201
8.7	Removing and installing ignition/starter switch D	201
8.8	Removing and installing lock cylinder	202
8.9	Removing and installing steering lock housing	204
8.10	Removing and installing ignition key withdrawal lock solenoid N376	206
9	Parking aid	207
9.1	Assembly overview – parking aid	207
9.2	Removing and installing parking aid control unit J446	208
9.3	Removing and installing front parking aid warning buzzer H22	209
9.4	Removing and installing rear parking aid warning buzzer H15	209
9.5	Removing and installing front parking aid senders	210
9.6	Removing and installing rear parking aid senders	211
10	Automatic headlight range control	213



10.1	Assembly overview - automatic headlight range control	213
10.2	Removing and installing headlight range control unit J431	213
11	Towing bracket	215
11.1	Assembly overview - towing bracket socket	215
11.2	Removing and installing trailer detector control unit J345	215
96	Lights, bulbs, switches - interior	217
1	Lights	217
1.1	Overview of fitting locations - lights in dash panel	217
1.2	Overview of fitting locations - lights in front doors	219
1.3	Overview of fitting locations - lights in centre console	220
1.4	Overview of fitting locations - lights in luggage compartment	221
1.5	Overview of fitting locations - lights in roof trim	222
1.6	Removing and installing footwell light W9 / W10	222
1.7	Removing and installing footwell light bulb W9 / W10	223
1.8	Removing and installing Central locking SAFELOCK function warning lamp K133	224
1.9	Removing and installing selector lever position display Y6	225
1.10	Removing and installing right luggage compartment light W35	225
1.11	Removing and installing bulb for right luggage compartment light W35	226
1.12	Removing and installing illuminated vanity mirror W20 / W14	227
1.13	Removing and installing bulb for illuminated vanity mirror W20 / W14	228
1.14	Removing and installing front interior light WX1	229
1.15	Removing and installing bulb for front interior light W13 / W15 / W19	232
1.16	Removing and installing rear interior light WX2	235
1.17	Removing and installing bulb for rear centre reading light W44	236
2	Controls	239
2.1	Overview of fitting locations - controls in dash panel	240
2.2	Overview of fitting locations - controls in front doors	241
2.3	Overview of fitting locations - controls in rear doors	242
2.4	Overview of fitting locations - controls in luggage compartment	243
2.5	Overview of fitting locations - controls in roof trim	244
2.6	Removing and installing rotary light switch EX1	244
2.7	Removing and installing regulator for switch and instrument illumination E20	245
2.8	Removing and installing headlight range control regulator E102	246
2.9	Removing and installing heated seat regulator E94 / E95	246
2.10	Removing and installing TCS and ESP button E256	247
2.11	Removing and installing Start/Stop operation button E693	247
2.12	Heated rear window button E230	247
2.13	Removing and installing hazard warning light button E229	248
2.14	Removing and installing front passenger side airbag deactivated warning lamp K145	248
2.15	Removing and installing parking aid button E266	248
2.16	Removing and installing driving mode selection button E735	249
2.17	Removing and installing buttons in dash panel	249
2.18	Removing and installing operating unit for window regulator in driver door E512	251
2.19	Removing and installing window regulator switch in front passenger door E107	252
2.20	Removing and installing mirror adjustment switch E43	252
2.21	Removing and installing driver side interior locking button for central locking system E308	253
2.22	Removing and installing door contact switch F2 / F3	253
2.23	Removing and installing rear door contact switches F10 / F11	254
2.24	Removing and installing rear lid contact switch for anti-theft alarm F123	254
2.25	Removing and installing rear window regulator switch in door E52 / E54	254
2.26	Removing and installing vanity mirror contact switch F147 / F148	255
3	Further lights and controls in vehicle interior	256
3.1	Overview of fitting locations - further lights and controls in vehicle interior	256
3.2	Removing and installing sunroof button E325	256



3.3	Removing and installing tyre pressure monitor display button E492	257
4	Anti-theft alarm	258
4.1	Assembly overview - interior monitor	258
4.2	Removing and installing alarm horn H12	258
4.3	Activating and deactivating anti-theft alarm	260
4.4	Removing and installing anti-theft alarm sensor G578	260
4.5	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	261
5	Immobiliser	263
5.1	Removing and installing immobilizer control unit J362	263
5.2	Removing and installing immobiliser reader coil D2	263
6	Cigarette lighter, socket	264
6.1	Removing and installing cigarette lighter U1	264
6.2	Removing and installing 12 V socket	264
97 - Wiring		265
1	Relay carriers, fuse holders, electronics boxes	265
1.1	Overview of fitting locations - relay carriers, fuse holders, E-boxes	265
1.2	Removing and installing electronics box (E-box)	267
1.3	Removing and installing bracket for electronics box	270
1.4	Removing and installing fuse holder C SC	272
1.5	Removing and installing relay and fuse carrier 1 SR1	274
2	Control units	277
2.1	Overview of fitting locations - control units	277
2.2	Removing and installing onboard supply control unit J519	278
2.3	Removing and installing data bus diagnostic interface J533	279
3	Connectors	280
3.1	Repairing electrical wiring harnesses and plug-in connections	280
4	Releasing and dismantling connector housings	281
5	Repairing aerial wires	282
6	Fibre optic cables	283
7	Vehicle diagnosis, testing and information systems	284
8	Driving sound and engine sound	285
8.1	Overview of fitting locations - driving sound and engine sound	285
8.2	Removing and installing engine sound generator control unit J943	286