



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Repair instructions</b> .....	<b>1</b>
1.1 General repair instructions .....	1
1.2 Notes on repair of CAN bus wiring .....	1
1.3 Transmitting power and aerial fitting locations .....	1
<b>91 - Communication</b> .....	<b>3</b>
<b>1 Infotainment system</b> .....	<b>4</b>
1.1 Layout - infotainment system .....	4
1.2 Overview of fitting locations - infotainment system .....	7
1.3 Removing and installing infotainment system display .....	8
1.4 Removing and installing control unit for front display and information control panel J685 .....	10
1.5 Removing and installing information electronics control unit 1 J794 .....	11
<b>2 Sound system</b> .....	<b>13</b>
2.1 Overview of fitting locations – sound system .....	13
2.2 Removing and installing front treble loudspeakers R20 / R22 .....	13
2.3 Removing and installing rear bass loudspeakers R15 / R17 .....	14
2.4 Removing and installing front bass loudspeakers R21 / R23 .....	16
<b>3 Aerial systems</b> .....	<b>18</b>
3.1 Overview of fitting locations - aerial systems .....	18
3.2 Removing and installing aerial module .....	18
3.3 Removing and installing roof aerial .....	20
3.4 Removing and installing radio aerial 2 R93 / TV aerial 2 R56 .....	21
<b>4 Radio</b> .....	<b>22</b>
4.1 Overview - Radio .....	22
4.2 Removing and installing radio .....	22
<b>5 Telephone system</b> .....	<b>23</b>
5.1 Mobile telephone preparation .....	23
5.2 Overview of fitting locations - telephone system .....	24
5.3 Removing and installing aerial amplifier for mobile telephone R86 .....	25
5.4 Removing and installing telephone microphone R38 .....	26
<b>6 Multifunction steering wheel</b> .....	<b>27</b>
6.1 Components of multifunction steering wheel .....	27
6.2 Overview - multifunction steering wheel .....	27
6.3 Removing and installing steering wheel multifunction buttons E441 / E440 .....	28
6.4 Removing and installing Tiptronic switch in steering wheel E439 / E438 .....	31
<b>7 Connection for external multimedia devices</b> .....	<b>33</b>
7.1 Overview of fitting locations – connection for external multimedia devices .....	33
7.2 Removing and installing connection for external multimedia devices .....	34
7.3 Removing and installing interface for external multimedia devices R215 .....	35
<b>8 Reversing camera system</b> .....	<b>37</b>
8.1 Components of reversing camera system .....	37
8.2 Overview of fitting locations - reversing camera system .....	37
8.3 Removing and installing reversing camera R189 .....	38