



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety measures when working with pyrotechnic components .....	2
1.2 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components) .....	3
1.3 Additional safety regulations for belt tensioners .....	4
1.4 Additional safety regulations for driver airbag and front passenger airbag .....	4
1.5 Additional safety instructions for curtain airbag .....	5
1.6 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident .....	5
1.7 Accident without airbag triggering .....	5
1.8 Checking seat belts .....	5
1.9 Checking belt webbing .....	6
1.10 Checking inertia reel (locking mechanism) .....	7
1.11 Visually inspecting belt buckle .....	7
1.12 Checking operation of belt buckle .....	7
1.13 Checking belt guide fittings and latch plates .....	8
1.14 Checking securing parts and anchorage points after an accident .....	8
1.15 Checking child seat anchors after an accident .....	8
<b>68 - Interior equipment</b> .....	<b>9</b>
<b>1 Compartments/covers</b> .....	<b>9</b>
1.1 Removing and installing fuse box cover .....	9
1.2 Removing and installing upper steering column trim .....	9
1.3 Removing and installing lower steering column trim .....	10
1.4 Removing and installing glove compartment .....	11
<b>2 Equipment</b> .....	<b>13</b>
2.1 Removing and installing sun visor .....	13
2.2 Removing and installing roof grab handle .....	15
<b>3 Centre console</b> .....	<b>17</b>
3.1 Removing and installing drinks holder .....	17
3.2 Removing and installing parking brake cover cap .....	18
3.3 Removing and installing trim for operating and display unit .....	19
3.4 Removing and installing cover for centre console .....	21
3.5 Removing and installing centre console .....	22
3.6 Removing and installing centre console bracket .....	28
<b>4 Front centre armrest</b> .....	<b>30</b>
4.1 Removing and installing front centre armrest .....	30
<b>5 Interior mirror</b> .....	<b>31</b>
5.1 Removing and installing interior mirror .....	31
5.2 Removing and installing retaining plate .....	33
<b>69 - Passenger protection</b> .....	<b>36</b>
<b>1 Seat belts</b> .....	<b>36</b>
1.1 Removing and installing front 3-point seat belt .....	36
1.2 Removing and installing rear three-point seat belt .....	41
1.3 Removing and installing front belt end anchor .....	44
1.4 Removing and installing belt height adjustment .....	46
1.5 Removing and installing front belt buckle .....	48
1.6 Removing and installing rear belt buckle .....	50
<b>2 Airbag control unit</b> .....	<b>52</b>
2.1 Removing and installing airbag control unit J234 .....	52



<b>3</b>	<b>Driver side airbag</b> .....	<b>54</b>
3.1	Assembly overview - driver side airbag .....	54
3.2	Removing and installing airbag unit with igniter .....	55
3.3	Removing and installing return spring with slip ring (coil connector) .....	62
<b>4</b>	<b>Front passenger side airbag</b> .....	<b>64</b>
4.1	Removing and installing front passenger side airbag unit with igniter .....	64
<b>5</b>	<b>Side airbags</b> .....	<b>69</b>
5.1	Removing and installing front side airbag with igniter .....	69
<b>6</b>	<b>Curtain airbags</b> .....	<b>73</b>
6.1	Removing and installing curtain airbag with igniter .....	73
<b>7</b>	<b>Airbag crash sensors</b> .....	<b>76</b>
7.1	Removing and installing side airbag crash sensor on driver side G179 / side airbag crash sensor on front passenger side G180 .....	76
7.2	Removing and installing rear side airbag crash sensor on driver side G256 / rear side airbag crash sensor on front passenger side G257 .....	81
<b>8</b>	<b>Seat belt verification</b> .....	<b>83</b>
8.1	Removing and installing seat occupied sensor, front passenger side G128 .....	83
<b>70 - Trim, insulation</b> .....		<b>86</b>
<b>1</b>	<b>Front door trims</b> .....	<b>86</b>
1.1	Removing and installing door trim at front .....	86
1.2	Removing and installing mirror cover trim .....	95
<b>2</b>	<b>Rear door trims</b> .....	<b>98</b>
2.1	Removing and installing rear door trim .....	98
<b>3</b>	<b>Dash panel</b> .....	<b>103</b>
3.1	Removing and installing mounting frame for radio/navigation system .....	103
3.2	Removing and installing centre dash panel compartment .....	103
3.3	Removing and installing mounting for storage compartment in centre dash panel .....	105
3.4	Removing and installing dash panel end cover .....	107
3.5	Removing and installing dash panel .....	108
<b>4</b>	<b>Dash panel central tube</b> .....	<b>115</b>
4.1	Removing and installing dash panel central tube .....	115
<b>5</b>	<b>Interior trims</b> .....	<b>123</b>
5.1	Removing and installing sill panel moulding .....	123
5.2	Removing and installing A-pillar trim .....	125
5.3	Detaching and attaching B-pillar trim .....	129
5.4	Removing and installing B-pillar trim .....	131
5.5	Releasing and securing C-pillar trim .....	136
5.6	Removing and installing C-pillar trim .....	139
5.7	Removing and installing side trim panel .....	143
5.8	Removing and installing wheel housing trims .....	145
<b>6</b>	<b>Luggage compartment trims</b> .....	<b>148</b>
6.1	Removing and installing lower rear lid trim .....	148
6.2	Removing and installing luggage compartment floor .....	149
6.3	Removing and installing lock carrier trim .....	150
6.4	Removing and installing rear shelf support .....	151
6.5	Removing and installing support for variable luggage compartment floor .....	153
6.6	Removing and installing luggage compartment side trim .....	154
<b>7</b>	<b>Roof trims</b> .....	<b>156</b>
7.1	Removing and installing roof end strip .....	156
7.2	Removing and installing moulded headliner .....	156
7.3	Mounting roof reinforcement on body .....	163
<b>72 - Seat frames</b> .....		<b>167</b>



<b>1</b>	<b>Front seats</b> .....	<b>167</b>
1.1	Removing and installing front seat .....	167
1.2	Removing and installing seat trim on tunnel side .....	171
1.3	Removing and installing seat trim on sill side .....	172
1.4	Removing and installing seat height adjustment operating lever .....	177
1.5	Removing and installing lumbar support adjustment .....	178
1.6	Removing and installing mounting for drawer .....	179
1.7	Removing and installing front backrest .....	181
1.8	Removing and installing head restraint guide .....	184
<b>2</b>	<b>Rear seats</b> .....	<b>186</b>
2.1	Removing and installing bench seat / individual seats .....	186
2.2	Removing and installing rear seat backrest .....	186
2.3	Removing and installing head restraint guide .....	189
2.4	Removing and installing locking mechanism for rear seat backrest .....	190
<b>74</b>	<b>Seat - padding, covers</b> .....	<b>193</b>
<b>1</b>	<b>Front seat covers and padding</b> .....	<b>193</b>
1.1	Removing and installing seat cover and seat cushion for seat pan .....	193
1.2	Removing and installing backrest cover and cushion .....	196
<b>2</b>	<b>Rear seat covers and padding</b> .....	<b>198</b>
2.1	Removing and installing bench seat cover and padding .....	198
2.2	Removing and installing rear seat backrest cover and padding .....	201