



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Basic instructions</b>	<b>1</b>
<b>2 Vehicle identification data</b>	<b>2</b>
2.1 Vehicle identification number	2
2.2 Type plate	3
2.3 Vehicle data sticker	4
<b>3 Safety information</b>	<b>5</b>
<b>4 Moulded foam inserts</b>	<b>6</b>
<b>5 Galvanized body parts, high- and higher-strength and hot-formed body panels</b>	<b>8</b>
5.1 Installing	8
5.2 2-door models	10
5.3 4-door models	13
<b>6 Laser welding</b>	<b>16</b>
<b>7 Body panel gaps/shut lines</b>	<b>17</b>
7.1 Body - front	17
7.2 Body - centre	18
7.3 Body - rear	20
<b>8 Body dimensions</b>	<b>21</b>
8.1 Body - front	21
8.2 Body - centre	24
8.3 Body - rear	34
8.4 Floor panel - front	37
8.5 Floor panel - centre	39
8.6 Floor panel - rear	40
<b>9 Tools</b>	<b>41</b>
<b>10 Alignment jig</b>	<b>42</b>
10.1 Overview	42
<b>11 Portal gauge</b>	<b>43</b>
11.1 2-door models	43
11.2 4-door models	44
<b>50 - Body - front</b>	<b>46</b>
<b>1 Renewing right engine mounting bracket</b>	<b>46</b>
1.1 Tools	46
1.2 Removing	46
1.3 Installing	48
<b>2 Renewing mounting bracket for subframe</b>	<b>50</b>
2.1 Tools	50
2.2 Removing	50
2.3 Installing	51
<b>3 Renewing front bumper bracket</b>	<b>54</b>
3.1 Tools	55
3.2 Removing	55
3.3 Installing	56
<b>4 Renewing upper wheel housing longitudinal member</b>	<b>58</b>
4.1 Tools	59
4.2 Removing	59
4.3 Installing	61
<b>5 Renewing front wheel housing</b>	<b>66</b>
5.1 Tools	67



5.2	Removing	67
5.3	Installing	68
<b>6</b>	<b>Repairing threads for securing subframe</b>	<b>70</b>
6.1	Contents of thread repair kit	72
6.2	Repairing threads	72
<b>7</b>	<b>Renewing front left longitudinal member</b>	<b>76</b>
7.1	Tools	77
7.2	Removing	77
7.3	Installing	79
<b>8</b>	<b>Renewing front left longitudinal member - part section</b>	<b>83</b>
8.1	Tools	84
8.2	Removing	84
8.3	Installing	85
<b>9</b>	<b>Renewing front right longitudinal member</b>	<b>88</b>
9.1	Tools	89
9.2	Removing	89
9.3	Installing	91
<b>10</b>	<b>Renewing front right longitudinal member - part section</b>	<b>96</b>
10.1	Tools	97
10.2	Removing	97
10.3	Installing	98
<b>51 - Body - centre</b>		<b>101</b>
<b>1</b>	<b>Renewing roof</b>	<b>101</b>
1.1	Tools	102
1.2	Removing	103
1.3	Installing	106
<b>2</b>	<b>Renewing front cross member for roof</b>	<b>117</b>
2.1	Tools	117
2.2	Removing	117
2.3	Installing	119
<b>3</b>	<b>Renewing roof reinforcement</b>	<b>121</b>
3.1	Tools	121
3.2	Removing	121
3.3	Installing	123
<b>4</b>	<b>Renewing rear roof cross member</b>	<b>126</b>
4.1	Tools	126
4.2	Removing	126
4.3	Installing	128
<b>5</b>	<b>Renewing A-pillar</b>	<b>131</b>
5.1	Tools	132
5.2	Removing	132
5.3	Installing	134
<b>6</b>	<b>Renewing A-pillar reinforcement</b>	<b>142</b>
6.1	Tools	143
6.2	Removing	143
6.3	Installing	146
<b>7</b>	<b>Renewing B-pillar - 4-door</b>	<b>152</b>
7.1	Tools	153
7.2	Removing	154
7.3	Installing	155
<b>8</b>	<b>Renewing B-pillar reinforcement - 4-door</b>	<b>160</b>
8.1	Tools	161
8.2	Removing	161



8.3	Installing .....	163
<b>9</b>	<b>Renewing B-pillar reinforcement, 4-door model, part section .....</b>	<b>169</b>
9.1	Tools .....	170
9.2	Removing .....	170
9.3	Installing .....	174
<b>10</b>	<b>Renewing B-pillar reinforcement - 2-door .....</b>	<b>182</b>
10.1	Tools .....	183
10.2	Removing .....	183
10.3	Installing .....	185
<b>11</b>	<b>Renewing outer side member - 4-door .....</b>	<b>197</b>
11.1	Tools .....	198
11.2	Removing .....	198
11.3	Installing .....	200
<b>12</b>	<b>Renewing outer side member - 2-door .....</b>	<b>209</b>
12.1	Tools .....	210
12.2	Removing .....	211
12.3	Installing .....	212
<b>13</b>	<b>Renewing gusset plate .....</b>	<b>218</b>
13.1	Tools .....	218
13.2	Removing .....	218
13.3	Installing .....	219
<b>14</b>	<b>Renewing seat cross member .....</b>	<b>222</b>
14.1	Tools .....	222
14.2	Removing .....	222
14.3	Installing .....	224
<b>53 - Body - rear .....</b>		<b>227</b>
<b>1</b>	<b>Renewing rear cross panel .....</b>	<b>227</b>
1.1	Tools .....	228
1.2	Removing .....	228
1.3	Installing .....	229
<b>2</b>	<b>Renewing tail light mounting .....</b>	<b>232</b>
2.1	Tools .....	233
2.2	Removing .....	233
2.3	Installing .....	234
<b>3</b>	<b>Renewing cross panel member .....</b>	<b>237</b>
3.1	Tools .....	238
3.2	Removing .....	238
3.3	Installing .....	239
<b>4</b>	<b>Renewing luggage compartment floor .....</b>	<b>242</b>
4.1	Tools .....	243
4.2	Removing .....	243
4.3	Installing .....	244
<b>5</b>	<b>Renewing rear longitudinal member - part section .....</b>	<b>247</b>
5.1	Tools .....	248
5.2	Removing .....	248
5.3	Installing .....	250
<b>6</b>	<b>Renewing side panel, part section – 4-door .....</b>	<b>253</b>
6.1	Tools .....	254
6.2	Removing .....	254
6.3	Installing .....	256
<b>7</b>	<b>Renewing side panel - 2-door .....</b>	<b>264</b>
7.1	Tools .....	265
7.2	Removing .....	265



7.3	Installing .....	267
<b>8</b>	<b>Renewing outer wheel housing liner - part section .....</b>	<b>276</b>
8.1	Tools .....	277
8.2	Removing .....	278
8.3	Installing .....	279