



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety precautions when handling refrigerants	1
1.3 Safety measures when working on vehicles with a start/stop system	2
1.4 Safety precautions when working on the cooling system	2
2 General information	3
2.1 Notes concerning odours in air conditioned vehicles	3
2.2 Notes for vehicles with a start/stop system	3
2.3 Type plates	4
3 Repair instructions	6
3.1 Working on refrigerant circuit	6
3.2 General repair instructions	6
3.3 Refrigerant circuit seals	6
4 Technical data	8
4.1 Refrigerant capacity	8
4.2 Refrigerant oil capacities	8
4.3 Oil distribution	9
80 - Heating	10
1 Overview of fitting locations - heating	10
1.1 Overview of fitting locations - components not located in passenger compartment	10
1.2 Overview of fitting locations - components located in front section of passenger compartment	12
2 Heater	15
2.1 Assembly overview – heater unit	15
2.2 Removing and installing fresh air blower V2	17
2.3 Removing and installing fresh air blower series resistor with overheating fuse N24	17
2.4 Removing and installing dust and pollen filter	17
2.5 Removing and installing heat exchanger	17
2.6 Removing and installing heater unit	17
2.7 Dismantling and assembling heater unit	17
2.8 Checking auxiliary air heater element Z35	19
2.9 Removing and installing auxiliary air heater element Z35	19
2.10 Removing and installing flexible shafts	19
3 Control motors	20
3.1 Overview of fitting locations - front control motors	20
3.2 Removing and installing air distribution flap actuator	21
3.3 Removing and installing temperature flap actuator	23
3.4 Removing and installing fresh air and air recirculation flap control motor V154	26
4 Air duct	27
4.1 Assembly overview - air duct and air distribution in passenger compartment	27
4.2 Removing and installing centre vent at front	27
4.3 Removing and installing right or left vent	27
4.4 Removing and installing driver side footwell vents	27
4.5 Removing and installing front passenger side footwell vents	27
4.6 Removing and installing rear air duct	27
4.7 Checking forced ventilation for passenger compartment	27
4.8 Removing and installing forced ventilation for passenger compartment	28
4.9 Removing and installing fresh air intake	28
4.10 Removing and installing air duct for defroster vent	28
4.11 Removing and installing air duct for centre vent	28



5	Operating and display unit	29
5.1	Overview of fitting locations - operating and display unit	29
5.2	Removing and installing operating and display unit	29
5.3	Pin assignment for multi-pin connectors on back of operating and display unit, heated and fresh air	30
6	Other controlling and regulating components	31
6.1	Removing and installing ambient temperature sensor G17	31
87	Air conditioning system	32
1	Overview of fitting locations - air conditioning system	32
1.1	Overview of fitting locations - components not located in passenger compartment	32
1.2	Overview of fitting locations - components located in front section of passenger compartment	36
2	Refrigerant circuit	45
2.1	System overview - refrigerant circuit	45
2.2	Assembly overview - condenser	48
2.3	Removing and installing evacuating and charging valves on low and high-pressure side	50
2.4	Removing and installing high-pressure sender G65	52
2.5	Removing and installing condenser	54
2.6	Removing and installing desiccant bag or cartridge	57
2.7	Removing and installing expansion valve	60
3	Air conditioner compressor	64
3.1	Assembly overview - drive unit of air conditioner compressor	64
3.2	Assembly overview - pulley	65
3.3	Removing air conditioning compressor from and installing on bracket	66
3.4	Removing and installing air conditioner compressor	67
3.5	Removing and installing pulley	73
3.6	Checking high-pressure safety valve on air conditioner compressor	74
4	Control motors	75
4.1	Overview of fitting locations - front control motors	75
4.2	Removing and installing temperature flap control motor V68	79
4.3	Removing and installing defroster flap control motor V107 / temperature flap control motor V68	81
4.4	Removing and installing fresh air and air recirculation flap control motor V154	85
4.5	Removing and installing fresh air/air recirculation, air flow flap control motor V425	86
4.6	Removing and installing air distribution flap control motor V428	88
4.7	Locally manufacturing an adapter cable to activate control motors	90
5	Front heater and air conditioning unit	92
5.1	Assembly overview - heater and air conditioning unit	92
5.2	Assembly overview - evaporator housing	101
5.3	Removing and installing evaporator	102
5.4	Removing and installing heater and air conditioning unit	102
5.5	Dismantling and assembling heater and air conditioning unit	109
5.6	Removing and installing fresh air blower V2	111
5.7	Removing and installing fresh air blower series resistor with overheating fuse N24	114
5.8	Removing and installing dust and pollen filter	115
5.9	Dismantling and assembling evaporator housing	116
5.10	Checking auxiliary air heater element Z35	117
5.11	Removing and installing auxiliary air heater element Z35	120
5.12	Checking condensation drain	121
5.13	Removing and installing fresh air blower control unit J126	121
5.14	Removing and installing heat exchanger	123
5.15	Removing and installing evaporator temperature sensor G308	127
5.16	Removing and installing flexible shaft	129



6	Air duct	130
6.1	Assembly overview - air duct and air distribution in passenger compartment	130
6.2	Removing and installing centre vent at front	131
6.3	Removing and installing right or left vent	132
6.4	Removing and installing driver side footwell vents	132
6.5	Removing and installing front passenger side footwell vents	133
6.6	Removing and installing rear footwell vent	134
6.7	Removing and installing forced ventilation for passenger compartment	134
6.8	Checking forced ventilation for passenger compartment	135
6.9	Removing and installing fresh air intake	136
6.10	Removing and installing air duct for defroster vent	138
6.11	Removing and installing air duct for centre vent	138
7	Operating and display unit	139
7.1	Overview of fitting locations - operating and display unit	139
7.2	Removing and installing operating and display unit	141
7.3	Multi-pin connector pin assignment on back of operating and display unit	143
8	Other controlling and regulating components	144
8.1	Removing and installing sunlight penetration photosensor G107	144
8.2	Removing and installing centre vent temperature sender G191	145
8.3	Removing and installing footwell vent temperature sender G192	146
8.4	Removing and installing radiator fan control unit J293	146
8.5	Removing and installing ambient temperature sensor G17	147