



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Repair instructions	4
3.1 General repair instructions	4
4 Technical data	8
4.1 Allocation gearbox - engine	8
4.2 Capacities	10
4.3 Calculation of gear ratios	10
5 Overview - power transmission	11
6 Electrical components	13
6.1 Overview of fitting locations - electrical components	13
30 - Clutch	15
1 Clutch mechanism	15
1.1 Overview of fitting locations – clutch mechanism	15
1.2 Assembly overview - pedal cluster	17
1.3 Assembly overview - clutch hydraulics	21
1.4 Assembly overview - clutch release mechanism	27
1.5 Removing and installing bearing bush	29
1.6 Removing and installing clutch pedal	30
1.7 Removing and installing over-centre spring	33
1.8 Removing and installing extension spring	35
1.9 Removing and installing mounting bracket	37
1.10 Removing and installing clutch master cylinder	48
1.11 Removing and installing clutch slave cylinder	50
1.12 Removing and installing lines for clutch mechanism	53
1.13 Bleeding clutch mechanism	58
1.14 Removing and installing clutch pedal switch F36	60
1.15 Checking clutch master cylinder and clutch slave cylinder	61
1.16 Removing and installing clutch position sender G476	62
1.17 Repairing clutch release mechanism	65
2 Clutch	68
2.1 Assembly overview - clutch	68
2.2 Removing and installing clutch	68
34 - Controls, housing	74
1 Selector mechanism	74
1.1 Installation position - selector mechanism	74
1.2 Overview - selector mechanism	75
1.3 Assembly overview – gear knob and cover	76
1.4 Assembly overview - Gear lever and selector housing	78
1.5 Assembly overview – selector cables	81
1.6 Removing and installing gear knob	83
1.7 Emblem identification	86
1.8 Removing and installing selector mechanism	87
1.9 Repairing selector mechanism	90
1.10 Adjusting selector mechanism	96
1.11 Checking selector mechanism	98
1.12 Dismantling and assembling selector mechanism	99



1.13	Removing and installing selector cable	104
1.14	Renewing selector shaft seal	105
2	Removing and installing gearbox	108
2.1	Specified torques for gearbox	108
2.2	Removing gearbox	108
2.3	Installing gearbox	130
3	Assembly mountings	142
3.1	Assembly overview - assembly mountings	142
4	Transporting gearbox	147
5	Dismantling and assembling gearbox	149
5.1	Schematic overview - gearbox	149
5.2	Assembly overview - gearbox	149
5.3	Assembly overview - clutch housing	150
5.4	Assembly overview - selector unit	151
5.5	Assembly overview - shafts, differential, selector mechanism	152
5.6	Removing and installing selector unit with gearbox installed	153
5.7	Renewing selector shaft sleeve	158
5.8	Dismantling and assembling gearbox	159
6	Gearbox housing, clutch housing	167
6.1	Assembly overview - gearbox housing and clutch housing	167
7	Securing to engine and gearbox support	170
8	Gear oil	172
8.1	Checking gear oil level	172
8.2	Draining and filling gear oil	172
35 - Gears, shafts		175
1	Input shaft	175
1.1	Assembly overview - input shaft	175
1.2	Dismantling and assembling input shaft	177
1.3	Adjusting input shaft	185
1.4	Renewing input shaft seal	189
2	Output shaft	192
2.1	Assembly overview - output shaft	192
2.2	Dismantling and assembling output shaft	195
2.3	Adjusting output shaft	210
3	Reverse shaft	216
3.1	Removing and installing reverse shaft	216
39 - Final drive - differential		217
1	Oil seals	217
1.1	Overview of fitting locations - seals	217
1.2	Renewing left seal	217
1.3	Renewing right oil seal	220
2	Differential	221
2.1	Assembly overview - differential	221
2.2	Dismantling and assembling differential	223
2.3	Adjusting differential	231
3	Adjustment overview	235