



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	4
3.1 Allocation gearbox - engine	4
3.2 Capacities	5
3.3 Calculation of gear ratios	5
4 Overview - power transmission	6
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
6 Repair instructions	11
6.1 General repair instructions	11
30 - Clutch	15
1 Clutch mechanism	15
1.1 Overview of fitting locations – clutch mechanism	15
1.2 Assembly overview - pedal cluster	17
1.3 Assembly overview - clutch hydraulics	21
1.4 Assembly overview - clutch release mechanism	27
1.5 Removing and installing bearing bush	28
1.6 Removing and installing clutch pedal	30
1.7 Removing and installing over-centre spring	33
1.8 Removing and installing extension spring	35
1.9 Removing and installing mounting bracket	36
1.10 Removing and installing clutch master cylinder	48
1.11 Removing and installing clutch slave cylinder	50
1.12 Removing and installing lines for clutch mechanism	56
1.13 Bleeding clutch mechanism	60
1.14 Removing and installing clutch pedal switch F36	61
1.15 Checking clutch master cylinder and clutch slave cylinder	62
1.16 Removing and installing clutch position sender G476	63
1.17 Repairing clutch release mechanism	66
2 Clutch	69
2.1 Assembly overview - clutch	69
2.2 Removing and installing clutch	69
34 - Controls, housing	75
1 Selector mechanism	75
1.1 Installation position - selector mechanism	75
1.2 Assembly overview – gear knob and cover	76
1.3 Assembly overview - selector mechanism	77
1.4 Removing and installing gear knob	81
1.5 Removing and installing selector mechanism	84
1.6 Repairing selector mechanism	87
1.7 Adjusting selector mechanism	92
1.8 Checking selector mechanism	98
2 Removing and installing gearbox	99
2.1 Differentiating between gearboxes, Polo	99
2.2 Removing gearbox	99
2.3 Installing gearbox	126



2.4	Specified torques for gearbox	140
3	Assembly mountings	142
3.1	Assembly overview - assembly mountings, up!	142
3.2	Assembly overview - assembly mountings, Polo	143
4	Transporting gearbox	146
5	Gear oil	147
5.1	Checking gear oil level	147
5.2	Draining and filling gear oil	148
6	Securing to engine and gearbox support	150
6.1	Securing to engine and gearbox support, gearboxes for up!	150
6.2	Securing to engine and gearbox support, gearboxes for Polo	151
7	Dismantling and assembling gearbox	153
7.1	Schematic overview - gearbox	153
7.2	Assembly overview - gearbox	155
7.3	Assembly overview - cover for gearbox housing and 5th gear	156
7.4	Assembly overview - clutch housing	158
7.5	Assembly overview - shafts, differential, selector mechanism	159
7.6	Assembly overview - selector unit	161
7.7	Assembly overview - selector forks	164
7.8	Removing and installing selector unit with gearbox installed	165
7.9	Repairing selector forks	174
7.10	Repairing selector unit	179
7.11	Renewing selector shaft seal	181
7.12	Dismantling and assembling gearbox	183
8	Gearbox housing, clutch housing	196
8.1	Assembly overview - gearbox housing and clutch housing	196
8.2	Repairing clutch housing	200
35 - Gears, shafts		203
1	Input shaft	203
1.1	Assembly overview - input shaft	203
1.2	Dismantling and assembling input shaft	205
1.3	Renewing input shaft seal	218
2	Output shaft	221
2.1	Assembly overview - output shaft	221
2.2	Dismantling and assembling output shaft	223
39 - Final drive - differential		232
1	Oil seals	232
1.1	Overview of fitting locations - seals	232
1.2	Renewing left seal	232
1.3	Renewing right seal	238
2	Differential	244
2.1	Assembly overview - differential	244
2.2	Dismantling and assembling differential	247
2.3	Adjusting differential	257