



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with a start/stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
3.3 Calculation of gear ratios	3
4 Overview - power transmission	4
5 Electrical components	6
5.1 Overview of fitting locations - electrical components	6
6 Repair notes	7
6.1 General repair instructions	7
30 - Clutch	10
1 Clutch operation	10
1.1 Overview of fitting locations – clutch mechanism	10
1.2 Assembly overview - pedal cluster	12
1.3 Assembly overview - clutch hydraulics	14
1.4 Assembly overview - clutch release mechanism	18
1.5 Removing and installing bearing bush	19
1.6 Checking clutch master cylinder and clutch slave cylinder	20
1.7 Removing and installing clutch position sender G476	20
1.8 Removing and installing over-centre spring	22
1.9 Removing and installing extension spring	23
1.10 Removing and installing clutch pedal	23
1.11 Removing and installing mounting bracket	25
1.12 Removing and installing clutch master cylinder	29
1.13 Removing and installing bleeder	30
1.14 Removing and installing lines for clutch mechanism	31
1.15 Removing and installing clutch slave cylinder together with release bearing	34
1.16 Bleeding clutch mechanism	35
1.17 Repairing clutch release mechanism	36
2 Clutch	38
2.1 Assembly overview - clutch	38
2.2 Removing and installing clutch	41
34 - Controls, housing	54
1 Selector mechanism	54
1.1 Installation position - selector mechanism	54
1.2 Assembly overview - gear knob and cover	56
1.3 Assembly overview - selector mechanism	57
1.4 Removing and installing gear knob	59
1.5 Removing and installing selector mechanism	60
1.6 Repairing selector mechanism	63
1.7 Adjusting selector mechanism	65
1.8 Checking selector mechanism	67
2 Removing and installing gearbox	68
2.1 Removing gearbox	68
2.2 Installing gearbox	89
2.3 Specified torques for gearbox	96



3	Assembly mountings	97
3.1	Assembly overview - assembly mountings	97
4	Transporting gearbox	98
5	Gear oil	99
5.1	Distinguishing between different manual gearbox types when filling oil	99
5.2	Checking gear oil level	99
6	Installing to engine and gearbox support	103
7	Dismantling and assembling gearbox	104
7.1	Schematic overview - gearbox	104
7.2	Assembly overview - gearbox	105
7.3	Assembly overview - gearbox housing and selector mechanism	106
7.4	Assembly overview - selector unit	108
7.5	Assembly overview - shafts, differential, selector mechanism	109
7.6	Assembly overview - selector forks	111
7.7	Renewing oil seal for selector shaft	111
7.8	Removing and installing selector unit with gearbox installed	113
7.9	Dismantling and assembling gearbox	116
8	Gearbox housing, clutch housing	131
8.1	Assembly overview - gearbox housing	131
8.2	Assembly overview - clutch housing	133
8.3	Repairing gearbox housing	134
8.4	Repairing clutch housing	142
35 - Gears, shafts		144
1	Input shaft	144
1.1	Assembly overview - input shaft	144
1.2	Dismantling and assembling input shaft	145
1.3	Renewing input shaft seal	149
2	Output shaft	151
2.1	Assembly overview - output shaft	151
2.2	Dismantling and assembling output shaft	156
2.3	Adjusting output shaft	177
39 - Final drive - differential		188
1	Seals	188
1.1	Overview of fitting locations - seals	188
1.2	Renewing left oil seal	189
1.3	Renewing right oil seal	191
2	Differential	195
2.1	Assembly overview - differential	195
2.2	Dismantling and assembling differential	197
2.3	Adjusting differential	201
3	Adjustment overview	206