



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety precautions when working on vehicles with a start/stop system .....	1
<b>2 Identification</b> .....	<b>2</b>
2.1 Gearbox identification .....	2
<b>3 Technical data</b> .....	<b>4</b>
3.1 Allocation gearbox - engine .....	4
3.2 Capacities .....	5
3.3 Calculation of gear ratios .....	5
<b>4 Overview - power transmission</b> .....	<b>6</b>
<b>5 Electrical components</b> .....	<b>8</b>
5.1 Overview of fitting locations - electrical components .....	8
<b>6 Repair notes</b> .....	<b>9</b>
6.1 General repair instructions .....	9
<b>30 - Clutch</b> .....	<b>12</b>
<b>1 Clutch operation</b> .....	<b>12</b>
1.1 Overview of fitting locations – clutch mechanism .....	12
1.2 Assembly overview - pedal cluster .....	14
1.3 Assembly overview - clutch hydraulics .....	16
1.4 Assembly overview - clutch release mechanism .....	18
1.5 Removing and installing bearing bush .....	19
1.6 Checking clutch master cylinder and clutch slave cylinder .....	20
1.7 Removing and installing clutch position sender G476 .....	20
1.8 Removing and installing over-centre spring .....	22
1.9 Removing and installing extension spring .....	23
1.10 Removing and installing clutch pedal .....	23
1.11 Removing and installing mounting bracket .....	25
1.12 Removing and installing clutch master cylinder .....	29
1.13 Removing and installing clutch slave cylinder .....	30
1.14 Removing and installing lines for clutch mechanism .....	32
1.15 Bleeding clutch mechanism .....	34
1.16 Repairing clutch release mechanism .....	36
<b>2 Clutch</b> .....	<b>38</b>
2.1 Assembly overview - clutch .....	38
2.2 Removing and installing clutch .....	39
<b>34 - Controls, housing</b> .....	<b>44</b>
<b>1 Selector mechanism</b> .....	<b>44</b>
1.1 Installation position - selector mechanism .....	44
1.2 Assembly overview - gear knob and cover .....	46
1.3 Assembly overview - selector mechanism .....	47
1.4 Removing and installing gear knob .....	48
1.5 Removing and installing selector mechanism .....	50
1.6 Repairing selector mechanism .....	54
1.7 Adjusting selector mechanism .....	56
1.8 Checking selector mechanism .....	59
<b>2 Removing and installing gearbox</b> .....	<b>60</b>
2.1 Differentiating between gearboxes .....	60
2.2 Removing gearbox .....	60
2.3 Installing gearbox .....	70
2.4 Specified torques for gearbox .....	76



<b>3</b>	<b>Assembly mounting</b>	<b>77</b>
3.1	Assembly overview - assembly mountings	77
<b>4</b>	<b>Transporting gearbox</b>	<b>79</b>
<b>5</b>	<b>Gear oil</b>	<b>80</b>
5.1	Checking gear oil level	80
5.2	Draining and filling gear oil	81
<b>6</b>	<b>Installing to engine and gearbox support</b>	<b>83</b>
<b>7</b>	<b>Dismantling and assembling gearbox</b>	<b>85</b>
7.1	Schematic overview - gearbox	85
7.2	Assembly overview - gearbox	86
7.3	Assembly overview - cover for gearbox housing and 5th/6th gear	87
7.4	Assembly overview - clutch housing	89
7.5	Assembly overview - shafts, differential, selector mechanism	91
7.6	Assembly overview - selector unit	92
7.7	Assembly overview - selector forks	94
7.8	Repairing selector forks	95
7.9	Repairing selector unit	98
7.10	Renewing oil seal for selector shaft	101
7.11	Dismantling and assembling gearbox	101
<b>8</b>	<b>Gearbox housing, clutch housing</b>	<b>117</b>
8.1	Assembly overview - gearbox housing and clutch housing	117
8.2	Assembly overview - gearbox housing cover	121
8.3	Repairing gearbox housing cover	122
8.4	Repairing clutch housing	124
<b>35 - Gears, shafts</b>		<b>127</b>
<b>1</b>	<b>Input shaft</b>	<b>127</b>
1.1	Assembly overview - input shaft	127
1.2	Dismantling and assembling input shaft	130
1.3	Renewing input shaft seal	138
<b>2</b>	<b>Output shaft</b>	<b>140</b>
2.1	Assembly overview - output shaft	140
2.2	Dismantling and assembling output shaft	143
<b>39 - Final drive - differential</b>		<b>149</b>
<b>1</b>	<b>Oil seals</b>	<b>149</b>
1.1	Overview of fitting locations - seals	149
1.2	Renewing left oil seal	150
1.3	Renewing right oil seal	154
<b>2</b>	<b>Differential</b>	<b>159</b>
2.1	Assembly overview - differential	159
2.2	Dismantling and assembling differential	162
2.3	Adjusting differential	169