



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions when tow-starting or towing	2
2 Identification	3
2.1 Gearbox identification	3
2.2 Identification of torque converter	3
3 Repair instructions	4
3.1 General information	4
3.2 Rules for cleanliness	4
3.3 General repair instructions	5
3.4 Gaskets and seals	6
3.5 Nuts and bolts	6
4 Technical data	7
4.1 Allocation gearbox - engine	7
4.2 Capacities	7
32 - Torque converter	8
1 Torque converter	8
1.1 Assembly overview - torque converter	8
1.2 Draining torque converter	9
1.3 Removing and installing torque converter oil seal	9
1.4 Removing and installing torque converter	11
1.5 Checking torque converter	12
37 - Controls, housing	13
1 ATF circuit	13
1.1 Assembly overview - ATF circuit	13
1.2 Removing and installing ATF cooler	14
2 ATF	18
2.1 Checking ATF level	18
2.2 Draining and filling ATF	21
3 Removing and installing gearbox	25
3.1 Removing gearbox	25
3.2 Installing gearbox	36
3.3 Specified torques for gearbox	39
4 Transporting gearbox	40
5 Securing to engine and gearbox support	41
6 Selector mechanism	43
6.1 Assembly overview - selector mechanism	43
6.2 Emergency release from position P	45
6.3 Removing and installing selector lever handle	47
6.4 Moving push-button in the handle to installation position	51
6.5 Removing and installing selector mechanism	54
6.6 Removing and installing gear selector cable	59
6.7 Checking selector mechanism	61
6.8 Checking and adjusting selector lever cable	62
6.9 Removing and installing multifunction switch	64
6.10 Adjusting multifunction switch	67
6.11 Renewing selector shaft seal	68



38 - Gears, control	70
1 ATF system	70
1.1 Removing and installing sump	70
1.2 Removing and installing ATF strainer	71
2 Valve body	73
2.1 Assembly overview - valve body	73
2.2 Removing and installing valve body	78
39 - Final drive - differential	81
1 Oil seals	81
1.1 Renewing left seal	81
1.2 Renewing right oil seal	83
2 Gearbox control system	86
2.1 Removing and installing gearbox control unit	86