



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
2 Identification	3
2.1 Engine number/engine data	3
3 Repair notes	5
3.1 Rules for cleanliness	5
3.2 General information	5
3.3 General repair instructions	6
3.4 Foreign objects in engine	6
3.5 Contact corrosion	6
3.6 Routing and attachment of lines	6
3.7 Fitting radiator and condensers	6
3.8 Checking vacuum system	6
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	37
1.3 Securing engine on engine and gearbox support	39
1.4 Installing engine	40
2 Assembly mountings	44
2.1 Assembly overview - assembly mountings	44
2.2 Removing and installing engine mounting	52
2.3 Removing and installing gearbox mountings	56
2.4 Removing and installing pendulum support	60
2.5 Supporting engine in installation position	63
2.6 Adjusting assembly mountings	80
2.7 Checking adjustment of assembly mountings (engine and gearbox mountings)	82
13 - Crankshaft group	84
1 Cylinder block (pulley end)	84
1.1 Assembly overview - poly V-belt drive	84
1.2 Removing and installing poly-V belt	88
1.3 Removing and installing tensioner for poly V-belt	90
1.4 Removing and installing vibration damper	91
1.5 Removing and installing engine support	92
1.6 Renewing crankshaft oil seal - belt pulley end	95
2 Cylinder block, gearbox end	98
2.1 Assembly overview - cylinder block, gearbox end	98
2.2 Removing and installing flywheel	99
2.3 Removing and installing sealing flange on gearbox side	100
3 Crankshaft	109
3.1 Crankshaft dimensions	109
3.2 Measuring axial clearance of crankshaft	109
3.3 Renewing needle bearing in crankshaft	110
4 Pistons and conrods	113
4.1 Assembly overview - pistons and conrods	113



4.2	Removing and installing pistons	115
4.3	Checking pistons and cylinder bores	116
4.4	Separating new conrod	117
4.5	Checking radial clearance of conrods	118
4.6	Removing and installing oil spray jets	118
4.7	Setting piston to TDC position	119
15	- Cylinder head, valve gear	123
1	Cylinder head	123
1.1	Assembly overview - cylinder head	123
1.2	Assembly overview - camshaft housing	125
1.3	Removing and installing cylinder head	126
1.4	Removing and installing camshaft housing	131
1.5	Checking compression	133
2	Toothed belt drive	136
2.1	Assembly overview - toothed belt cover	136
2.2	Assembly overview - toothed belt	137
2.3	Removing and installing toothed belt guard	139
2.4	Preassembling and installing valve timing tool	139
2.5	Removing and installing toothed belt	148
2.6	Checking valve timing	154
2.7	Adjusting valve timing	156
2.8	Removing toothed belt from camshaft	165
3	Valve gear	169
3.1	Assembly overview - valve gear	169
3.2	Measuring axial play of camshaft	171
3.3	Removing and installing camshaft adjuster	172
3.4	Removing and installing toothed belt pulley	176
3.5	Removing and installing camshaft oil seal	178
3.6	Removing and installing camshaft control valve 1 N205	185
3.7	Removing and installing valve stem seals	185
4	Inlet and exhaust valves	194
4.1	Checking valve guides	194
4.2	Checking valves	194
4.3	Valve dimensions	195
17	- Lubrication	196
1	Sump, oil pump	196
1.1	Assembly overview - sump/oil pump	196
1.2	Engine oil:	200
1.3	Removing and installing sump	201
1.4	Removing and installing oil pump	206
1.5	Removing and installing oil level and oil temperature sender G266	209
2	Engine oil cooler	210
2.1	Assembly overview - engine oil cooler	210
2.2	Removing and installing engine oil cooler	210
3	Crankcase ventilation	212
3.1	Assembly overview - crankcase breather system	212
3.2	Removing and installing oil separator	213
4	Oil filter, oil pressure switch	216
4.1	Assembly overview - oil filter/oil pressure switch	216
4.2	Removing and installing oil pressure switch for reduced oil pressure F378	217
4.3	Checking oil pressure and oil pressure switch	218
4.4	Removing and installing oil filter housing	219



19 - Cooling	221
1 Cooling system/coolant	221
1.1 Connection diagram - coolant hoses	221
1.2 Checking cooling system for leaks	225
1.3 Draining and adding coolant	227
2 Coolant pump, regulation of cooling system	235
2.1 Assembly overview - coolant pump, thermostat	235
2.2 Assembly overview - electric coolant pump	238
2.3 Assembly overview - coolant temperature sender	240
2.4 Removing and installing electric coolant pump	241
2.5 Removing and installing coolant pump	243
2.6 Removing and installing thermostat	248
2.7 Removing and installing toothed belt pulley for coolant pump	250
2.8 Removing and installing coolant temperature sender G62	251
2.9 Removing and installing radiator outlet coolant temperature sender G83	252
2.10 Removing and installing radiator fan thermal switch F18	252
3 Coolant pipes	254
3.1 Assembly overview - coolant pipes	254
3.2 Removing and installing coolant pipes	254
4 Radiator, radiator fan	258
4.1 Assembly overview - radiator/radiator fan	258
4.2 Assembly overview - radiator cowl and radiator fan	265
4.3 Removing and installing radiator	268
4.4 Removing and installing water radiator for charge air cooling circuit	276
4.5 Removing and installing radiator cowl	285
4.6 Removing and installing radiator fan V7	290
21 - Turbocharging/supercharging	293
1 Turbocharger	293
1.1 Assembly overview - turbocharger	293
1.2 Removing and installing turbocharger	295
1.3 Removing and installing charge pressure positioner V465	298
1.4 Removing and installing connection for turbocharger	299
2 Charge air system	302
2.1 Assembly overview - charge air system	302
2.2 Removing and installing charge air cooler	304
2.3 Removing and installing charge pressure sender GX26	306
2.4 Checking charge air system for leaks	306
2.5 Removing and installing air pipe	308
24 - Mixture preparation - injection	311
1 Injection system	311
1.1 Overview of fitting locations - injection system	311
2 Air filter	320
2.1 Assembly overview - air filter housing	320
2.2 Removing and installing air filter housing	323
2.3 Removing and installing resonator for intake air	324
3 Intake manifold	325
3.1 Assembly overview - intake manifold	325
3.2 Removing and installing intake manifold	327
3.3 Removing and installing throttle valve module GX3	329
3.4 Cleaning throttle valve module GX3	330
4 Injectors	331
4.1 Assembly overview - fuel rail with injectors	331



4.2	Removing and installing fuel rail	332
4.3	Removing and installing injectors	333
4.4	Cleaning injectors	343
5	Senders and sensors	346
5.1	Removing and installing intake manifold sender GX9	346
5.2	Removing and installing fuel pressure sender G247	346
5.3	Checking fuel pressure sender G247	347
6	High-pressure pump	350
6.1	Assembly overview - high-pressure pump	350
6.2	Removing and installing high-pressure pump	352
6.3	Removing and installing high-pressure pipe	353
7	Lambda probe	356
7.1	Assembly overview - Lambda probe	356
7.2	Removing and installing Lambda probe	357
8	Engine control unit	360
8.1	Removing and installing engine control unit J623	360
8.2	Assembly overview - engine control unit	371
26	- Exhaust system	373
1	Exhaust pipes and silencers	373
1.1	Assembly overview - silencers	373
1.2	Separating exhaust pipes from silencers	383
1.3	Removing and installing silencer	389
1.4	Aligning exhaust system free of stress	395
1.5	Checking exhaust system for leaks	395
1.6	Installation position of clamp	396
2	Emission control	397
2.1	Assembly overview - emission control	397
2.2	Removing and installing catalytic converter	400
28	- Ignition system	408
1	Ignition system	408
1.1	Assembly overview - ignition system	408
1.2	Removing and installing ignition coils with output stage	409
1.3	Removing and installing knock sensor 1 G61	411
1.4	Removing and installing Hall sender	411
1.5	Removing and installing engine speed sender G28	412