



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 Foreign objects in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of lines	5
3.5 Fitting radiator and condensers	6
<b>10 - Removing and installing engine</b>	<b>7</b>
<b>1 Removing and installing motor</b>	<b>7</b>
1.1 Removing motor	7
1.2 Separating engine and gearbox	19
1.3 Securing engine on engine and gearbox support	21
1.4 Installing engine	22
<b>2 Assembly mountings</b>	<b>25</b>
2.1 Assembly overview - assembly mountings	25
2.2 Removing and installing engine mounting	31
2.3 Removing and installing gearbox mountings	33
2.4 Removing and installing pendulum support	35
2.5 Supporting engine in installation position	37
<b>13 - Crankshaft group</b>	<b>42</b>
<b>1 Cylinder block (pulley end)</b>	<b>42</b>
1.1 Assembly overview - poly V-belt drive	42
1.2 Assembly overview - sealing flange, belt pulley end	44
1.3 Removing and installing poly-V belt	46
1.4 Removing and installing tensioner for poly V-belt	49
1.5 Removing and installing vibration damper	50
1.6 Removing and installing engine support	52
1.7 Renewing crankshaft oil seal - belt pulley end	56
1.8 Removing and installing sealing flange on pulley end	59
<b>2 Cylinder block, gearbox end</b>	<b>63</b>
2.1 Assembly overview - cylinder block, gearbox end	63
2.2 Removing and installing flywheel	65
2.3 Removing and installing sealing flange on gearbox side	66
<b>3 Crankshaft</b>	<b>77</b>
3.1 Crankshaft dimensions	77
3.2 Renewing needle bearing in crankshaft	77
3.3 Measuring axial clearance of crankshaft	80
<b>4 Pistons and conrods</b>	<b>82</b>
4.1 Assembly overview - pistons and conrods	82
4.2 Removing and installing pistons	85
4.3 Separating new conrod	86
4.4 Removing and installing oil spray jets	87



4.5	Checking pistons and cylinder bores .....	88
4.6	Checking radial clearance of conrods .....	91
4.7	Setting piston to TDC position .....	91
<b>15 - Cylinder head, valve gear</b>	.....	<b>96</b>
1	<b>Cylinder head</b> .....	<b>96</b>
1.1	Assembly overview - cylinder head .....	96
1.2	Assembly overview - camshaft housing .....	98
1.3	Removing and installing cylinder head .....	103
1.4	Removing and installing camshaft housing .....	108
1.5	Checking compression .....	112
2	<b>Toothed belt drive</b> .....	<b>115</b>
2.1	Assembly overview - toothed belt cover .....	115
2.2	Assembly overview - toothed belt .....	116
2.3	Removing and installing toothed belt guard .....	120
2.4	Checking valve timing .....	121
2.5	Preassembling and installing valve timing tool .....	128
2.6	Adjusting valve timing .....	143
2.7	Removing toothed belt from camshaft .....	165
2.8	Removing and installing toothed belt .....	172
3	<b>Valve gear</b> .....	<b>180</b>
3.1	Assembly overview - valve gear .....	180
3.2	Removing and installing camshaft oil seal .....	182
3.3	Removing and installing camshaft adjuster .....	196
3.4	Removing and installing toothed belt pulley .....	215
3.5	Removing and installing camshaft control valve 1 N205 .....	220
3.6	Removing and installing exhaust camshaft control valve 1 N318 .....	221
3.7	Removing and installing valve stem seals .....	222
3.8	Removing and installing cam actuators .....	232
4	<b>Inlet and exhaust valves</b> .....	<b>239</b>
4.1	Checking valve guides .....	239
4.2	Checking valves .....	240
4.3	Valve dimensions .....	240
<b>17 - Lubrication</b>	.....	<b>241</b>
1	<b>Sump, oil pump</b> .....	<b>241</b>
1.1	Assembly overview - sump/oil pump .....	241
1.2	Engine oil: .....	245
1.3	Removing and installing lower part of sump .....	245
1.4	Removing and installing upper part of sump .....	251
1.5	Removing and installing oil pump .....	255
1.6	Removing and installing oil level and oil temperature sender G266 .....	257
2	<b>Engine oil cooler</b> .....	<b>258</b>
2.1	Assembly overview - engine oil cooler .....	258
2.2	Removing and installing engine oil cooler .....	258
3	<b>Crankcase ventilation</b> .....	<b>260</b>
3.1	Assembly overview - crankcase breather system .....	260
3.2	Removing and installing oil separator .....	261
4	<b>Oil filter, oil pressure switch</b> .....	<b>264</b>
4.1	Assembly overview - oil filter/oil pressure switch .....	264
4.2	Removing and installing oil pressure switch F1 .....	265
4.3	Removing and installing oil pressure switch for reduced oil pressure F378 .....	267
4.4	Checking oil pressure .....	267
4.5	Removing and installing oil pressure regulating valve N428 .....	270



<b>19 - Cooling</b>	<b>271</b>
1 <b>Cooling system/coolant</b>	271
1.1 Connection diagram - coolant hoses	271
1.2 Checking cooling system for leaks	275
1.3 Draining and adding coolant	278
2 <b>Coolant pump, regulation of cooling system</b>	287
2.1 Assembly overview - coolant pump, thermostat	287
2.2 Assembly overview - electric coolant pump	290
2.3 Assembly overview - coolant temperature sender	291
2.4 Removing and installing electric coolant pump	292
2.5 Removing and installing coolant pump	294
2.6 Removing and installing thermostat	300
2.7 Removing and installing toothed belt pulley for coolant pump	303
2.8 Removing and installing coolant temperature sender G62	307
2.9 Removing and installing radiator outlet coolant temperature sender G83	309
3 <b>Coolant pipes</b>	312
3.1 Assembly overview - coolant pipes	312
3.2 Removing and installing coolant pipes	312
4 <b>Radiator, radiator fan</b>	317
4.1 Assembly overview - radiator/radiator fan	317
4.2 Assembly overview - radiator cowl and radiator fan	319
4.3 Removing and installing radiator	320
4.4 Removing and installing water radiator for charge air cooling circuit	325
4.5 Removing and installing radiator cowl with radiator fan	329
4.6 Removing and installing radiator fan V7	330
<b>21 - Turbocharging/supercharging</b>	<b>333</b>
1 <b>Turbocharger</b>	333
1.1 Assembly overview - turbocharger	333
1.2 Removing and installing turbocharger	337
1.3 Removing and installing charge pressure positioner V465	343
1.4 Removing and installing connection for turbocharger	345
2 <b>Charge air system</b>	349
2.1 Assembly overview - charge air system	349
2.2 Removing and installing charge air cooler	351
2.3 Removing and installing charge pressure sender GX26	354
2.4 Checking charge air system for leaks	355
2.5 Removing and installing air pipe	357
<b>24 - Mixture preparation - injection</b>	<b>360</b>
1 <b>Injection system</b>	360
1.1 Overview of fitting locations - injection system	360
2 <b>Injectors</b>	368
2.1 Assembly overview - fuel rail with injectors	368
2.2 Removing and installing fuel rail	370
2.3 Removing and installing injectors	371
2.4 Cleaning injectors	377
3 <b>Air filter</b>	379
3.1 Assembly overview - air filter housing	379
3.2 Removing and installing air filter housing	379
3.3 Removing and installing resonator for intake air	381
4 <b>Intake manifold</b>	382
4.1 Assembly overview - intake manifold	382
4.2 Removing and installing intake manifold	384



---

4.3	Removing and installing throttle valve module GX3 . . . . .	388
4.4	Cleaning throttle valve module GX3 . . . . .	390
<b>5</b>	<b>Senders and sensors . . . . .</b>	<b>392</b>
5.1	Removing and installing fuel pressure sender G247 . . . . .	392
5.2	Checking fuel pressure sender G247 . . . . .	393
5.3	Removing and installing intake manifold sender GX9 . . . . .	397
<b>6</b>	<b>Engine control unit . . . . .</b>	<b>399</b>
6.1	Removing and installing engine control unit J623 . . . . .	399
6.2	Removing and installing engine (motor) control unit J623 with protective housing . . . . .	401
<b>7</b>	<b>High-pressure pump . . . . .</b>	<b>404</b>
7.1	Assembly overview - high-pressure pump . . . . .	404
7.2	Removing and installing high-pressure pump . . . . .	409
7.3	Removing and installing high-pressure pipe . . . . .	411
<b>8</b>	<b>Lambda probe . . . . .</b>	<b>412</b>
8.1	Assembly overview - Lambda probe . . . . .	412
8.2	Removing and installing Lambda probe . . . . .	413
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>417</b>
<b>1</b>	<b>Exhaust pipes and silencers . . . . .</b>	<b>417</b>
1.1	Assembly overview - silencers . . . . .	417
1.2	Separating exhaust pipes from silencers . . . . .	420
1.3	Removing and installing silencer . . . . .	421
1.4	Aligning exhaust system free of stress . . . . .	424
1.5	Checking exhaust system for leaks . . . . .	425
<b>2</b>	<b>Emission control . . . . .</b>	<b>426</b>
2.1	Assembly overview - emission control . . . . .	426
2.2	Removing and installing catalytic converter . . . . .	428
<b>28</b>	<b>- Ignition system . . . . .</b>	<b>433</b>
<b>1</b>	<b>Ignition system . . . . .</b>	<b>433</b>
1.1	Assembly overview - ignition system . . . . .	433
1.2	Removing and installing ignition coils with output stage . . . . .	435
1.3	Removing and installing knock sensor 1 G61 . . . . .	438
1.4	Removing and installing Hall sender . . . . .	439
1.5	Removing and installing engine speed sender G28 . . . . .	440