



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	2
2.1 Safety precautions when working on fuel supply system	2
2.2 Safety precautions when working on vehicles with a Start/Stop system	2
2.3 Safety precautions during road tests in which test and measuring equipment is used	3
2.4 Safety precautions when working on cooling system	3
2.5 Safety precautions when working on ignition system	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 Foreign objects in engine	4
3.3 Contact corrosion	4
3.4 Routing and securing lines	4
3.5 Installing coolers, condensers and radiators	5
10 - Removing and installing engine	6
1 Removing and installing engine	6
1.1 Removing engine	6
1.2 Separating engine and gearbox	15
1.3 Securing engine on engine and gearbox support	17
1.4 Installing engine	18
2 Assembly mountings	21
2.1 Assembly overview - assembly mountings	21
2.2 Supporting engine in installation position	26
2.3 Removing and installing engine mountings	29
2.4 Removing and installing gearbox mounting	31
2.5 Removing and installing pendulum support	32
13 - Crankshaft group	35
1 Cylinder block (pulley end)	35
1.1 Assembly overview - poly V-belt drive	35
1.2 Assembly overview - Sealing flange, belt pulley end.	38
1.3 Removing and installing poly V-belt	39
1.4 Removing and installing tensioner for poly V-belt	42
1.5 Removing and installing vibration damper	42
1.6 Removing and installing engine support	43
1.7 Renewing crankshaft oil seal - belt pulley end	47
1.8 Removing and installing sealing flange on pulley end	49
2 Cylinder block, gearbox end	52
2.1 Assembly overview - cylinder block, gearbox end	52
2.2 Removing and installing flywheel	53
2.3 Removing and installing sealing flange on gearbox side	54
3 Crankshaft	63
3.1 Renewing needle bearing in crankshaft	63
3.2 Crankshaft dimensions	64
3.3 Measuring axial clearance of crankshaft	64
4 Pistons and conrods	66
4.1 Assembly overview - pistons and conrods	66
4.2 Separating new conrod	68
4.3 Removing and installing pistons	68
4.4 Removing and installing oil spray jets	69



4.5	Checking piston and cylinder bore	70
4.6	Checking radial clearance of conrods	71
15 - Cylinder head, valve gear	72
1	Toothed belt drive	72
1.1	Assembly overview - toothed belt cover	72
1.2	Assembly overview - toothed belt	73
1.3	Checking valve timing	74
1.4	Detaching toothed belt from camshaft	80
1.5	Removing and installing toothed belt	94
2	Cylinder head	109
2.1	Assembly overview - cylinder head	109
2.2	Assembly overview - camshaft housing	111
2.3	Removing and installing cylinder head	112
2.4	Removing and installing camshaft housing	116
2.5	Checking compression	120
3	Valve gear	123
3.1	Assembly overview - valve gear	123
3.2	Removing and installing camshaft control valve 1 N205 / N318	124
3.3	Removing and installing cam actuators	125
3.4	Removing and installing camshaft adjuster	128
3.5	Measuring axial play of camshaft	129
3.6	Removing and installing camshaft oil seal	130
3.7	Removing and installing valve stem seals	135
4	Inlet and exhaust valves	144
4.1	Checking valve guides	144
4.2	Checking valves	144
4.3	Valve dimensions	145
17 - Lubrication	146
1	Sump, oil pump	146
1.1	Assembly overview - sump, oil pump	146
1.2	Removing and installing oil level and oil temperature sender G266	149
1.3	Removing and installing lower part of sump	149
1.4	Removing and installing oil pump	152
1.5	Removing and installing upper part of sump	153
1.6	Engine oil	156
2	Engine oil cooler	157
2.1	Assembly overview - engine oil cooler	157
2.2	Removing and installing engine oil cooler	157
3	Crankcase breather	159
3.1	Assembly overview - crankcase breather system	159
3.2	Removing and installing oil separator	160
4	Oil filter, oil pressure switch	162
4.1	Assembly overview - oil filter/oil pressure switch	162
4.2	Removing and installing oil pressure switch F1	163
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	164
4.4	Removing and installing oil pressure regulating valve N428	165
4.5	Checking oil pressure	166
19 - Cooling	169
1	Cooling system, coolant	169
1.1	Coolant hose schematic diagram	169
1.2	Draining and filling coolant	172
1.3	Checking cooling system for leaks	178



2	Coolant pump, regulation of cooling system	181
2.1	Assembly overview - coolant pump, thermostat	181
2.2	Assembly overview - electric coolant pump	183
2.3	Assembly overview - coolant temperature sender	185
2.4	Removing and installing coolant pump	186
2.5	Removing and installing toothed belt pulley for coolant pump	190
2.6	Removing and installing thermostat	194
2.7	Removing and installing electric coolant pump	197
2.8	Removing and installing coolant temperature sender G62	199
2.9	Removing and installing coolant temperature sender at radiator outlet G83	200
3	Coolant pipes	202
3.1	Assembly overview - coolant pipes	202
3.2	Removing and installing coolant pipes	202
4	Radiator, radiator fan	206
4.1	Assembly overview - radiator/radiator fan	206
4.2	Assembly overview - radiator cowl and radiator fan	208
4.3	Removing and installing radiator	210
4.4	Removing and installing cooler for charge air cooling circuit	213
4.5	Removing and installing radiator cowling with radiator fan	217
4.6	Removing and installing radiator fan V7	218
21	- Turbocharging/supercharging	220
1	Turbocharger	220
1.1	Assembly overview - turbocharger	220
1.2	Removing and installing turbocharger	222
1.3	Removing and installing charge pressure positioner V465	226
2	Charge air system	230
2.1	Assembly overview - charge air system	230
2.2	Removing and installing charge pressure sender GX26	232
2.3	Removing and installing charge air cooler	232
2.4	Checking charge air system for leaks	234
24	- Mixture preparation - injection	236
1	Injection system	236
1.1	Overview of fitting locations - injection system	236
1.2	Releasing high pressure in fuel system	239
2	Air filter	241
2.1	Assembly overview - air filter housing	241
2.2	Removing and installing air filter housing	242
3	Intake manifold	243
3.1	Assembly overview - intake manifold	243
3.2	Removing and installing intake manifold	245
3.3	Removing and installing throttle valve module GX3	247
3.4	Cleaning throttle valve module GX3	249
4	Injectors	250
4.1	Assembly overview - fuel rail with injectors	250
4.2	Removing and installing fuel rail	251
4.3	Removing and installing injectors	252
4.4	Cleaning injectors	256
5	Senders and sensors	258
5.1	Removing and installing intake manifold sender GX9	258
5.2	Removing and installing fuel pressure sender G247	258
5.3	Checking fuel pressure sender G247	259
6	High-pressure pump	263



6.1	Assembly overview - high-pressure pump	263
6.2	Removing and installing high-pressure pump	264
6.3	Removing and installing high-pressure pipe	265
7	Lambda probe	267
7.1	Assembly overview - Lambda probe	267
7.2	Removing and installing Lambda probe	268
8	Engine control unit	270
8.1	Removing and installing engine control unit J623	270
8.2	Removing and installing engine control unit J623 with protective housing	271
26	- Exhaust system	273
1	Exhaust pipes, silencers	273
1.1	Assembly overview - silencers	273
1.2	Removing and installing silencer	274
1.3	Separating exhaust pipes, silencers	275
1.4	Aligning exhaust system free of stress	276
1.5	Checking exhaust system for leaks	277
2	Emission control	278
2.1	Assembly overview - emission control	278
2.2	Removing and installing catalytic converter	279
28	- Ignition system	284
1	Ignition system	284
1.1	Assembly overview - ignition system	284
1.2	Test data, spark plugs	285
1.3	Removing and installing ignition coils with output stage	285
1.4	Removing and installing knock sensor 1 G61	287
1.5	Removing and installing Hall sender	288
1.6	Removing and installing engine speed sender G28	290