



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number, engine data	1
2 Safety instructions	2
2.1 Safety precautions when working on fuel supply system	2
2.2 Safety precautions when working on vehicles with a Start/Stop system	2
2.3 Safety precautions during road tests in which test and measuring equipment is used	2
2.4 Safety precautions when working on ignition system	3
2.5 Safety precautions when working on cooling system	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 Foreign objects in engine	4
3.3 Contact corrosion	4
3.4 Routing and securing lines	4
3.5 Installing coolers, condensers and radiators	5
10 - Removing and installing engine	6
1 Removing and installing engine	6
1.1 Removing engine	6
1.2 Separating engine and gearbox	14
1.3 Securing engine on engine and gearbox support	19
1.4 Installing engine	20
2 Assembly mountings	24
2.1 Assembly overview - assembly mountings	24
2.2 Supporting engine in installation position	29
2.3 Removing and installing engine mountings	32
2.4 Removing and installing gearbox mounting	34
2.5 Removing and installing pendulum support	35
13 - Crankshaft group	38
1 Cylinder block (pulley end)	38
1.1 Assembly overview - poly V-belt drive	38
1.2 Removing and installing poly V-belt	42
1.3 Removing and installing tensioner for poly V-belt	44
1.4 Removing and installing vibration damper	44
1.5 Removing and installing engine support	45
1.6 Renewing crankshaft oil seal - belt pulley end	48
2 Cylinder block, gearbox end	52
2.1 Assembly overview - cylinder block, gearbox end	52
2.2 Removing and installing flywheel	55
2.3 Removing and installing drive plate	56
2.4 Removing and installing sealing flange on gearbox side	58
3 Crankshaft	68
3.1 Measuring axial clearance of crankshaft	68
4 Pistons and conrods	70
4.1 Assembly overview - pistons and conrods	70
4.2 Removing and installing pistons	72
4.3 Removing and installing oil spray jets	73
4.4 Checking pistons and cylinder bores	74
4.5 Separating new conrod	75
4.6 Checking radial clearance of conrods	76



15 - Cylinder head, valve gear	77
1 Cylinder head	77
1.1 Assembly overview - cylinder head	77
1.2 Assembly overview - camshaft housing	79
1.3 Removing and installing cylinder head	80
1.4 Removing and installing camshaft housing	83
1.5 Checking compression	85
2 Toothed belt drive	88
2.1 Assembly overview - toothed belt cover	88
2.2 Assembly overview - toothed belt	89
2.3 Checking valve timing	90
2.4 Removing toothed belt from camshaft	94
2.5 Removing and installing toothed belt	107
3 Valve gear	122
3.1 Assembly overview - valve gear	122
3.2 Removing and installing camshaft adjuster	123
3.3 Measuring axial play of camshaft	123
3.4 Removing and installing camshaft oil seal	124
3.5 Removing and installing inlet camshaft control valve 1 N205	130
3.6 Removing and installing valve stem seals	130
4 Inlet and exhaust valves	138
4.1 Checking valve guides	138
4.2 Checking valves	138
4.3 Valve dimensions	139
17 - Lubrication	140
1 Sump, oil pump	140
1.1 Assembly overview - sump and oil pump	140
1.2 Removing and installing lower part of sump	143
1.3 Removing and installing oil pump	145
1.4 Removing and installing upper part of sump	147
1.5 Engine oil	150
2 Engine oil cooler	151
2.1 Assembly overview - engine oil cooler	151
2.2 Removing and installing engine oil cooler	151
3 Crankcase breather	153
3.1 Assembly overview - crankcase breather system	153
3.2 Removing and installing oil separator	154
4 Oil filter, oil pressure switch	156
4.1 Assembly overview - oil filter/oil pressure switch	156
4.2 Removing and installing oil pressure switch F1	156
4.3 Checking oil pressure	157
4.4 Removing and installing oil filter housing	159
19 - Cooling	160
1 Cooling system, coolant	160
1.1 Coolant hose schematic diagram	160
1.2 Draining and filling coolant	162
1.3 Checking cooling system for leaks	166
2 Coolant pump, regulation of cooling system	169
2.1 Assembly overview - coolant pump, thermostat	169
2.2 Assembly overview - coolant temperature sender	171
2.3 Removing and installing coolant pump	173
2.4 Removing and installing toothed belt pulley for coolant pump	176



2.5	Removing and installing thermostat	177
2.6	Removing and installing coolant temperature sender G62	180
2.7	Removing and installing coolant temperature sender at radiator outlet G83	181
3	Coolant pipes	183
3.1	Assembly overview - coolant pipes	183
3.2	Removing and installing coolant pipes	183
4	Radiator and radiator fan	186
4.1	Assembly overview - radiator and radiator fan	186
4.2	Assembly overview - radiator cowl and radiator fan	187
4.3	Removing and installing radiator	188
4.4	Removing and installing radiator cowling	191
4.5	Removing and installing radiator fan	192
24	Mixture preparation - injection	193
1	Injection system	193
1.1	Installation location overview - injection system	193
1.2	Assembly overview - fuel system	197
2	Air filter	199
2.1	Assembly overview - air filter housing	199
2.2	Removing and installing air filter housing	199
3	Intake manifold	201
3.1	Assembly overview - intake manifold	201
3.2	Removing and installing intake manifold	202
3.3	Removing and installing throttle valve module GX3	204
3.4	Cleaning throttle valve module GX3	205
4	Injectors	206
4.1	Assembly overview - fuel rail with injectors	206
4.2	Removing and installing fuel rail	206
4.3	Removing and installing injectors	209
4.4	Checking injectors	209
4.5	Cleaning injectors	213
5	Senders and sensors	215
5.1	Removing and installing intake manifold sender GX9	215
6	Lambda probe	216
6.1	Assembly overview - Lambda probe	216
6.2	Removing and installing lambda probe 1 before catalytic converter GX10 / lambda probe 1 after catalytic converter GX7	216
7	Engine control unit	219
7.1	Removing and installing engine control unit J623	219
7.2	Removing and installing engine control unit J623 with protective housing	220
26	Exhaust system	222
1	Exhaust pipes, silencers	222
1.1	Assembly overview - silencers	222
1.2	Removing and installing silencer	223
1.3	Separating exhaust pipes, silencers	224
1.4	Aligning exhaust system free of stress	225
1.5	Checking exhaust system for leaks	226
2	Emission control	227
2.1	Assembly overview - emission control	227
2.2	Removing and installing catalytic converter	228
28	Ignition system	230
1	Ignition system	230



1.1	Assembly overview - ignition system	230
1.2	Test data, spark plugs	231
1.3	Removing and installing ignition coils with output stage	231
1.4	Removing and installing knock sensor	233
1.5	Removing and installing Hall sender	234
1.6	Removing and installing engine speed sender G28	235