



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
1.6 Safety precautions when working on exhaust system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 Repair instructions</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 Foreign objects in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	6
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing engine	8
1.2 Separating engine and gearbox	25
1.3 Securing engine on engine and gearbox support	30
1.4 Installing engine	33
<b>2 Assembly mountings</b>	<b>36</b>
2.1 Assembly overview - assembly mountings	36
2.2 Removing and installing engine mounting	38
2.3 Removing and installing gearbox mounting	40
2.4 Removing and installing pendulum support	43
2.5 Supporting engine in installation position	46
<b>3 Engine cover panel</b>	<b>51</b>
3.1 Removing and installing engine cover	51
<b>13 - Crankshaft group</b>	<b>52</b>
<b>1 Cylinder block (pulley end)</b>	<b>52</b>
1.1 Assembly overview - cylinder block (pulley end)	52
1.2 Removing and installing poly-V belt	55
1.3 Removing and installing tensioner for poly V-belt	56
1.4 Removing and installing vibration damper	57
1.5 Removing and installing bracket for ancillaries	64
1.6 Renewing seal for vibration damper	67
1.7 Removing and installing engine support	70
<b>2 Cylinder block, gearbox end</b>	<b>72</b>
2.1 Assembly overview - cylinder block, gearbox end	72
2.2 Removing and installing flywheel	73
2.3 Removing and installing sealing flange on gearbox side	75
<b>3 Crankshaft</b>	<b>80</b>
3.1 Assembly overview - crankshaft	80
3.2 Crankshaft dimensions	82
3.3 Allocation of main bearing shells	82
3.4 Renewing needle bearing in crankshaft	84
3.5 Measuring axial clearance of crankshaft	86



3.6	Measuring radial clearance of crankshaft	87
3.7	Removing and installing sender wheel	88
<b>4</b>	<b>Balancer shaft</b>	<b>90</b>
4.1	Assembly overview - balance shaft	90
4.2	Removing and installing balance shaft	91
4.3	Renewing oil seal for balance shaft (inlet side)	96
<b>5</b>	<b>Pistons and conrods</b>	<b>98</b>
5.1	Assembly overview - pistons and conrods	98
5.2	Removing and installing pistons	102
5.3	Removing and installing oil spray jets	104
5.4	Checking pistons and cylinder bores	105
5.5	Separating new conrod	108
5.6	Checking radial clearance of conrods	108
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>110</b>
<b>1</b>	<b>Cylinder head</b>	<b>110</b>
1.1	Assembly overview - cylinder head	110
1.2	Removing and installing cylinder head	113
1.3	Removing and installing vacuum pump	120
1.4	Checking compression	122
<b>2</b>	<b>Cover for timing chain</b>	<b>125</b>
2.1	Assembly overview - cover for timing chain	125
2.2	Removing and installing camshaft control valve 1 N205 and exhaust camshaft control valve 1 N318	127
2.3	Removing and installing timing chain cover	127
<b>3</b>	<b>Chain drive</b>	<b>134</b>
3.1	Assembly overview - camshaft timing chains	134
3.2	Removing and installing camshaft timing chain	137
3.3	Assembly overview - drive chain for balance shaft	153
3.4	Removing and installing drive chain for balance shaft	156
3.5	Checking timing chain	156
3.6	Checking valve timing	157
<b>4</b>	<b>Valve gear</b>	<b>160</b>
4.1	Assembly overview - valve gear	160
4.2	Removing and installing camshaft	165
4.3	Installing ball for sliding piece	182
4.4	Removing and installing valve stem seals	183
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>194</b>
5.1	Checking valve guides	194
5.2	Checking valves	195
5.3	Valve dimensions	195
<b>17</b>	<b>- Lubrication</b>	<b>196</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>196</b>
1.1	Assembly overview - sump/oil pump	196
1.2	Removing and installing oil level and oil temperature sender G266	199
1.3	Removing and installing lower part of sump	200
1.4	Removing and installing oil pump	206
1.5	Removing and installing upper part of sump	209
1.6	Engine oil:	215
<b>2</b>	<b>Engine oil cooler</b>	<b>216</b>
2.1	Assembly overview - engine oil cooler	216
2.2	Removing and installing engine oil cooler	216
2.3	Removing and installing mechanical switching valve	218
<b>3</b>	<b>Crankcase ventilation</b>	<b>219</b>



3.1	Assembly overview - crankcase breather system	219
3.2	Removing and installing oil separator	220
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>221</b>
4.1	Assembly overview - oil filter	221
4.2	Assembly overview - oil pressure switches/oil pressure control	221
4.3	Removing and installing piston cooling jet control valve N522	223
4.4	Removing and installing oil pressure regulating valve N428	223
4.5	Removing and installing oil pressure switch	225
4.6	Checking oil pressure	229
<b>19</b>	<b>Cooling</b>	<b>234</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>234</b>
1.1	Connection diagram - coolant hoses	234
1.2	Draining and adding coolant	237
1.3	Checking cooling system for leaks	245
1.4	Flushing cooling system	248
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>272</b>
2.1	Assembly overview - coolant pump, thermostat	272
2.2	Assembly overview - electric coolant pump	274
2.3	Assembly overview - coolant temperature sender	276
2.4	Removing and installing toothed belt for coolant pump	277
2.5	Removing and installing coolant pump	280
2.6	Removing and installing auxiliary pump for heating V488	284
2.7	Removing and installing coolant shut-off valve N82	288
2.8	Removing and installing coolant valve for gearbox N488, vehicles with dual clutch gearbox	290
2.9	Removing and installing actuator for engine temperature regulation N493	292
2.10	Removing and installing coolant temperature sender G62	294
2.11	Removing and installing radiator outlet coolant temperature sender G83	296
<b>3</b>	<b>Coolant pipes</b>	<b>298</b>
3.1	Assembly overview - coolant pipes	298
3.2	Removing and installing front coolant pipe	298
3.3	Removing and installing upper coolant pipes	300
<b>4</b>	<b>Radiator, radiator fan</b>	<b>303</b>
4.1	Assembly overview - radiator/radiator fan	303
4.2	Removing and installing radiator	304
4.3	Removing and installing radiator cowl with radiator fan	308
4.4	Removing and installing radiator fan	312
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>313</b>
<b>1</b>	<b>Turbocharger</b>	<b>313</b>
1.1	Assembly overview - turbocharger	313
1.2	Removing and installing turbocharger	317
1.3	Removing and installing charge pressure positioner V465	321
1.4	Adjusting charge pressure positioner V465	322
<b>2</b>	<b>Charge air system</b>	<b>325</b>
2.1	Assembly overview - charge air system	325
2.2	Assembly overview - charge-air hose connections	327
2.3	Removing and installing charge air cooler	329
2.4	Removing and installing charge pressure sender G31	330
2.5	Checking charge air system for leaks	331
<b>24</b>	<b>Mixture preparation - injection</b>	<b>334</b>
<b>1</b>	<b>Injection system</b>	<b>334</b>
1.1	Overview of fitting locations - injection system	334



<b>2</b>	<b>Injectors</b>	<b>343</b>
2.1	Assembly overview - fuel rail with injectors	343
2.2	Removing and installing fuel rail	345
2.3	Removing and installing injectors	346
2.4	Renewing seals on injectors	352
2.5	Cleaning injectors	355
<b>3</b>	<b>Air filter</b>	<b>357</b>
3.1	Assembly overview - air filter housing	357
3.2	Removing and installing air filter housing	358
<b>4</b>	<b>Intake manifold</b>	<b>359</b>
4.1	Assembly overview – intake manifold	359
4.2	Removing and installing intake manifold	361
4.3	Removing and installing throttle valve module GX3	367
4.4	Cleaning throttle valve module	369
<b>5</b>	<b>Senders and sensors</b>	<b>371</b>
5.1	Assembly overview - actuator for structure-borne sound R214 and control unit for structure-borne sound J869	371
5.2	Removing and installing fuel pressure sender G247	373
5.3	Checking fuel pressure sender G247	376
5.4	Removing and installing fuel pressure sender for low-pressure G410	379
5.5	Removing and installing intake manifold sender GX9	380
<b>6</b>	<b>Engine control unit</b>	<b>381</b>
6.1	Removing and installing engine control unit J623	381
<b>7</b>	<b>High-pressure pump</b>	<b>383</b>
7.1	Assembly overview - high-pressure pump	383
7.2	Removing and installing high-pressure pump	385
7.3	Removing and installing high-pressure pipe	389
<b>8</b>	<b>Lambda probe</b>	<b>393</b>
8.1	Assembly overview - Lambda probe	393
8.2	Removing and installing Lambda probe	394
<b>26 - Exhaust system</b>		<b>397</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>397</b>
1.1	Assembly overview – silencers	397
1.2	Separating exhaust pipes from silencers	398
1.3	Aligning exhaust system free of stress	399
1.4	Checking exhaust system for leaks	400
<b>2</b>	<b>Emission control</b>	<b>401</b>
2.1	Assembly overview – emission control	401
2.2	Removing and installing catalytic converter	403
<b>28 - Ignition system</b>		<b>408</b>
<b>1</b>	<b>Ignition system</b>	<b>408</b>
1.1	Assembly overview - ignition system	408
1.2	Test data, spark plugs	410
1.3	Removing and installing ignition coils with output stage	410
1.4	Removing and installing knock sensor 1 G61	413
1.5	Removing and installing Hall sender	414
1.6	Removing and installing engine speed sender G28	415