



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
1 <b>Safety information</b> .....	1
1.1    Safety regulations for working on fuel supply .....	1
1.2    Safety measures when working on vehicles with start/stop system .....	2
1.3    Safety precautions when using testers and measuring instruments during a road test .....	3
1.4    Safety precautions when working on the cooling system .....	3
1.5    Safety precautions when working on exhaust system .....	3
2 <b>Identification</b> .....	5
2.1    Motor number/motor data .....	5
3 <b>Repair instructions</b> .....	7
3.1    Rules for cleanliness .....	7
3.2    Foreign objects in engine .....	7
3.3    Contact corrosion .....	7
3.4    Routing and attachment of lines .....	8
3.5    Fitting radiator and condensers .....	8
4 <b>Technical data</b> .....	10
4.1    Coolant .....	11
<b>10 - Removing and installing engine</b> .....	<b>13</b>
1 <b>Removing and installing engine</b> .....	13
1.1    Removing engine .....	13
1.2    Separating engine and gearbox .....	21
1.3    Securing engine on engine and gearbox support .....	26
1.4    Installing engine .....	28
2 <b>Assembly mountings</b> .....	32
2.1    Assembly overview - assembly mountings .....	32
2.2    Supporting engine in installation position .....	34
2.3    Removing and installing engine mounting .....	36
2.4    Removing and installing gearbox mounting .....	37
2.5    Removing and installing pendulum support .....	38
3 <b>Engine cover panel</b> .....	40
3.1    Removing and installing engine cover .....	40
<b>13 - Crankshaft group</b> .....	<b>41</b>
1 <b>Cylinder block (pulley end)</b> .....	41
1.1    Assembly overview - poly V-belt drive .....	41
1.2    Assembly overview - sealing flange, belt pulley end .....	43
1.3    Removing and installing poly-V belt .....	44
1.4    Removing and installing tensioner for poly V-belt .....	45
1.5    Removing and installing vibration damper .....	46
1.6    Removing and installing bracket for ancillaries .....	47
1.7    Removing and installing engine support .....	49
1.8    Removing and installing sealing flange on pulley end .....	51
2 <b>Cylinder block, gearbox end</b> .....	54
2.1    Assembly overview - cylinder block, gearbox end .....	54
2.2    Removing and installing flywheel .....	55
2.3    Removing and installing sealing flange on gearbox side .....	58
3 <b>Crankshaft</b> .....	71
3.1    Assembly overview - crankshaft .....	71
3.2    Crankshaft dimensions .....	73
3.3    Measuring axial clearance of crankshaft .....	73
3.4    Renewing needle bearing in crankshaft .....	74



<b>4</b>	<b>Pistons and conrods</b>	<b>77</b>
4.1	Assembly overview - pistons and conrods	77
4.2	Removing and installing pistons	81
4.3	Measuring piston projection at TDC	82
4.4	Checking pistons and cylinder bores	85
4.5	Checking radial clearance of conrods	87
<b>15 - Cylinder head, valve gear</b>	<b>88</b>	
1	<b>Cylinder head</b>	<b>88</b>
1.1	Assembly overview - cylinder head	88
1.2	Assembly overview - cylinder head cover	92
1.3	Removing and installing cylinder head cover	93
1.4	Removing and installing cylinder head	95
1.5	Removing and installing injector seals	103
1.6	Checking compression	104
1.7	Removing and installing camshaft housing	106
2	<b>Toothed belt drive</b>	<b>111</b>
2.1	Assembly overview - toothed belt cover	111
2.2	Assembly overview - toothed belt	111
2.3	Removing and installing toothed belt guard	113
2.4	Removing toothed belt from camshaft	115
2.5	Removing and installing toothed belt	119
3	<b>Valve gear</b>	<b>134</b>
3.1	Assembly overview - valve gear	134
3.2	Measuring axial play of camshaft	136
3.3	Removing and installing camshaft oil seal	137
3.4	Checking hydraulic compensation elements	139
3.5	Removing and installing valve stem seals	140
4	<b>Inlet and exhaust valves</b>	<b>149</b>
4.1	Checking valve guides	149
4.2	Checking valves	150
4.3	Valve dimensions	150
<b>17 - Lubrication</b>	<b>151</b>	
1	<b>Sump, oil pump</b>	<b>151</b>
1.1	Assembly overview - sump/oil pump	151
1.2	Engine oil:	153
1.3	Removing and installing oil sump	153
1.4	Removing and installing oil pump	160
1.5	Removing and installing oil level and oil temperature sender G266	164
2	<b>Engine oil cooler</b>	<b>166</b>
3	<b>Oil filter, oil pressure switch</b>	<b>167</b>
3.1	Assembly overview - oil filter housing, oil pressure switch	167
3.2	Removing and installing oil pressure switch F1	168
3.3	Checking oil pressure	169
3.4	Removing and installing oil filter housing	170
3.5	Removing and installing oil pressure regulating valve N428	174
<b>19 - Cooling</b>	<b>176</b>	
1	<b>Cooling system/coolant</b>	<b>176</b>
1.1	Connection diagram - coolant hoses	176
1.2	Checking cooling system for leaks	177
1.3	Draining coolant	181
1.4	Filling with coolant	182
1.5	Checking filling quality of cooling system	195

---



1.6	Checking electric vacuum pump VAS 6096/2 .....	197
1.7	Flushing cooling system .....	198
<b>2</b>	<b>Coolant pump, regulation of cooling system .....</b>	<b>223</b>
2.1	Assembly overview - coolant pump, thermostat .....	223
2.2	Assembly overview - coolant temperature sender .....	225
2.3	Assembly overview - electric coolant pump .....	226
2.4	Removing and installing coolant pump .....	227
2.5	Removing and installing thermostat .....	229
2.6	Removing and installing coolant valve for cylinder head N489 .....	230
2.7	Checking thermostat .....	231
2.8	Removing and installing coolant temperature sender G62 .....	231
2.9	Removing and installing electric coolant pump .....	233
<b>3</b>	<b>Coolant pipes .....</b>	<b>238</b>
3.1	Assembly overview - coolant pipes .....	238
<b>4</b>	<b>Radiator, radiator fan .....</b>	<b>239</b>
4.1	Assembly overview - radiator/radiator fan .....	239
4.2	Assembly overview – radiator cowl and radiator fan .....	241
4.3	Removing and installing radiator .....	242
4.4	Removing and installing radiator cowl .....	248
4.5	Removing and installing radiator fan .....	249
<b>21</b>	<b>- Turbocharging/supercharging .....</b>	<b>252</b>
<b>1</b>	<b>Turbocharger .....</b>	<b>252</b>
1.1	Assembly overview - turbocharger .....	252
1.2	Removing and installing turbocharger .....	257
1.3	Renewing vacuum unit for turbocharger .....	265
<b>2</b>	<b>Charge air system .....</b>	<b>276</b>
2.1	Assembly overview - charge air system .....	276
2.2	Removing and installing charge air cooler .....	278
2.3	Removing and installing bracket for charge air cooler .....	279
2.4	Removing and installing charge air temperature sender .....	280
2.5	Removing and installing charge pressure sender G31 .....	281
2.6	Checking charge air system for leaks .....	282
2.7	Checking charge air cooler for leaks .....	285
<b>23</b>	<b>- Mixture preparation - injection .....</b>	<b>291</b>
<b>1</b>	<b>Injection system .....</b>	<b>291</b>
1.1	Overview of fitting locations - injection system .....	291
1.2	Schematic overview - fuel system .....	295
1.3	Filling/bleeding fuel system .....	296
1.4	Checking fuel system for leaks .....	297
<b>2</b>	<b>Vacuum system .....</b>	<b>298</b>
2.1	Connection diagram – vacuum system .....	298
2.2	Checking vacuum system .....	298
<b>3</b>	<b>Injectors/high-pressure accumulator (rail) .....</b>	<b>300</b>
3.1	Assembly overview - injectors .....	300
3.2	Assembly overview - fuel rail .....	302
3.3	Removing and installing injectors .....	303
3.4	Removing and installing high-pressure lines .....	308
3.5	Testing jammed-open injectors .....	311
3.6	Checking return flow rate of injectors with engine running .....	313
3.7	Removing and installing fuel rail .....	315
<b>4</b>	<b>Air filter .....</b>	<b>319</b>
4.1	Assembly overview - air filter housing .....	319
4.2	Removing and installing air filter housing .....	321



<b>5</b>	<b>Intake manifold</b>	<b>323</b>
5.1	Assembly overview – intake manifold	323
5.2	Removing and installing throttle valve module J338	323
5.3	Removing and installing intake manifold	325
<b>6</b>	<b>Senders and sensors</b>	<b>331</b>
6.1	Removing and installing fuel temperature sender G81	331
6.2	Removing and installing air mass meter G70	331
6.3	Removing and installing fuel pressure regulating valve N276	333
6.4	Removing and installing fuel pressure sender G247	334
6.5	Removing and installing pressure differential sender G505	336
6.6	Removing and installing exhaust gas pressure sensor 1 G450	337
<b>7</b>	<b>Engine control unit</b>	<b>339</b>
7.1	Assembly overview – engine/motor control unit	339
7.2	Removing and installing engine control unit J623	340
7.3	Removing and installing engine (motor) control unit J623 with protective housing	341
<b>8</b>	<b>High-pressure pump</b>	<b>343</b>
8.1	Assembly overview - high-pressure pump	343
8.2	Removing and installing high-pressure pump	345
<b>9</b>	<b>Lambda probe</b>	<b>351</b>
9.1	Assembly overview - Lambda probe	351
9.2	Removing and installing Lambda probe	352
<b>26 - Exhaust system</b>		<b>357</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>357</b>
1.1	Assembly overview – silencers	357
1.2	Separating exhaust pipes from silencers	358
1.3	Removing and installing silencer	360
1.4	Removing and installing front exhaust pipe	361
1.5	Aligning exhaust system free of stress	363
1.6	Installation position of clamp	364
1.7	Align end exhaust pipes	365
1.8	Checking exhaust system for leaks	365
<b>2</b>	<b>Emission control</b>	<b>366</b>
2.1	Assembly overview – emission control	366
2.2	Removing and installing emission control module	369
2.3	Removing and installing particulate filter	375
2.4	Removing and installing exhaust flap control unit J883	378
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>380</b>
3.1	Assembly overview – exhaust gas temperature regulation	380
3.2	Removing and installing exhaust gas temperature sender	382
<b>4</b>	<b>Exhaust gas recirculation</b>	<b>387</b>
4.1	Assembly overview – exhaust gas recirculation	387
4.2	Removing and installing exhaust gas recirculation cooler	393
4.3	Removing and installing exhaust gas recirculation control motor V338	399
4.4	Removing and installing exhaust gas recirculation control motor 2 V339	401
4.5	Checking exhaust gas recirculation cooler for leaks	403
<b>28 - Glow plug system</b>		<b>404</b>
<b>1</b>	<b>Glow plug system</b>	<b>404</b>
1.1	Assembly overview – glow plug system	404
1.2	Removing and installing glow plug	405
1.3	Removing and installing automatic glow period control unit J179	409
1.4	Removing and installing knock sensor 1 G61	409
1.5	Removing and installing Hall sender G40	410

---



---

1.6	Removing and installing engine speed sender G28 .....	411
-----	---	-----