



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety measures when working on vehicles with start/stop system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
20 - Fuel supply system	5
1 Fuel	5
1.1 Assembly overview - fuel tank	5
1.2 Emptying fuel tank	12
1.3 Removing and installing fuel tank	24
2 Fuel delivery unit, fuel gauge sender	35
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	35
2.2 Removing and installing fuel delivery unit, fuel gauge sender	40
2.3 Removing and installing fuel gauge sender G	52
3 Plug-in connectors	56
3.1 Separating plug-in connectors	56
4 Fuel filter	63
4.1 Assembly overview - fuel filter	63
4.2 Removing and installing fuel filter	63
5 Activated charcoal filter system	66
5.1 Assembly overview – activated charcoal filter system	66
5.2 Removing and installing activated charcoal filter	69
5.3 Checking fuel tank breather	71
6 Accelerator pedal	77
6.1 Assembly overview - accelerator module	77
6.2 Removing and installing accelerator pedal module GX2	77
7 Fuel pump	80
7.1 Checking fuel system pressurisation pump G6	80