

001 - Airbag systems , (L0L)	1-6
1. Airbag systems , (L0L)	1
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Side airbag igniter on driver side, Side airbag igniter on front passenger side	2
3. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	3
4. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate airbag on front passenger side, Airbag control unit	4
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	5
6. Airbag control unit, Onboard supply control unit, Dash panel insert, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Diagnostic connection	6
002 - Gas discharge headlights with automatic headlight range control , (8IG)	7-10
1. Gas discharge headlights with automatic headlight range control , (8IG)	7
2. Headlight range control unit, Onboard supply control unit, Left gas discharge (xenon) bulb, Left LED module for daytime running light and side light, Front left headlight, Left headlight range control motor, Left dip beam screen motor	8
3. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	9
4. Headlight range control unit, Onboard supply control unit, Right gas discharge (xenon) bulb, Right LED module for daytime running light and side light, Front right headlight, Right headlight range control motor, Right dip beam screen motor	10
003 - Radiator fan with air conditioning system , CHYA,CHYB,CJZC,CJZD,CUSB,CUSA,CUTA,CWVB	11-12
1. Radiator fan with air conditioning system , CHYA,CHYB,CJZC,CJZD,CUSB,CUSA,CUTA,CWVB	11
2. Radiator fan thermal switch, Climatronic control unit, Radiator fan control unit, Air conditioning system control unit, Engine control unit, Radiator fan	12
004 - Anti-lock brake system (ABS)	13-18
1. Anti-lock brake system (ABS)	13
2. ABS control unit, ABS hydraulic unit, Front right ABS inlet valve, Front right ABS outlet valve, Fuse 3 on fuse holder B, Fuse 10 on fuse holder B, Fuse 39 on fuse holder C, Fuse 47 on fuse holder C, ABS return flow pump	14
3. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Vehicle stabilization program switch valve 1	15
4. Button for TCS and electronic stabilisation program, Tyre Pressure Loss Indicator button, Yaw rate sender, ABS control unit, Rear left ABS outlet valve	16
5. Steering angle sender, Lateral acceleration sender, Brake pressure sender 1, Longitudinal acceleration sender, Rotor position sender for active steering motor, ABS control unit, Power steering control unit, Onboard supply control unit	17
6. Brake fluid level warning contact, Control unit in dash panel insert, Onboard supply control unit, Dash panel insert	18
005 - Power assisted steering , (1N1),(1N3)	19-21
1. Power assisted steering , (1N1),(1N3)	19
2. Ignition/starter switch, Steering moment sender, Rotor position sender for active steering motor, Power steering control unit, Active steering motor	20
3. Onboard supply control unit, Dash panel insert	21
006 - Dynamic Chassis Control , (2H4)	22-24
1. Dynamic Chassis Control , (2H4)	22
2. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	23
3. Driving mode selection button, Electronically controlled damping control unit, Onboard supply control unit	24
007 - Climatronic , (9AK)	25-29
1. Climatronic , (9AK)	25
2. Sunlight penetration photosensor, Fresh air blower control unit, Climatronic control unit, Fresh air blower, Air flow flap control motor	26
3. Climatronic control unit, Onboard supply control unit, Centre flap control motor, Defroster flap control motor	27
4. Centre vent temperature sender, Footwell vent temperature sender, Humidity sender for air conditioning system, Evaporator output temperature sender, Climatronic control unit, Temperature flap control motor	28
5. High-pressure sender, Climatronic control unit	29
008 - Earthing concept	30-48
1. Earthing concept	30
2. Battery, Radiator fan thermal switch, Treble horn, Bass horn, Battery monitor control unit, Left fog light bulb, Front left headlight, Earth strap, battery - body, Earth connection 1, in engine compartment wiring harness	31

3. High-pressure sender, Radiator fan control unit, Air conditioner compressor regulating valve, Radiator fan, Headlight washer system pump, Earth connection 1, in engine compartment wiring harness	32
4. Bonnet contact switch, ABS control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Left washer jet heater element, Right washer jet heater element, Earth connection, in right side engine compartment wiring harness, Earth point 1, on front of right longitudinal member	33
5. Selector lever, Brake light switch, Oil level and oil temperature sender, Clutch position sender, Automatic glow period control unit, Gearbox, Coolant circulation pump, Coolant circulation pump 2	34
6. Automatic gearbox control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	35
7. Rain and light sensor, Anti-theft alarm sensor, Onboard supply control unit, Centre interior light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Automatic anti-dazzle interior mirror	36
8. Fresh air blower control unit, Onboard supply control unit, Windscreen wiper motor, Fresh air blower	37
9. Fuel delivery unit, Cigarette lighter, Heated seat cushion for driver seat, Heated seat cushion for front passenger seat	38
10. Driving mode selection button, Alarm horn, Electronically controlled damping control unit, Climatronic control unit, Air conditioning system control unit, Headlight range control unit, Fuel pump control unit, Heated front seats control unit, Rear centre reading light	39
11. Rotary light switch, Steering column combination switch, Headlight washer system relay, Heater control unit, Control unit in dash panel insert, Adaptive cruise control unit, Diagnostic connection	40
12. Headlight range control and instrument illumination regulator, Heated driver seat regulator, Heated front passenger seat regulator, Hazard warning lights button	41
13. Heated rear window button, Button for TCS and electronic stabilisation program, Parking aid button, Tyre Pressure Loss Indicator button, Start/Stop operation button	42
14. Multimedia system operating unit, Power steering control unit, Control unit 1 for information electronics, Amplifier, Reversing camera	43
15. Trailer detector control unit, Parking aid control unit, Left tail light, Right tail light, Trailer socket, Left number plate light, Right number plate light	44
16. Ignition coil 1 with output stage, Ignition coil 2 with output stage	45
17. Driver side interior locking button for central locking system, Driver side central locking lock unit, Driver door control unit, Central locking SAFELOCK function warning lamp	46
18. Rear left central locking lock unit, Rear right central locking lock unit	47
19. Front passenger side central locking lock unit, Front passenger door control unit	48
009 - Basic equipment , (L0L)	49-68
1. Basic equipment , (L0L)	49
2. Onboard supply control unit	50
3. Ignition/starter switch, Selector lever, Steering column combination switch, Onboard supply control unit, Terminal 15 relay, Ignition key withdrawal lock solenoid	51
4. Headlight dipper and flasher switch, Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Onboard supply control unit	52
5. Intermittent wiper switch, Rear wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Onboard supply control unit	53
6. Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Horn plate, Onboard supply control unit, Washer pump relay, Windscreen and rear window washer pump	54
7. Rotary light switch, Fog light switch, Headlight range control and instrument illumination regulator, Rear fog light switch, Onboard supply control unit, Headlight range control regulator illumination bulb	55
8. Treble horn, Bass horn, Onboard supply control unit, Left daytime running light bulb, Front left headlight, Left headlight range control motor	56
9. Onboard supply control unit, Right daytime running light bulb, Front right headlight, Right headlight range control motor, Left washer jet heater element, Right washer jet heater element	57
10. Hazard warning lights button, Heated rear window button, Bonnet contact switch, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter	58
11. Reversing light switch, Onboard supply control unit, Left exterior mirror, Right exterior mirror	59
12. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Windscreen wiper motor, Left number plate light, Right number plate light	60
13. Onboard supply control unit, Left tail light, Right tail light	61
14. Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Luggage compartment light	62
15. Anti-dazzle interior mirror button, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rain and light sensor, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Automatic anti-dazzle interior mirror	63

16. Onboard supply control unit, Front left footwell light, Front right footwell light, Front passenger reading light	64
17. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Terminal 75x voltage supply relay, Rear centre reading light	65
18. Onboard supply control unit, Diagnostic connection	66
19. Heater/heat output switch, Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	67
20. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	68
010 - Trailer coupling , (1D2)	69-71
1. Trailer coupling , (1D2)	69
2. Ignition/starter switch, Trailer detector control unit, Onboard supply control unit	70
3. Trailer detector control unit, Trailer socket	71
011 - Parking aid (PDC) , (7X1),(7X2)	72-75
1. Parking aid (PDC) , (7X1),(7X2)	72
2. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	73
3. Parking aid button, Parking aid control unit, Onboard supply control unit	74
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	75
012 - Dual clutch gearbox 0CW , (0EG)	76-81
1. Dual clutch gearbox 0CW , (0EG)	76
2. Ignition/starter switch, Engine control unit, Mechatronic unit for dual clutch gearbox	77
3. Mechatronic unit for dual clutch gearbox	78
4. Selector lever, Ignition key withdrawal lock solenoid	79
5. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	80
6. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit, Onboard supply control unit	81
013 - Fuse assignment	82-101
1. Fuse assignment	82
2. Battery, Battery monitor control unit, Battery isolation igniter, Fuse holder H, Terminal 30 wiring junction 2	83
3. Alternator with voltage regulator, Fuse 1 (30), Fuse holder A, Terminal 30 wiring junction 2	84
4. Automatic gearbox control unit, Fuse holder B	85
5. Fuse holder B	86
6. Fuse holder B	87
7. Fuse holder B	88
8. Fuse holder B	89
9. Fuse holder B	90
10. Fuse holder C	91
11. Fuse holder C	92
12. Fuse holder C	93
13. Fuse holder C	94
14. Fuse holder C	95
15. Fuse holder C	96
16. Fuse holder C	97
17. Fuse holder C	98
18. Fuse holder C	99
19. Fuse holder C, Fuse holder D	100
20. Fuse holder F	101
014 - Seat heating , (4A3)	102-105
1. Seat heating , (4A3)	102
2. Onboard supply control unit, Heated front seats control unit, Fuse holder C	103
3. Heated driver seat regulator, Heated front passenger seat regulator, Heated front seats control unit	104
4. Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	105
015 - Convenience system , (L0L)	106-117
1. Convenience system , (L0L)	106
2. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Fuse 51 on fuse holder C, Rear lid central locking motor, Luggage compartment light	107
3. Central locking button, Driver side central locking lock unit, Onboard supply control unit, Central locking SAFELock function warning lamp	108

4. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	109
5. Front left window regulator switch, Front right window regulator switch in driver door, Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit, Driver side window regulator motor	110
6. Rear left door contact switch, Rear left central locking lock unit, Onboard supply control unit, Rear left door central locking motor, lock	111
7. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Rear left door control unit, Rear right door control unit, Onboard supply control unit, Rear left window regulator motor, Rear right window regulator motor	112
8. Interior monitoring deactivation switch, Rear right door contact switch, Rear right central locking lock unit, Onboard supply control unit, Tank filler flap locking motor, Rear right door central locking motor, lock, Centre interior light	113
9. Front passenger side central locking lock unit, Onboard supply control unit	114
10. Window regulator switch in front passenger door, Anti-theft alarm sensor, Alarm horn, Front passenger door control unit, Onboard supply control unit, Front passenger side window regulator motor	115
11. Onboard supply control unit, Left exterior mirror, Right exterior mirror	116
12. Onboard supply control unit, Left exterior mirror	117
016 - Air conditioning system , (9AB)	118-121
1. Air conditioning system , (9AB)	118
2. Fresh air blower switch, Air conditioning system control unit, Onboard supply control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower	119
3. High-pressure sender, Air conditioning system control unit	120
4. Evaporator output temperature sender, Air conditioning system control unit, Fresh air and air recirculation flap control motor	121
017 - Radio navigation system	122-127
1. Radio navigation system	122
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	123
3. Control unit 1 for information electronics, Connection for external audio sources	124
4. Control unit 1 for information electronics, Rear left bass loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	125
5. Control unit 1 for information electronics, Roof aerial, Rear right bass loudspeaker, Front right treble loudspeaker, GPS aerial	126
6. Onboard supply control unit, Control unit 1 for information electronics, Telephone microphone, Left aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire	127
018 - 1.0l petrol engine , CHYA,CHYB	128-141
1. 1.0l petrol engine , CHYA,CHYB	128
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	129
3. Main relay, Fuse holder B	130
4. Start/Stop operation button, Driving mode selection button, Onboard supply control unit	131
5. Engine/motor control unit	132
6. Steering column combination switch, Accelerator pedal module, Engine/motor control unit	133
7. Brake light switch, Clutch position sender, Engine/motor control unit	134
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator fan control unit, Engine/motor control unit	135
9. Throttle valve module, Coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	136
10. Intake manifold sender, Hall sender, Intake manifold pressure sender, Engine/motor control unit	137
11. Engine speed sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1	138
12. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Camshaft control valve 1	139
13. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	140
14. Oil pressure switch, Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Engine/motor control unit, Dash panel insert	141
019 - Reversing camera (Rear Assist) , (KA1)	142-143
1. Reversing camera (Rear Assist) , (KA1)	142
2. Onboard supply control unit, Control unit 1 for information electronics, Reversing camera	143
020 - 1.2l petrol engine , CJZC,CJZD	144-158
1. 1.2l petrol engine , CJZC,CJZD	144
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	145
3. Main relay, Fuse holder B	146
4. Start/Stop operation button. Driving mode selection button. Onboard supply control unit	147

5. Engine/motor control unit, Vacuum pump for brakes	148
6. Steering column combination switch, Accelerator pedal module, Engine/motor control unit	149
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	150
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	151
9. Oil pressure switch for reduced oil pressure, Throttle valve module, Gearbox neutral position sender, Engine/motor control unit	152
10. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	153
11. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	154
12. Engine speed sender, Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	155
13. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve	156
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	157
15. Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Engine/motor control unit, Dash panel insert, Charge air cooling pump	158
021 - Multifunction steering wheel , (2FS),(2FW),(2PK),(2PU),(1XX),(2ZH)	159-161
1. Multifunction steering wheel , (2FS),(2FW),(2PK),(2PU),(1XX),(2ZH)	159
2. Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Driver side airbag igniter	160
3. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction indicator, Multifunction steering wheel control unit, Onboard supply control unit, Dash panel insert	161
022 - 1.4l diesel engine , CUSA,CUSB,CUTA	162-182
1. 1.4l diesel engine , CUSA,CUSB,CUTA	162
2. Battery, Starter, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	163
3. Terminal 30 voltage supply relay, High heat output relay, Fuse holder B, Auxiliary air heater element	164
4. Fuse holder B	165
5. Start/Stop operation button, Driving mode selection button, Onboard supply control unit	166
6. Engine/motor control unit	167
7. Steering column combination switch, Radiator fan control unit, Multifunction steering wheel control unit, Engine/motor control unit	168
8. Brake light switch, Oil level and oil temperature sender, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	169
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	170
10. Accelerator pedal module, Exhaust gas temperature sender 3, Engine/motor control unit, Exhaust flap control unit	171
11. Air mass meter, Gearbox neutral position sender, Engine/motor control unit, Heater element for crankcase breather	172
12. Automatic glow period control unit, Engine/motor control unit, Charge pressure control solenoid valve, Variable intake manifold flap changeover valve	173
13. Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	174
14. Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3	175
15. Charge pressure sender, Coolant temperature sender, Fuel temperature sender, Exhaust gas pressure sensor 1, Charge air temperature sender before charge air cooler, Engine/motor control unit	176
16. Engine speed sender, Hall sender, Fuel pressure sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	177
17. Throttle valve module, Exhaust gas recirculation valve 2, Variable intake manifold position sender, Engine/motor control unit	178
18. Exhaust gas recirculation valve 1, Knock sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	179
19. Oil pressure switch, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	180
20. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	181
21. Fuel delivery unit, Fuel gauge, Coolant temperature gauge, Fuel system pressurisation pump, Fuel pump relay, Engine/motor control unit, Dash panel insert	182
023 - Radiator fan, one-speed	183-184
1. Radiator fan. one-speed	183

2. Radiator fan thermal switch, Radiator fan	184
024 - Sliding sunroof , (3FB)	185-186
1. Sliding sunroof , (3FB)	185
2. Sliding sunroof adjustment, Sliding sunroof adjustment regulator, Sunroof button, Sliding sunroof adjustment control unit, Onboard supply control unit, Sliding sunroof motor	186
025 - Data bus network	187-192
1. Data bus network	187
2. Onboard supply control unit	188
3. Onboard supply control unit, Amplifier, Diagnostic connection, Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	189
4. Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	190
5. Multimedia system operating unit, Connection 1 (powertrain CAN bus, high), in main wiring harness, Connection 1 (powertrain CAN bus, low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	191
6.	192
026 - Radiator fan, two-speed	193-194
1. Radiator fan, two-speed	193
2. Radiator fan thermal switch, Radiator fan	194
027 - Headlight washer system , (8X1)	195-197
1. Headlight washer system , (8X1)	195
2. Intermittent wiper switch, Rear wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Headlight washer system relay, Onboard supply control unit, Headlight washer system pump	196
3. Windscreen washer fluid level sender, Onboard supply control unit, Washer fluid level warning lamp	197
028 - Adaptive cruise control , (8T3),(8T5)	198-199
1. Adaptive cruise control , (8T3),(8T5)	198
2. Adaptive cruise control unit, Onboard supply control unit	199
029 - Radiator fan , CUSA,CUSB,CUTA,DAJA,DAJB,CHZB,CHZC	200-201
1. Radiator fan , CUSA,CUSB,CUTA,DAJA,DAJB,CHZB,CHZC	200
2. Radiator fan control unit, Radiator fan, Radiator fan 2	201
030 - 1.4l petrol engine , CZEA	202-218
1. 1.4l petrol engine , CZEA	202
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	203
3. Main relay, Fuse holder B	204
4. Start/Stop operation button, Driving mode selection button, Onboard supply control unit	205
5. Engine/motor control unit	206
6. Steering column combination switch, Accelerator pedal module, Engine/motor control unit	207
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	208
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	209
9. Oil pressure switch for reduced oil pressure, Throttle valve module, Gearbox neutral position sender, Engine/motor control unit	210
10. Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	211
11. Hall sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	212
12. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit	213
13. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	214
14. Engine/motor control unit	215
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	216
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	217
17. Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Engine/motor control unit, Dash panel insert, Charge air cooling pump	218
031 - Basic equipment , (LOR)	219-238
1. Basic equipment , (LOR)	219
2. Onboard supply control unit	220
3. Ignition/starter switch. Selector lever. Steering column combination switch. Onboard supply	221

control unit, Terminal 15 relay, Ignition key withdrawal lock solenoid	
4. Headlight dipper and flasher switch, Cruise control system switch, Cruise control system (CCS) SET button, Steering column combination switch, Onboard supply control unit	222
5. Intermittent wiper switch, Rear wiper switch, Washer pump switch (automatic wash/wipe and headlight washer system), Steering column combination switch, Onboard supply control unit	223
6. Multifunction display call-up button, Multifunction display memory switch, Steering column combination switch, Horn plate, Onboard supply control unit, Washer pump relay, Windscreen and rear window washer pump	224
7. Rotary light switch, Fog light switch, Headlight range control and instrument illumination regulator, Rear fog light switch, Onboard supply control unit, Headlight range control regulator illumination bulb	225
8. Treble horn, Bass horn, Onboard supply control unit, Left daytime running light bulb, Front left headlight, Left headlight range control motor	226
9. Onboard supply control unit, Right daytime running light bulb, Front right headlight, Right headlight range control motor, Left washer jet heater element, Right washer jet heater element	227
10. Hazard warning lights button, Heated rear window button, Bonnet contact switch, Onboard supply control unit, Cigarette lighter illumination bulb, Cigarette lighter	228
11. Onboard supply control unit, Left fog light bulb, Left exterior mirror, Right exterior mirror	229
12. Reversing light switch, Onboard supply control unit, Right fog light bulb, Windscreen wiper motor, Left number plate light, Right number plate light	230
13. Onboard supply control unit, Left tail light, Right tail light	231
14. Rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear window wiper motor, Luggage compartment light	232
15. Anti-dazzle interior mirror button, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Rain and light sensor, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Automatic anti-dazzle interior mirror	233
16. Onboard supply control unit, Front left footwell light, Front right footwell light, Front passenger reading light	234
17. Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit, Terminal 75x voltage supply relay, Rear centre reading light	235
18. Onboard supply control unit, Diagnostic connection	236
19. Heater/heat output switch, Heater control unit, Fresh air blower series resistor with overheating fuse, Fresh air blower, Fresh air and air recirculation flap control motor	237
20. Immobiliser reader coil, Parking brake contact switch, Control unit in dash panel insert, Dash panel insert	238
032 - Airbag systems , (L0R)	239-244
1. Airbag systems , (L0R)	239
2. Airbag control unit, Front passenger side airbag deactivated warning lamp, Side airbag igniter on driver side, Side airbag igniter on front passenger side	240
3. Crash sensor for driver side airbag, Crash sensor for passenger side airbag, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	241
4. Driver side belt switch, Front passenger side belt switch, Key operated switch to deactivate front passenger side airbag, Seat occupied sensor, front passenger side, Airbag control unit	242
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	243
6. Airbag control unit, Onboard supply control unit, Dash panel insert, Driver side airbag igniter, Front passenger side airbag igniter 1, Diagnostic connection	244
033 - Convenience system , (L0R)	245-256
1. Convenience system , (L0R)	245
2. Rear lid handle release button, Rear lid lock unit, Onboard supply control unit, Fuse 51 on fuse holder C, Rear lid central locking motor, Luggage compartment light	246
3. Central locking button, Driver side central locking lock unit, Onboard supply control unit, Central locking SAFELOCK function warning lamp	247
4. Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit	248
5. Front left window regulator switch, Front right window regulator switch in driver door, Operating unit for window regulator in driver door, Driver door control unit, Onboard supply control unit, Driver side window regulator motor	249
6. Rear left door contact switch, Rear left central locking lock unit, Onboard supply control unit, Rear left door central locking motor, lock	250
7. Rear left window regulator switch, in door, Rear right window regulator switch, in door, Rear left door control unit, Rear right door control unit, Onboard supply control unit, Rear left window regulator motor, Rear right window regulator motor	251
8. Interior monitoring deactivation switch, Rear right door contact switch, Rear right central locking lock unit. Onboard supply control unit. Tank filler flap locking motor. Rear right door	252

central locking motor, lock, Centre interior light	
9. Front passenger side central locking lock unit, Onboard supply control unit	253
10. Window regulator switch in front passenger door, Anti-theft alarm sensor, Alarm horn, Front passenger door control unit, Onboard supply control unit, Front passenger side window regulator motor	254
11. Onboard supply control unit, Left exterior mirror, Right exterior mirror	255
12. Onboard supply control unit, Alarm horn relay, Right exterior mirror	256
034 - 6-speed automatic gearbox , (0ID)	257-262
1. 6-speed automatic gearbox , (0ID)	257
2. Multifunction switch, Automatic gearbox control unit, Gearbox	258
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	259
4. Automatic gearbox control unit, Engine control unit, Gearbox, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 4	260
5. Selector lever, Onboard supply control unit, Ignition key withdrawal lock solenoid, Fuse holder C	261
6. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	262
035 - Preparation for mobile telephone , (9ZX),(9IE),(9IF),(9ZE)	263-264
1. Preparation for mobile telephone , (9ZX),(9IE),(9IF),(9ZE)	263
2. Control unit 1 for information electronics, Two-way signal amplifier for mobile telephone/data services, GSM aerial, Storage compartment with interface for mobile telephone, Fuse holder C	264
036 - Preparation for radio navigation system , (7UN)	265-267
1. Preparation for radio navigation system , (7UN)	265
2. Onboard supply control unit, Control unit 1 for information electronics, Control unit for navigation system, Navigation system interface	266
3. Control unit for navigation system, Aerial	267
037 - 1.8l petrol engine , DAJA,DAJB	268-289
1. 1.8l petrol engine , DAJA,DAJB	268
2. Battery, Starter, Airbag control unit, Battery isolation igniter, Fuse holder H	269
3. Engine component current supply relay, Fuse holder B	270
4. Main relay, Starter relay 1, Starter relay 2, Fuse holder B	271
5. Engine control unit, Coolant shut-off valve, Fuse holder B	272
6. Radiator outlet coolant temperature sender, Engine control unit	273
7. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Accelerator position sender 2, Engine control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	274
8. Oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine control unit	275
9. Brake light switch, Oil level and oil temperature sender, Clutch position sender, Engine control unit	276
10. Engine control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	277
11. Throttle valve module, Engine control unit, Actuator for engine temperature regulation	278
12. Gearbox neutral position sender, Engine control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	279
13. Charge pressure sender, Engine control unit	280
14. Intake manifold sender, Engine control unit, Charge pressure positioner	281
15. Engine control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	282
16. Fuel pressure sender for low pressure, Engine control unit, Ignition coil 4 with output stage, Auxiliary pump for heating	283
17. Engine speed sender, Hall sender 3, Engine control unit	284
18. Engine control unit, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	285
19. Knock sensor 1, Coolant temperature sender, Engine control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Intake manifold flap valve, Exhaust camshaft control valve 1, Radiator fan	286
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Valve for oil pressure control, Piston cooling jet control valve	287
21. Cruise control system (CCS) SET button, Steering column combination switch, Onboard supply control unit, Engine control unit, Control unit for structure-borne sound, Actuator for structure-borne sound	288

22. Fuel gauge sender, Fuel system pressurisation pump, Dash panel insert	289
038 - 1.6l petrol engine , CWVB	290-303
1. 1.6l petrol engine , CWVB	290
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	291
3. Main relay, Fuse holder B	292
4. Onboard supply control unit, Engine/motor control unit	293
5. Accelerator pedal module, Engine/motor control unit	294
6. Steering column combination switch, Brake light switch, Clutch position sender, Engine/motor control unit, Gearbox	295
7. Oil pressure switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Coolant temperature sender, Engine/motor control unit	296
8. Throttle valve module, Engine/motor control unit	297
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	298
10. Intake manifold sender, Hall sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit	299
11. Engine speed sender, Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1	300
12. Engine/motor control unit, Ignition coil 1 with output stage, Camshaft control valve 1	301
13. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage	302
14. Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Dash panel insert	303
039 - 1.0l petrol engine , CHZB,CHZC	304-317
1. 1.0l petrol engine , CHZB,CHZC	304
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	305
3. Main relay, Fuse holder B	306
4. Start/Stop operation button, Onboard supply control unit	307
5. Radiator outlet coolant temperature sender, Engine/motor control unit	308
6. Steering column combination switch, Accelerator pedal module, Engine/motor control unit	309
7. Brake light switch, Lambda probe 1 before catalytic converter, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	310
8. Throttle valve module, Lambda probe 1 after catalytic converter, Coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	311
9. Hall sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	312
10. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2	313
11. Oil pressure sender, Knock sensor 1, Engine/motor control unit, Injector, cylinder 3, Activated charcoal filter solenoid valve 1	314
12. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Charge air cooling pump	315
13. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	316
14. Fuel delivery unit, Fuel gauge, Coolant temperature gauge, Fuel system pressurisation pump, Dash panel insert	317
040 - LED headlights , (8IT)	318-321
1. LED headlights , (8IT)	318
2. Output module 1 for left LED headlight, Headlight range control unit, Onboard supply control unit, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	319
3. Rear left vehicle level sender, Headlight range control unit, Onboard supply control unit	320
4. Output module 1 for right LED headlight, Headlight range control unit, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	321
041 - 1.4l diesel engine , CYZA,CYZB	322-340
1. 1.4l diesel engine , CYZA,CYZB	322
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	323
3. High heat output relay, Fuse holder B, Auxiliary air heater element	324
4. Terminal 30 voltage supply relay, Fuse holder B	325
5. Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Fuse holder C	326
6. Onboard supply control unit, Engine/motor control unit	327
7. Steering column combination switch, Knock sensor 1, Engine/motor control unit, Heater element for crankcase breather	328
8. Brake light switch. Oil level and oil temperature sender. Clutch position sender. Engine/motor	329

control unit	
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	330
10. Accelerator pedal module, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control	331
11. Air mass meter, Exhaust gas temperature sender 3, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	332
12. Automatic glow period control unit, Engine/motor control unit, Charge pressure control solenoid valve, Glow plug 1, Glow plug 2, Glow plug 3, Charge pressure positioner	333
13. Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	334
14. Coolant temperature sender, Exhaust gas temperature sender 1, Fuel pressure sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	335
15. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Charge pressure sender, Pressure differential sender, Engine/motor control unit	336
16. Throttle valve module, Exhaust gas recirculation valve 1, Variable intake manifold position sender, Engine/motor control unit	337
17. Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	338
18. Oil pressure switch, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	339
19. Fuel delivery unit, Fuel gauge, Coolant temperature gauge, Fuel system pressurisation pump, Engine/motor control unit, Dash panel insert	340
042 - Radio navigation system	341-347
1. Radio navigation system	341
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	342
3. Control unit 1 for information electronics, Connection for external audio sources	343
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Connection for external audio sources	344
5. Control unit 1 for information electronics, Rear left loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	345
6. Control unit 1 for information electronics, Roof aerial, Telephone microphone, GPS aerial	346
7. Onboard supply control unit, Control unit 1 for information electronics, Left aerial module, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire	347
043 - 1.2l petrol engine , CJZC,CJZD	348-362
1. 1.2l petrol engine , CJZC,CJZD	348
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	349
3. Main relay, Fuse holder B	350
4. Start/Stop operation button, Driving mode selection button, Onboard supply control unit	351
5. Engine/motor control unit, Vacuum pump for brakes	352
6. Steering column combination switch, Accelerator pedal module, Engine/motor control unit	353
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	354
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	355
9. Oil pressure switch for reduced oil pressure, Throttle valve module, Gearbox neutral position sender, Engine/motor control unit	356
10. Hall sender, Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	357
11. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Intake air temperature sender 2, Engine/motor control unit	358
12. Engine speed sender, Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	359
13. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve	360
14. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	361
15. Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Engine/motor control unit, Dash panel insert, Charge air cooling pump	362
044 - 1.4l petrol engine , CZEA	363-379
1. 1.4l petrol engine , CZEA	363
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	364
3. Main relay, Fuse holder B	365
4. Start/Stop operation button, Driving mode selection button, Onboard supply control unit	366
5. Engine/motor control unit, Vacuum pump for brakes	367

6. Steering column combination switch, Accelerator pedal module, Engine/motor control unit	368
7. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	369
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	370
9. Oil pressure switch for reduced oil pressure, Throttle valve module, Gearbox neutral position sender, Engine/motor control unit	371
10. Coolant temperature sender, Engine/motor control unit, Charge pressure positioner	372
11. Hall sender, Fuel pressure sender, Hall sender 3, Engine/motor control unit	373
12. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Engine/motor control unit	374
13. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	375
14. Engine/motor control unit	376
15. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	377
16. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	378
17. Fuel gauge, Fuel delivery unit, Coolant temperature gauge, Fuel system pressurisation pump, Engine/motor control unit, Dash panel insert, Charge air cooling pump	379
045 - Sound system , (9VG)	380-383
1. Sound system , (9VG)	380
2. Control unit 1 for information electronics, Amplifier, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	381
3. Control unit 1 for information electronics, Rear left loudspeaker, Rear right loudspeaker, Amplifier	382
4. Onboard supply control unit, Control unit 1 for information electronics, Amplifier, Subwoofer	383
046 - Seat heating , (4A3),(LOR)	384-387
1. Seat heating , (4A3),(LOR)	384
2. Onboard supply control unit, Heated front seats control unit, Fuse holder C	385
3. Heated driver seat regulator, Heated front passenger seat regulator, Heated front seats control unit	386
4. Heated front seats control unit, Heated seat cushion for driver seat, Heated backrest for driver seat, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	387
047 - 6-speed automatic gearbox , (0ID)	388-393
1. 6-speed automatic gearbox , (0ID)	388
2. Multifunction switch, Automatic gearbox control unit, Gearbox	389
3. Gearbox oil temperature sender, Gearbox input speed sender, Gearbox output speed sender, Automatic gearbox control unit, Gearbox, Solenoid valve 2, Automatic gearbox pressure regulating valve 1, Automatic gearbox pressure regulating valve 5, Automatic gearbox pressure regulating valve 7	390
4. Automatic gearbox control unit, Engine control unit, Gearbox, Automatic gearbox pressure regulating valve 2, Automatic gearbox pressure regulating valve 4	391
5. Selector lever, Onboard supply control unit, Ignition key withdrawal lock solenoid, Fuse holder C	392
6. Selector lever, Selector lever locked in position P switch, Selector lever lock solenoid, Selector lever position display	393
801 - - Fitting locations: Earth points - 3	394-398
1. Earth points	394-398
1.1 Overview of earth points	394-398
802 - - Fitting locations: Fuses - 3	399-428
1. Fuses	399-428
1.1 Overview of fuse holders	399
1.2 Fitting location of fuse holder A -SA-	400
1.3 Fuse assignment for fuse holder A -SA-, from January 2014	401
1.4 Fuse assignment for fuse holder A -SA-, from November 2014	401
1.5 Fitting location of fuse holder B -SB-	402
1.6 Fuse assignment for fuse holder B -SB-, from January 2014	403-404
1.7 Fuse assignment for fuse holder B -SB-, from November 2014	405-407
1.8 Fuse assignment for fuse holder B -SB-, from May 2016	408-409
1.9 Fitting location of fuse holder C -SC-	410-412
1.9.1 Fitting location of fuse holder C -SC-, LHD models	410-411
1.9.2 Fitting location of fuse holder C -SC-, RHD models	412
1.10 Fuse assignment for fuse holder C -SC-, from January 2014	413-415
1.11 Fuse assignment of fuse holder C -SC-, from November 2014	416-418
1.12 Fuse assignment for fuse holder C -SC-. from May 2016	419-421

1.13 Fitting location of fuse holder D -SD-/fuse holder F -SF-	422-424
1.13.1 Fitting location of fuse holder D -SD-/fuse holder F -SF-, LHD models	422-423
1.13.2 Fitting location of fuse holder D -SD-/fuse holder F -SF-, RHD models	424
1.14 Fuse assignment for fuse holder D -SD-, from January 2014	425
1.15 Fuse assignment for fuse holder F -SF-, from January 2014	425
1.16 Fuse assignment for fuse holder F -SF-, from November 2014	425
1.17 Fitting location of fuse holder H -SH-	426
1.18 Fuse assignment for fuse holder H -SH-	427-428
803 - - Fitting locations: Relays - 3	429-436
1. Relays	429-436
1.1 Overview of relay carriers	429
1.2 Relay and fuse carrier 2 -SR2-, on left in engine compartment	430-432
1.2.1 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, on left in engine compartment, from January 2014	430-431
1.2.2 Fitting location and relay assignment of relay and fuse carrier 2 -SR2-, on left in engine compartment, from November 2014	432
1.3 Relay and fuse carrier 3 -SR3-, on left in engine compartment	433
1.3.1 Fitting location and relay assignment of relay and fuse carrier 3 -SR3-, on left in engine compartment, from January 2014	433
1.4 Relay and fuse carrier 1 -SR1-, under dash panel	434-436
1.4.1 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on left under dash panel, LHD, from January 2014	434-435
1.4.2 Fitting location and relay assignment of relay and fuse carrier 1 -SR1-, on right under dash panel, RHD, from April 2014	436
804 - - Fitting locations: control units in front part of vehicle - 3	437-458
1. Control units in front part of vehicle	437-458
1.1 Overview of control units	437
1.2 Adaptive cruise control unit -J428-	438
1.3 Mechatronic unit for dual clutch gearbox -J743-	439-440
1.3.1 Mechatronic unit for dual clutch gearbox -J743-, 25-pin connector -T25-	439-440
1.4 Automatic gearbox control unit -J217-	441-442
1.4.1 Automatic gearbox control unit -J217-, 52-pin connector -T52-	441-442
1.5 Automatic glow period control unit -J179-	443
1.6 Engine control unit -J623-	444-446
1.6.1 Engine control unit -J623-, 60-pin connector -T60-/94-pin connector -T94-	444
1.6.2 Engine control unit -J623-, 105-pin connector -T105-/91-pin connector -T91-	445-446
1.7 Wiper motor -V-/wiper motor control unit -J400-	447-449
1.7.1 Windscreen wiper motor -V-/wiper motor control unit -J400-, left-hand drive models	447
1.7.2 Windscreen wiper motor -V-/wiper motor control unit -J400-, right-hand drive models	448-449
1.8 Control unit for structure-borne sound -J869-	450-451
1.9 ABS control unit -J104-	452
1.10 Battery monitor control unit -J367-	453-455
1.10.1 Battery monitor control unit -J367-, battery in engine compartment	453-454
1.10.2 Battery monitor control unit -J367-, battery in luggage compartment	455
1.11 Radiator fan control unit -J293-	456-458
805 - - Fitting locations: control units in middle part of vehicle - 3	459-522
1. Control units in middle part of vehicle	459-522
1.1 Overview of control units	459-460
1.2 Fresh air blower control unit -J126-	461-463
1.2.1 Fresh air blower control unit -J126-, left-hand drive models	461
1.2.2 Fresh air blower control unit -J126-, right-hand drive models	462-463
1.3 Front passenger door control unit -J387-	464-467
1.3.1 Front passenger door control unit -J387-, left-hand drive models	464-465
1.3.2 Front passenger door control unit -J387-, right-hand drive models	466-467
1.4 Headlight range control unit -J431-	468-471
1.4.1 Headlight range control unit -J431-, left-hand drive models	468-469
1.4.2 Headlight range control unit -J431-, right-hand drive models	470-471
1.5 Display unit for front information display and operating unit control unit -J685- / control unit 1 for information electronics -J794-	472-474
1.6 Control unit 1 for information electronics -J794-	475-476
1.7 Dash panel insert -K- / control unit in dash panel insert -J285-	477-478
1.8 Rear right door control unit -J389-	479-480
1.9 Power steering control unit -J500-	481-483
1.9.1 Power steering control unit -J500-, left-hand drive models	481-482
1.9.2 Power steering control unit -J500-, right-hand drive models	483
1.10 Sliding sunroof adjustment control unit -J245-	484-485

1.11 Fuel pump control unit -J538-	486-487
1.12 Rear left door control unit -J388-	488-489
1.13 Multifunction steering wheel control unit -J453-	490-491
1.14 Driver door control unit -J386-	492-495
1.14.1 Driver door control unit -J386-, left-hand drive models	492-493
1.14.2 Driver door control unit -J386-, right-hand drive models	494-495
1.15 Electronically controlled damping control unit -J250-	496-497
1.16 Onboard supply control unit -J519-	498-506
1.16.1 Onboard supply control unit -J519-, left-hand drive models	498-502
1.16.2 Onboard supply control unit -J519-, right-hand drive models	503-506
1.17 Heater control unit -J65-	507-508
1.18 Air conditioning system control unit -J301-	509-511
1.19 Climatronic control unit -J255-	512-514
1.20 Airbag control unit -J234-	515-516
1.21 Heated front seats control unit -J774-	517-519
1.21.1 Heated front seats control unit -J774-, left-hand drive models	517
1.21.2 Heated front seats control unit -J774-, right-hand drive models	518-519
1.22 Exhaust flap control unit -J883-	520-522
806 - - Fitting locations: control units in rear part of vehicle - 3	523-529
1. Control units in rear part of vehicle	523-529
1.1 Overview of control units	523
1.2 Trailer detector control unit -J345-	524
1.3 Parking aid control unit -J446-	525-527
1.4 Battery monitor control unit -J367-	528-529
807 - - Fitting locations: coupling points - 3	530-542
1. Coupling points	530-542
1.1 Coupling point in engine compartment, left -TML-	530
1.2 Coupling point on engine, top centre -TMOM-	531
1.3 Coupling point on engine, top right -TMOR-	532
1.4 Coupling point on front left door -TTVL-	533
1.5 Coupling point for front left seat -TSVL-	534
1.6 Coupling point on rear left door -TTHL-	535
1.7 Coupling point for roof -TH-	536
1.8 Coupling point on front right door -TTVR-	537
1.9 Coupling point for front right seat -TSVR-	538
1.10 Coupling point on rear right door -TTHR-	539
1.11 Coupling point in luggage compartment, left -THRL-	540
1.12 Diagnostic connection -U31-	541-542
1.12.1 Diagnostic connection -U31-, LHD models	541
1.12.2 Diagnostic connection -U31-, RHD models	542