



Contents

1	Engine list	1
2	Service work	6
2.1	Service tables	6
2.2	Oil change service	7
2.3	Inspection service	9
2.4	Additional work based on time or distance	14
2.5	Delivery inspection	16
3	General information	19
3.1	Raising vehicle with lifting platform and trolley jack	19
3.2	Connecting vehicle diagnostic tester	20
3.3	Vehicle data sticker	23
3.4	Engine code and engine number	23
3.5	Vehicle identification number	24
3.6	Type plate	24
3.7	Countries where diesel has a high sulphur content	24
3.8	RME fuel (biodiesel)	25
3.9	Attaching "Your next service" sticker:	26
4	Descriptions of work:	27
4.1	Removing and installing engine compartment cover (noise insulation)	28
4.2	Driver and front passenger airbags: visual check of airbag units	28
4.3	Self-diagnosis: reading fault memories of all systems	30
4.4	Service interval display: resetting	34
4.5	Door arrester and securing pins: lubricating	53
4.6	Sunroof: checking function, cleaning and greasing guide rails	54
4.7	Electric windows: initialising	54
4.8	Clock: setting to correct time	54
4.9	Radio: activating anti-theft coding	55
4.10	Window wash/wipe system and headlight washer system: checking function and settings	56
4.11	Windscreen wiper blades: checking park position, if wiper blades judder: checking setting angle	61
4.12	Wheel securing bolts: tightening to specified torque	64
4.13	Tyres: checking condition, wear pattern, inflation pressure, tread depth	66
4.14	Engine oil level: checking	71
4.15	Engine oil: Draining or extracting and replenishing; renewing oil filter	72
4.16	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	76
4.17	V-belt: checking condition and tensioning	77
4.18	Poly V-belt: checking condition and tensioning belt	78
4.19	Boots: inspecting	80
4.20	Manual gearbox/final drive: checking oil level	80
4.21	Automatic gearbox: checking final drive oil level	82
4.22	Brake system: inspecting for leaks and damage	83
4.23	Front and rear brake pads/linings: checking thickness	83
4.24	Underbody protection: visual check for damage	86
4.25	Track rod ends: checking clearance, firm seating and boots	86
4.26	Swivel joints: inspecting	87
4.27	Cooling system: checking coolant level and frost protection	87
4.28	Spark plugs: renewing	89
4.29	Dust and pollen filter: renewing filter element	95
4.30	Camshaft drive belt: checking (petrol engine)	97
4.31	Toothed belt: checking for wear (SDI/TDI engines ➤2000)	98
4.32	Camshaft drive toothed belt: checking condition and tension (diesel engine with engine code ALH and automatic gearbox)	99



4.33	Toothed belt: checking condition and tension (diesel engine with engine code 1Y)	102
4.34	Toothed belt: renewing (diesel engine with engine codes AGP, AGR, ALH, AQM, ASK, ASV and AYQ)	105
4.35	Toothed belt: renewing (diesel engine with engine codes AEY, AFN, AHB, AHU, AKW and ALE)	105
4.36	Air filter: cleaning housing and renewing filter element	106
4.37	Fuel filter: renewing (diesel engine)	111
4.38	Fuel filter: draining water (diesel engine)	112
4.39	Automatic gearbox: checking ATF level	112
4.40	Power assisted steering: checking fluid level	119
4.41	Changing brake fluid	120
4.42	Brake fluid level (dependent upon brake pad/lining wear): checking	123
4.43	Battery: checking battery terminal clamps for secure seating	124
4.44	Battery: checking	126
4.45	Idling speed: checking	126
4.46	Headlight adjustment: checking	126
4.47	Carry out road test	130
5	Exhaust emissions test	131
5.1	Exhaust emissions test for vehicles with petrol engine without OBD with Fehlerauslesegerät V.A.G. 1551	131
5.2	Exhaust emissions test for vehicles with petrol engine without OBD with emissions testing station VAS 6300	142
5.3	Exhaust emissions test for vehicles with petrol engine and OBD	151
5.4	Exhaust emissions test for diesel engines without OBD	153
6	Glossary	169