



## Contents

<b>01 - Self-diagnosis</b>	<b>1</b>
<b>1 Vehicle diagnosis, testing and information systems</b>	<b>1</b>
1.1 Connecting vehicle diagnosis, testing and information system VAS 5051A	2
<b>2 Immobilizer self-diagnosis</b>	<b>4</b>
2.1 Performing immobilizer self-diagnosis	4
2.2 Fault table	9
2.3 Reading data block	11
2.4 Coding immobilizer control unit J362	13
<b>3 Guided functions for immobilizer</b>	<b>15</b>
3.1 Observe additional information and prerequisites for "online request with GeKo-VW"	15
3.2 Online system test	16
3.3 Adaptation of ignition keys	16
3.4 Adaption (matching) after changing engine control unit	17
3.5 Adapting immobilizer	17
<b>27 - Starter, current supply, CCS</b>	<b>18</b>
<b>1 Battery</b>	<b>18</b>
1.1 Battery contents list	18
1.2 Fundamentals for batteries	18
1.3 Battery handling instructions	19
1.4 Batteries with magic eye	21
1.5 Batteries with no magic eye	23
1.6 Checking specific gravity	26
1.7 Battery load test	29
1.8 Charging battery	30
1.9 Removing and installing battery	31
1.10 Explanation of central gas venting	35
<b>2 Starter</b>	<b>37</b>
2.1 Removing and installing starter (1.4 l petrol engine)	37
2.2 Removing and installing starter (1.6 l, 1.8 l petrol engines and diesel engines)	38
<b>3 Alternator</b>	<b>41</b>
3.1 Assembly overview	41
3.2 Poly-V-belt drives	51
3.3 Checking V-belt	52
3.4 Checking poly-V-belt	53
3.5 Removing and installing poly-V-belt	53
3.6 Compact alternator with poly-V-belt drive, vehicles ▶ 04.99	58
3.7 Checking carbon brushes for alternator, vehicles ▶ 04.99	58
3.8 Removing and installing voltage regulator for alternator, vehicles ▶ 04.99	59
3.9 Compact alternator with poly-V-belt drive, vehicles 05.99 ▶	59
3.10 Checking carbon brushes for alternator, vehicles 05.99 ▶	60
3.11 Removing and installing voltage regulator for alternator, vehicles 05.99 ▶	60
3.12 Renewing poly-V-belt pulley on alternator	61
3.13 Removing and installing poly-V-belt pulley with freewheel	62
<b>90 - Gauges, instruments</b>	<b>64</b>
<b>1 Dash panel insert</b>	<b>64</b>
1.1 Removing and installing dash panel insert	64
1.2 Renewing bulbs in dash panel insert (VDO)	65
1.3 Renewing bulbs in dash panel insert (MOTOMETER)	66
1.4 Dash panel insert warning lamp symbols (VDO unit)	67
1.5 Pin assignment on dash panel insert	68



<b>2</b>	<b>Service interval display</b> .....	<b>69</b>
2.1	Service interval display .....	69
2.2	Resetting service interval display .....	69
2.3	Flexible service interval display .....	70
2.4	Resetting flexible service interval display .....	70
2.5	Entering service interval data .....	71
<b>92</b>	<b>- Windscreen wash/wipe system</b> .....	<b>73</b>
<b>1</b>	<b>Windscreen wiper system</b> .....	<b>73</b>
1.1	Assembly overview - windscreen wiper system .....	73
1.2	Removing and installing windscreen wiper system .....	74
1.3	Removing and installing wiper rubber blade .....	78
<b>2</b>	<b>Windscreen washer and headlight washer system</b> .....	<b>79</b>
2.1	Assembly overview - windscreen washer and headlight washer system .....	79
2.2	Adjusting windscreen washer system jets .....	79
2.3	Adjusting headlight washer system jets .....	80
2.4	Removing windscreen washer system spray jets .....	81
2.5	Removing headlight washer system spray jets .....	81
2.6	Removing windscreen washer and headlight washer system reservoir .....	81
<b>3</b>	<b>Rear window wipe/wash system</b> .....	<b>83</b>
3.1	Assembly overview - rear window wiper system (Caddy) .....	83
3.2	Assembly overview - rear window wiper system (Polo Variant) .....	84
3.3	Adjusting rear window wiper park position .....	84
3.4	Adjusting washer jet .....	85
3.5	Removing rear window wiper (Caddy) .....	86
3.6	Removing rear window wiper system (Polo Variant) .....	87
<b>94</b>	<b>- Lights, bulbs, switches - exterior</b> .....	<b>89</b>
<b>1</b>	<b>Headlight</b> .....	<b>89</b>
1.1	Assembly overview - headlight .....	89
1.2	Adjusting headlights .....	90
1.3	Removing and installing headlight .....	90
1.4	Replacing headlight bulb .....	90
1.5	Removing and installing headlight range control motor .....	91
<b>2</b>	<b>Front fog lights</b> .....	<b>93</b>
2.1	Removing and installing fog light .....	93
2.2	Removing and installing fog light bulb .....	93
<b>3</b>	<b>Front turn signals</b> .....	<b>94</b>
3.1	Removing and installing front turn signal .....	94
3.2	Removing and installing turn signal bulb .....	94
<b>4</b>	<b>Side mounted repeater turn signals</b> .....	<b>95</b>
4.1	Removing and installing side mounted repeater turn signal .....	95
<b>5</b>	<b>Tail lights</b> .....	<b>96</b>
5.1	Assembly overview - tail light (Caddy) .....	96
5.2	Assembly overview - tail light (Polo Classic) .....	96
5.3	Assembly overview - tail light (Polo Variant) .....	97
5.4	Removing and installing tail light bulb holder (Caddy) .....	98
5.5	Removing and installing tail light bulb holder (Polo Variant) .....	99
5.6	Removing and installing tail light bulb holder (Polo Classic) .....	99
<b>6</b>	<b>Additional brake lights</b> .....	<b>100</b>
6.1	Additional brake light (Polo Classic) .....	100
6.2	Additional brake light (Polo Variant) .....	101
<b>7</b>	<b>Number plate lights</b> .....	<b>103</b>
7.1	Number plate light (Polo Classic) .....	103



7.2	Number plate light (Caddy)	104
7.3	Number plate light (Polo Variant)	104
<b>8</b>	<b>Steering column switch and ignition and starter switch</b>	<b>106</b>
8.1	Assembly overview - steering column	106
8.2	Removing and installing steering column switch	107
8.3	Pin assignment on steering column switch	109
8.4	Removing and installing steering lock housing	110
8.5	Removing and installing lock cylinder	113
8.6	Removing and installing ignition / starter switch	114
8.7	Pin assignment for ignition switch	114
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>115</b>
<b>1</b>	<b>Immobilizer</b>	<b>115</b>
1.1	Assembly overview - immobilizer	115
1.2	Removing and installing immobilizer control unit J362	115
1.3	Removing and installing immobilizer reader coil D2	116
1.4	Transponder	116
<b>2</b>	<b>Interior lights and switches</b>	<b>117</b>
2.1	Assembly overview - switches in dash panel	117
2.2	Removing and installing light switch E1	117
2.3	Removing and installing switches in centre of dash panel	118
2.4	Interior light	118
2.5	Removing and installing glove compartment light W6	120
2.6	Removing and installing door contact switch	120
2.7	Removing and installing luggage compartment light switch	120
2.8	Removing and installing luggage compartment light W3	121
<b>97</b>	<b>Wiring</b>	<b>122</b>
<b>1</b>	<b>Removing and installing relay plate, coupling station and fuse holder</b>	<b>122</b>
1.1	Removing and installing relay plate	122
1.2	Removing and installing multi-pin connector on back of relay plate	123
<b>2</b>	<b>Wiring harness and connector repairs</b>	<b>124</b>
2.1	Notes on safety	124
2.2	General notes concerning repairs to vehicle electrical system	124
2.3	Notes on repairs to wiring harness and connectors	124
2.4	Supplementary notes on repair of CAN bus wiring	125
2.5	Wiring harness repair set V.A.G 1978	125
<b>3</b>	<b>Renewal of aerial wiring</b>	<b>127</b>
3.1	General description	127
3.2	Assembly overview - aerial wire	127
3.3	Installing a new aerial wire	127