

Contents

01 Self-diagnosis	Page
Self-diagnosis	01-1
- Tools	01-1
- Connecting fault reader	01-2
Self-diagnosis of immobilizer	01-3
- Additional information and prerequisites for work requiring the 7-digit PIN	01-4
- Performing self-diagnosis of immobilizer	01-6
- Reading measured value block	01-18
- Adapting ignition keys	01-23
- Lost key procedure	01-30
- Setting when changing immobilizer control unit (coding control unit)	01-31
- Procedure after changing immobilizer control unit	01-33
- Procedure after changing engine control unit (Adaption)	01-38
- Procedure when immobilizer control unit and engine control unit have been changed	01-43
- Procedure for immobilizer malfunctions	01-43
- Activating used engine control unit	01-46
27 Starter, Current supply	Page
Battery	27-1
- Battery contents list	27-1
- Fundamentals for batteries	27-2
- Battery handling instructions	27-4
- Batteries with condition indicator	27-6
- Visual check	27-7
- Checking electrolyte level (batteries with condition indicator)	27-8
- Batteries without condition indicator	27-11
- Checking electrolyte level	27-12
- Checking specific gravity	27-17
- Battery discharge (load) test	27-21
- Battery charging	27-22
- Removing and installing battery	27-26
- Explanation of central gas venting	27-33
Starter	27-34
- Removing and installing starter (1.4 ltr. petrol engine)	27-35
- Removing and installing starter (1.6 ltr., 1.8 ltr. petrol engine and diesel engine)	27-38
Removing and installing alternator with ribbed belt	27-40
- 4-cylinder fuel injection engine, 1.4 ltr. basic belt drive vehicles >04.99	27-41
- 4-cylinder fuel injection engine 1.4 ltr. with basic belt drive vehicles 05.99 >	27-44
- 4-cylinder fuel injection engine 1.4 ltr. with power-assisted steering vehicles >04.99	27-47
- 4-cylinder fuel injection engine 1.4 ltr. with power-assisted steering, vehicles 05.99 >	27-50
- 4-cylinder fuel injection engine 1.4 ltr. with air conditioner compressor and power-assisted steering >04.99	27-53
- 4-cylinder fuel injection engine 1.4 ltr. with power-assisted steering and air conditioner compressor vehicles 05.99 >	27-56
- 4-cylinder fuel injection engine 1.6 ltr. and 1.8 ltr. vehicles > 04.99	27-60
- 4-cylinder fuel injection engine 1.6 ltr. and 1.8 ltr. vehicles 05.99 >	27-62
- Diesel engine vehicles >04.99	27-64
- Diesel engine vehicles 05.99 >	27-66
- Ribbed belt drive	27-68
- Checking V-belt	27-70
- Checking ribbed belt	27-71
- Removing and installing ribbed belt	27-72
- Compact alternator with ribbed belt drive, vehicles >04.99	27-78
- Checking alternator carbon brushes, vehicles >04.99	27-79
- Removing and installing voltage regulator for alternator, vehicles > 04.99	27-80
- Compact alternator with ribbed belt drive, vehicles 05.99 >	27-81
- Checking alternator carbon brushes, vehicles 05.99 >	27-82
- Removing and installing voltage regulator for alternator, vehicles 05.99 >	27-83
- Replacing alternator ribbed belt pulley	27-84
- Removing and installing ribbed belt pulley with freewheel	27-86
90 Gauges, Instruments	Page
Removing and installing dash panel insert	90-1
- Renewing bulbs in dash panel insert (VDO)	90-3

- Renewing bulbs in dash panel insert (MOTOMETER)	90-6
- Dash panel insert (VDO) warning lamp symbols	90-8
- Connector contact assignment on dash panel insert	90-10
Service interval display	90-11
- Zeroing service interval display	90-12
- Flexible service interval display	90-13
- Zeroing flexible service interval display	90-15
- Entering service interval data	90-16
92 Windscreen wipe and wash system	Page
Windscreen wiper system	92-1
- Windscreen wiper system assembly overview	92-2
- Removing and installing windscreen wiper system	92-4
- Removing and installing wiper blade rubber	92-11
Windscreen washer and headlight washer system	92-12
- Windscreen washer and headlight washer system assembly overview	92-12
- Adjusting windscreen washer system jets	92-14
- Adjusting headlight washer system jets	92-15
- Removing windscreen washer system jets	92-16
- Removing headlight washer system jets	92-17
- Removing windscreen washer and headlight washer system reservoir	92-18
Rear window wipe/wash system	92-19
- Rear window wiper system assembly overview (Caddy)	92-20
- Rear window wiper system assembly overview (Polo Estate)	92-22
- Adjusting rear window wiper rest position	92-24
- Adjusting washer jets	92-25
- Removing rear window wiper (Caddy)	92-26
- Removing rear window wiper (Polo Estate)	92-28
94 Lights, Lamps, Switches - exterior	Page
Headlight	94-1
- Assembly overview: Headlight	94-1
- Adjusting headlights	94-3
- Removing and installing headlights	94-4
- Replacing headlight bulb	94-5
- Removing and installing headlight range control positioning motor	94-7
Front fog lights	94-8
- Removing and installing fog lights	94-8
- Removing and installing foglight bulb	94-9
Front turn signals	94-10
- Removing and installing front turn signals	94-11
- Replacing turn signal bulb	94-12
Side mounted turn signals	94-13
- Removing and installing side mounted turn signals	94-13
Tail lights	94-14
- Rear lights Caddy assembly overview	94-14
- Removing and installing rear lights Polo Classic	94-16
- Removing and installing rear lights Polo Estate	94-18
- Removing and installing tail light bulb holder Caddy	94-20
- Removing and installing tail light bulb holder Polo Estate	94-21
- Removing and installing tail light bulb holder Polo Classic	94-22
Additional brake light	94-23
- Removing and installing additional brake light Polo Classic	94-23
- Removing and installing additional brake light Polo Estate	94-24
Number plate lights	94-26
- Removing and installing number plate light Polo Classic	94-26
- Removing and installing number plate light Caddy	94-27
- Removing and installing number plate light Polo Estate	94-28
Steering column switch and starter/ignition switch	94-29
- Steering column assembly overview	94-29
- Removing and installing steering column switch	94-34
- Wiring connections on steering column switches	94-36
- Removing and installing steering lock housing	94-38
- Removing and installing lock cylinder	94-43
- Removing and installing ignition/starter switch	94-44

- Connector pin assignment on steering column switch	94-46
96 Lights, Lamps, Switches - interior	Page
Immobilizer	96-1
- Immobilizer assembly overview	96-2
- Removing and installing immobilizer control unit	96-3
- Removing and installing immobilizer reading coil -D2-	96-3
- Transponder	96-4
Interior lights and switches	96-5
- Removing and installing switches in dash panel	96-5
- Removing and installing light switch	96-7
- Removing and installing switches in centre dash panel	96-8
- Removing and installing interior light	96-9
- Removing and installing glove box light -W6-	96-11
- Removing and installing door contact switch	96-12
- Removing and installing luggage compartment light switch	96-13
- Removing and installing luggage compartment light -W3-	96-14
97 Wiring	Page
Removing and installing relay plate, coupling station and fuse holder	97-1
- Removing and installing relay plate	97-2
- Removing and installing multi-pin connector behind relay plate	97-3
Wiring harness and connector repairs	97-5