



## Contents

<b>01 - Self-diagnosis</b> .....	<b>1</b>
<b>1 Self-diagnosis for radio generation 10.99 &gt;</b> .....	<b>1</b>
1.1 Self-diagnosis for radio generation 10.99 > .....	1
1.2 Self-diagnosis of radio systems .....	1
1.3 Final control diagnosis .....	7
1.4 Coding "BETA" radio .....	9
1.5 Coding "GAMMA" radio .....	9
1.6 Read measured value block .....	11
<b>91 - Radio, telephone, navigation</b> .....	<b>13</b>
<b>1 Radio systems</b> .....	<b>13</b>
1.1 Radio systems .....	13
1.2 Radio systems > 09.99 .....	13
1.3 Radio system "alpha" >09.99 .....	13
1.4 Radio system "beta" >09.99 .....	14
1.5 Removing and installing radio > 09.99 .....	15
1.6 Activating radio anti-theft coding > 09.99 .....	16
1.7 Radio systems 10.99 > .....	16
1.8 Radio system "ALPHA" 10.99 > .....	17
1.9 Radio system "BETA" 10.99 > .....	18
1.10 Radio system "GAMMA" 10.99 > .....	20
1.11 Removing and installing radio 10.99 > .....	23
1.12 Electronic anti-theft system for "ALPHA" radio 10.99 > .....	24
1.13 Electronic anti-theft system for "BETA" and "GAMMA" radios 10.99 > .....	25
<b>2 Aerial systems</b> .....	<b>29</b>
2.1 Aerial systems .....	29
2.2 Roof aerial -R11- for radio vehicles > 09.99 .....	29
2.3 Radio roof aerial -R11- for vehicles 10.99 > .....	31
<b>3 Loudspeaker system</b> .....	<b>32</b>
3.1 Loudspeaker system .....	32
3.2 Removing and installing loudspeakers > 09.99 .....	32
3.3 Removing and installing loudspeakers 10.99 > .....	33
<b>4 Suppression measures</b> .....	<b>35</b>
4.1 Suppression measures .....	35