



Contents

01 - Self diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Tools	1
1.3 Connecting fault reader (Caddy, Polo Classic > 09.99, Polo Estate > 09.99)	2
1.4 Connecting fault reader (Polo Classic 10.99 >, Polo Estate 10.99 >)	3
2 Self-diagnosis of airbag system	4
2.1 Self-diagnosis of airbag system	4
2.2 Function	4
2.3 Coding airbag control unit using fault reader V.A.G 1551	13
2.4 Read measured value block	15
2.5 Test box VAS 5056 (Caddy, Polo Classic > 09.99, Polo Estate > 09.99)	20
2.6 Test box VAS 5056 (Polo Classic 10.99 >, Polo Estate 10.99 >)	22
2.7 Adaption (deactivating and activating front passenger's airbag unit in Caddy, Polo Classic > 09.99, Polo Estate > 09.99)	25
2.8 Adaption (deactivating and activating airbags in Polo Classic 10.99 >, Polo Estate 10.99 >)	31
2.9 Final control diagnosis 10.99 >	36
3 Self-diagnosis for convenience system 10.99 >	37
3.1 Self-diagnosis for convenience system 10.99 >	37
3.2 Functional description	37
3.3 Determining which source has possibly triggered the anti-theft alarm	38
3.4 Description of the interior monitoring system	38
3.5 Initiating self-diagnosis for the convenience system	39
3.6 Overview of the selectable functions	40
3.7 Interrogating control unit version	40
3.8 Coding convenience system control unit using fault reader V.A.G 1551	42
3.9 Interrogating fault memory	43
3.10 Erasing fault memory	44
3.11 Ending output	45
3.12 Fault table	45
3.13 Final control diagnosis	48
3.14 Reading measured value block	50
3.15 Display group overview	51
3.16 Matching ignition keys to radio remote control	56
3.17 Matching a new additional key	59
3.18 Radio remote control functional variations	59
3.19 Removing and installing batteries for the main key with radio wave remote control	61