



## Contents

|   |           |
|---|-----------|
| <b>80 - Heating</b> .....   | <b>1</b>  |
| <b>1 Servicing heating system</b> .....   | <b>1</b>  |
| 1.1 Servicing heating system .....  | 1         |
| 1.2 Passenger compartment heating .....   | 1         |
| 1.3 Removing fresh air blower -V2- .....  | 7         |
| 1.4 Removing and installing dust and pollen filter .....  | 7         |
| 1.5 Removing vent .....   | 9         |
| 1.6 Removing and installing heated air and fresh air controls .....   | 13        |
| 1.7 Checking ventilation .....  | 15        |
| <b>2 Removing and installing heater unit</b> .....  | <b>16</b> |
| 2.1 Removing and installing heater unit .....   | 16        |
| <b>3 Dismantling and assembling heater</b> .....  | <b>19</b> |
| 3.1 Dismantling and assembling heater .....   | 19        |
| <b>4 Dismantling and assembling heated air and fresh air controls</b> .....   | <b>23</b> |
| 4.1 Dismantling and assembling heated air and fresh air controls .....  | 23        |
| <b>5 Installing and adjusting cables</b> .....  | <b>25</b> |
| 5.1 Installing and adjusting cables .....   | 25        |
| <b>87 - Air conditioning</b> .....  | <b>30</b> |
| <b>1 Notes on repair work to vehicles with air conditioning and on handling refrigerant</b> .....   | <b>30</b> |
| 1.1 Notes on repair work to vehicles with air conditioning and on handling refrigerant .....  | 30        |
| 1.2 Safety precautions when working on vehicles with air conditioning and when handling refrigerant R134a .....   | 30        |
| <b>2 Air conditioner with manual controls</b> .....   | <b>32</b> |
| 2.1 Air conditioner with manual controls .....  | 32        |
| 2.2 Air conditioning and heating - Passenger compartment .....  | 32        |
| 2.3 Removing and installing heating and air conditioning controls .....   | 37        |
| 2.4 Dismantling and assembling heating and air conditioning controls .....  | 40        |
| 2.5 Installing and adjusting heating and air conditioning cables .....  | 42        |
| 2.6 Air conditioning and heating system - Engine compartment .....  | 46        |
| 2.7 Removing and installing air conditioner compressor bracket, engine code: APE .....  | 53        |
| 2.8 Servicing magnetic coupling -N25-; Sanden unit .....  | 60        |
| 2.9 Removing magnetic coupling from compressor and refitting again .....  | 65        |
| <b>3 Servicing refrigerant circuit, which may only be performed at workshops with specially trained personnel (specialist repair workshop for air conditioning systems)</b> ..... | <b>68</b> |
| 3.1 Servicing refrigerant circuit, which may only be performed at workshops with specially trained personnel (specialist repair workshop for air conditioning systems) .....      | 68        |
| 3.2 Tools .....   | 68        |
| 3.3 Renewing refrigerant circuit components .....   | 69        |
| 3.4 Checking high pressure sender -G65- .....   | 81        |
| 3.5 Removing and installing heater and air conditioner .....  | 85        |
| 3.6 Dismantling and assembling evaporator housing .....   | 88        |
| 3.7 Removing expansion valve .....  | 92        |
| 3.8 Removing and installing condenser .....   | 96        |
| <b>4 Capacities</b> .....   | <b>99</b> |
| 4.1 Capacities .....  | 99        |
| 4.2 Refrigerant R134a .....   | 99        |
| 4.3 Refrigerant oil .....   | 99        |