



## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Code letters, assembly allocation, ratios, capacities .....	2
<b>2 Calculating overall ratio "i"</b> .....	<b>5</b>
2.1 Calculating overall ratio "i" .....	5
<b>3 Transmission layout</b> .....	<b>6</b>
3.1 Transmission layout .....	6
<b>4 General repair instructions</b> .....	<b>8</b>
4.1 General repair instructions .....	8
<b>30 - Clutch</b> .....	<b>10</b>
<b>1 Servicing clutch control</b> .....	<b>10</b>
1.1 Servicing clutch control .....	10
1.2 Assembly overview - Pedal cluster mechanical clutch control .....	12
1.3 Removing and installing over-centre spring .....	15
1.4 Removing and installing clutch pedal .....	17
1.5 Assembly overview - Mechanics .....	19
1.6 Checking function of clutch cable .....	22
1.7 Removing and installing clutch cable .....	24
1.8 Assembly overview - Pedal cluster for hydraulically operated clutch .....	27
1.9 Removing and installing clutch pedal .....	31
1.10 Assembly overview - Hydraulic system .....	34
1.11 Removing and installing master cylinder .....	38
1.12 Bleeding clutch system .....	41
<b>2 Servicing clutch</b> .....	<b>42</b>
2.1 Servicing clutch .....	42
2.2 Removing and installing clutch .....	45
<b>34 - Controls, Housing</b> .....	<b>48</b>
<b>1 Servicing gear selector mechanism</b> .....	<b>48</b>
1.1 Servicing gear selector mechanism .....	48
1.2 Installation position of gear selector mechanism .....	48
1.3 Assembly overview - Gearstick housing/gearstick .....	50
1.4 Installing gear stick gaiter to gear stick knob .....	57
1.5 Assembly overview - gear selector relay points at gearbox .....	58
1.6 Removing and installing gearstick/selector rod .....	63
1.7 Adjusting gear selector mechanism .....	65
<b>2 Servicing gearbox housing cover</b> .....	<b>69</b>
2.1 Servicing gearbox housing cover .....	69
<b>3 Removing and installing gearbox</b> .....	<b>75</b>
3.1 Removing and installing gearbox .....	75
<b>4 Dismantling and assembling gearbox</b> .....	<b>92</b>
4.1 Dismantling and assembling gearbox .....	92
4.2 Overview .....	92
4.3 Assembly overview .....	94
4.4 Removing and installing gearbox housing cover and 5th gear .....	95
4.5 Removing and installing gearbox housing and selector mechanism .....	98
4.6 Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks .....	101
4.7 Dismantling and assembling sequence .....	107
<b>5 Servicing gearbox housing and selector shaft</b> .....	<b>127</b>
5.1 Servicing gearbox housing and selector shaft .....	127



<b>6</b>	<b>Checking gearbox oil</b> .....	<b>133</b>
6.1	Checking gearbox oil .....	133
<b>7</b>	<b>Servicing clutch housing</b> .....	<b>134</b>
7.1	Servicing clutch housing .....	134
<b>35 - Gears, Shafts</b> .....		<b>143</b>
<b>1</b>	<b>Dismantling and assembling input shaft</b> .....	<b>143</b>
1.1	Dismantling and assembling input shaft .....	143
<b>2</b>	<b>Dismantling and assembling output shaft</b> .....	<b>156</b>
2.1	Dismantling and assembling output shaft .....	156
2.2	Allocating output shafts .....	169
<b>3</b>	<b>Adjusting output shaft</b> .....	<b>170</b>
3.1	Adjusting output shaft .....	170
<b>39 - Final drive, Differential</b> .....		<b>174</b>
<b>1</b>	<b>Removing and installing drive flange oil seal</b> .....	<b>174</b>
1.1	Removing and installing drive flange oil seal .....	174
<b>2</b>	<b>Dismantling and assembling differential</b> .....	<b>177</b>
2.1	Dismantling and assembling differential .....	177
<b>3</b>	<b>Adjusting differential</b> .....	<b>190</b>
3.1	Adjusting differential .....	190
<b>4</b>	<b>Adjustment overview</b> .....	<b>193</b>
4.1	Adjustment overview .....	193