



Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Gearbox identification	1
1.2 Code letters, gearbox allocation, ratios, capacities	2
2 Transmission layout	5
2.1 Transmission layout	5
3 Calculating overall ratio "i"	7
3.1 Calculating overall ratio "i"	7
4 General repair instructions	7
4.1 General repair instructions	7
30 - Clutch	10
1 Servicing clutch control	10
1.1 Servicing clutch control	10
1.2 Assembly overview - Pedal cluster	11
1.3 Removing and installing over-centre spring	14
1.4 Removing and installing clutch pedal	15
1.5 Removing and installing mounting bracket	17
1.6 Assembly overview - Hydraulic system	21
1.7 Removing and installing master cylinder	25
1.8 Bleeding clutch system	27
2 Servicing clutch release mechanism	28
2.1 Servicing clutch release mechanism	28
3 Servicing clutch	31
3.1 Servicing clutch	31
34 - Controls, Housing	36
1 Servicing gear selector mechanism up to 09.99	36
1.1 Servicing gear selector mechanism up to 09.99	36
1.2 Installation position of gear selector mechanism	36
1.3 Removing and installing gear selector cables	38
1.4 Removing and installing gear stick housing	44
1.5 Installing gear stick gaiter to gear stick knob	47
1.6 Removing and installing gear stick	48
1.7 Adjusting gear selector mechanism up to 09.99	52
2 Servicing gear selector mechanism from 10.99	56
2.1 Servicing gear selector mechanism from 10.99	56
2.2 Installation position of gear selector mechanism	56
2.3 Removing and installing selector lever knob and gaiter	59
2.4 Servicing gear stick and gear stick housing	61
2.5 Assembly overview - Removing and installing selector cables	65
2.6 Removing and installing selector mechanism	68
2.7 Adjusting gear selector mechanism from 10.99	70
3 Removing and installing gearbox	74
3.1 Removing and installing gearbox	74
4 Checking gear oil	88
4.1 Checking gear oil	88
5 Dismantling and assembling gearbox	89
5.1 Dismantling and assembling gearbox	89
5.2 Overview	89
5.3 Assembly overview	91
5.4 Removing and installing cover for gearbox housing and 5th gear	92



5.5	Removing and installing gearbox housing and selector mechanism	95
5.6	Removing and installing input shaft, output shaft (pinion shaft), differential and selector forks	97
5.7	Assembly sequence	100
6	Servicing gearbox housing and clutch housing	118
6.1	Servicing gearbox housing and clutch housing	118
7	Dismantling and assembling gearbox selector mechanism up to 09.99	128
7.1	Dismantling and assembling gearbox selector mechanism up to 09.99	128
8	Dismantling and assembling gearbox selector mechanism from 10.99	133
8.1	Dismantling and assembling gearbox selector mechanism from 10.99	133
9	Dismantling and assembling selector forks	139
9.1	Dismantling and assembling selector forks	139
35 - Gears, Shafts		146
1	Dismantling and assembling input shaft	146
1.1	Dismantling and assembling input shaft	146
2	Adjusting input shaft	160
2.1	Adjusting input shaft	160
2.2	Table of adjustment shims	162
2.3	Performing measurement check	164
3	Dismantling and assembling output shaft	165
3.1	Dismantling and assembling output shaft	165
3.2	From gearbox build date 04 09 0 the synchronisation for 1st gear has been modified	191
4	Adjusting output shaft	195
4.1	Adjusting output shaft	195
5	Dismantling and assembling reverse shaft	198
5.1	Dismantling and assembling reverse shaft	198
39 - Final drive, Differential rear		203
1	Renewing flanged shaft oil seals (gearbox installed)	203
1.1	Renewing flanged shaft oil seals (gearbox installed)	203
2	Dismantling and assembling differential	206
2.1	Dismantling and assembling differential	206
3	Adjustment overview	220
3.1	Adjustment overview	220
4	Adjusting differential	221
4.1	Adjusting differential	221