



Contents

00 - Technical data	1
1 Identification of gearbox	1
1.1 Identification of gearbox	1
2 Information on "automatic gearbox 01M"	2
2.1 Information on "automatic gearbox 01M"	2
3 Code letters, gearbox allocation, ratios, equipment	3
3.1 Code letters, gearbox allocation, ratios, equipment	3
4 Capacities	6
4.1 Capacities	6
5 Repair with an exchange component	6
5.1 Repair with an exchange component	6
6 General repair instructions	13
6.1 General repair instructions	13
32 - Torque converter	16
1 Torque converter	16
1.1 Torque converter	16
1.2 Identification of torque converter	16
1.3 Torque converter allocation	17
1.4 Removing sleeve bearing from turbine shaft	18
1.5 Removing and installing torque converter oil seal	19
1.6 Draining torque converter	20
1.7 Installing torque converter	21
37 - Controls, Housing	22
1 Locations of electrical/electronic components	22
1.1 Locations of electrical/electronic components	22
2 Servicing gear change mechanism	35
2.1 Servicing gear change mechanism	35
2.2 Checking shift mechanism	35
2.3 Checking and adjusting selector lever cable	36
2.4 Dismantling and assembling selector mechanism	37
2.5 Removing and installing selector lever handle	42
2.6 Removing and installing selector lever cable	44
2.7 Dismantling and assembling selector lever	47
3 Checking gearbox	51
3.1 Checking gearbox	51
3.2 Checking main pressure	52
3.3 Fault finding table for "4-speed automatic gearbox"	54
4 Removing and installing gearbox	55
4.1 Removing and installing gearbox	55
4.2 Transporting automatic gearbox	68
4.3 Securing gearbox to assembly stand	70
5 Checking ATF level and topping up	72
5.1 Checking ATF level and topping up	72
6 Gearbox with coupling elements	77
6.1 Gearbox with coupling elements	77
6.2 Position of coupling elements	78
7 Dismantling and assembling gearbox	80
7.1 Dismantling and assembling gearbox	80
7.2 Removing and installing ATF cooler and ATF filler tube	80
7.3 Dismantling and assembling planetary gearbox -Overview-	82



7.4	I - Removing and installing ATF pump to supporting tube	83
7.5	II - Removing and installing reverse gear clutch -K2- to large sun gear	87
7.6	III - Removing and installing freewheel and reverse gear brake -B1-	91
7.7	IV - Planet carrier and gearbox housing with input gear and cover	94
7.8	Dismantling planetary gearbox	97
7.9	Assembling planetary gearbox	107
7.10	Installing exchange components	120
7.11	Overview of all planetary gearbox adjustments	132
7.12	Adjusting planet carrier	133
7.13	Adjusting reverse gear brake -B1-	140
7.14	Adjusting clutch play between -K1- and -K2-	146
7.15	Adjusting 2nd and 4th gear brake -B2-	152
38	- Gears, Hydraulic controls	165
1	Dismantling and assembling ATF pump	165
1.1	Dismantling and assembling ATF pump	165
2	Dismantling and assembling freewheel with -B1- piston	170
2.1	Dismantling and assembling freewheel with -B1- piston	170
3	Dismantling and assembling 1st to 3rd gear clutch -K1-	173
3.1	Dismantling and assembling 1st to 3rd gear clutch -K1-	173
4	Dismantling and assembling reverse gear clutch -K2-	179
4.1	Dismantling and assembling reverse gear clutch -K2-	179
5	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	183
5.1	Dismantling and assembling 3rd and 4th gear clutch -K3- with turbine shaft	183
6	Removing and installing oil pan	188
6.1	Removing and installing oil pan	188
7	Removing and installing oil strainer	190
7.1	Removing and installing oil strainer	190
8	Removing and installing valve chest	191
8.1	Removing and installing valve chest	191
8.2	Assembly overview	191
8.3	Sequence for dismantling and assembling	200
9	Dismantling and assembling parking lock	203
9.1	Dismantling and assembling parking lock	203
39	- Final drive, Differential rear	214
1	Checking oil in final drive	214
1.1	Checking oil in final drive	214
1.2	Vehicles without sealing plug in final drive cover	214
1.3	Vehicles with sealing plug in final drive cover	215
2	Renewing oil seals for flanged shafts	216
2.1	Renewing oil seals for flanged shafts	216
3	Dismantling and assembling final drive	222
3.1	Dismantling and assembling final drive	222
3.2	Repair overview of final drive	222
3.3	Removing and installing input gear	224
3.4	Removing and installing drive pinion	231
3.5	Removing and installing differential	243
3.6	Dismantling and assembling differential	253
4	Adjusting final drive	266
4.1	Adjusting final drive	266
4.2	Overview of adjustments	266
4.3	Adjustments to be completed after renewing individual components	268
4.4	Adjusting drive pinion	269
4.5	Adjusting input gear	271



4.6	Adjusting differential273
5	Definitions274
5.1	Definitions274