



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	6
1.4 Notes on installing	6
1.5 Tightening torques	7
1.6 Assembly mountings	8
1.7 Replacing engine carrier rubber mounting	9
1.8 Additional information and removal instructions for vehicles with air conditioner	10
13 - Crankshaft group	12
1 Dismantling and assembling engine	12
1.1 Dismantling and assembling engine	12
1.2 Removing and installing ribbed belt	21
1.3 Checking valve timing	22
1.4 Removing, installing and tensioning toothed belts	24
1.5 Checking semi-automatic toothed belt tensioning roller	30
2 Removing and installing cylinder block, sealing flange and flywheel	33
2.1 Removing and installing cylinder block, sealing flange and flywheel	33
2.2 Aluminium cylinder block	34
2.3 Renewing crankshaft oil seal -belt pulley end-	37
2.4 Renewing crankshaft sealing flange -flywheel end-	39
2.5 Crankshaft dimensions	48
3 Dismantling and assembling pistons and conrods	49
3.1 Dismantling and assembling pistons and conrods	49
3.2 Piston and cylinder dimensions	55
15 - Cylinder head, Valve gear	56
1 Removing and installing cylinder head	56
1.1 Removing and installing cylinder head	56
1.2 Removing and installing camshaft housing	60
1.3 Removing and installing cylinder head	63
1.4 Checking compression pressures	67
2 Servicing valve gear	69
2.1 Servicing valve gear	69
2.2 Reworking valve seats	77
2.3 Replacing camshaft oil seals	79
2.4 Checking valve guides	81
2.5 Renewing valve guides	81
2.6 Renewing valve stem seals	82
17 - Lubrication	85
1 Removing and installing parts of the lubrication system	85
1.1 Removing and installing parts of the lubrication system	85
1.2 Removing and installing oil sump	90
1.3 Removing and installing oil pump	92



1.4	Checking oil pressure and oil pressure switch	95
19	- Cooling system	97
1	Removing and installing parts of cooling system	97
1.1	Removing and installing parts of cooling system	97
1.2	Parts of cooling system body side	98
1.3	Parts of cooling system engine side	101
1.4	Coolant hose connection diagram	106
1.5	Draining and filling cooling system	107
1.6	Removing and installing radiator	109
1.7	Removing and installing coolant pump	111
20	- Fuel supply system	113
1	Removing and installing parts of fuel supply system	113
1.1	Removing and installing parts of fuel supply system	113
1.2	Removing and installing fuel tank with its attachments, Polo Classic, Polo Estate	114
1.3	Removing and installing fuel tank with its attachments, Caddy	119
1.4	Safety precautions when working on the fuel supply system	124
1.5	Rules for cleanliness	124
1.6	Removing and installing fuel delivery unit	125
1.7	Removing and installing fuel gauge sender	126
1.8	Removing and installing fuel tank	126
1.9	Crash fuel shut-off	128
1.10	Checking fuel pump	129
2	Checking electronic power control (EPC)	136
2.1	Checking electronic power control (EPC)	136
2.2	Function of EPC system	138
2.3	Checking accelerator pedal position sender	139
3	Activated charcoal filter system	142
3.1	Activated charcoal filter system	142
3.2	Function	142
3.3	Servicing parts of the activated charcoal filter system	143
3.4	Checking fuel tank breather	145
26	- Exhaust system	147
1	Removing and installing parts of exhaust system	147
1.1	Removing and installing parts of exhaust system	147
1.2	Exhaust manifold, front exhaust pipe and catalyst with attachments	148
1.3	Silencer with mountings	151
2	Exhaust gas recirculation system	153
2.1	Exhaust gas recirculation system	153
2.2	Servicing parts of exhaust gas recirculation system	154
2.3	Checking potentiometer for exhaust gas recirculation (G212)	156