



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Features of self-diagnosis	1
1.3 Technical data of self-diagnosis	1
1.4 Connecting fault reader V.A.G 1551 and selecting engine electronics control unit	2
2 Fault memory	4
2.1 Fault memory	4
2.2 Interrogating fault memory	4
2.3 Fault table	5
2.4 Erasing fault memory	12
3 Final control diagnosis	13
3.1 Final control diagnosis	13
3.2 Performing final control diagnosis	13
4 Measured value blocks	18
4.1 Measured value blocks	18
4.2 Safety precautions	18
4.3 Reading measured value block	18
4.4 Evaluating measured value block, engine code AEY	19
4.5 Evaluating measured value blocks, engine codes AHB, AKW	26
4.6 Evaluating measured value blocks, engine codes AFN, AHU, ALE	33
23 - Mixture preparation, Injection	45
1 Servicing Diesel direct injection system	45
1.1 Servicing Diesel direct injection system	45
1.2 Safety precautions	45
1.3 Rules for cleanliness	45
1.4 Fitting locations overview	46
1.5 Servicing injection pump	53
1.6 Setting engine to number 1 cylinder with engine removed	58
1.7 Checking throttle valve positioner housing	59
1.8 Removing and installing injection pump	61
1.9 Dynamically checking and adjusting commencement of injection	66
1.10 Checking valve timing	69
1.11 Removing and installing injectors	71
1.12 Servicing injectors	72
1.13 Renewing injection timing device cover O-ring	73
2 Checking components and functions	73
2.1 Checking components and functions	73
2.2 Checking Diesel direct injection system voltage supply	73
2.3 Checking engine speed sender	75
2.4 Checking intake manifold pressure sender and altitude sender	77
2.5 Checking coolant temperature sender	78
2.6 Checking brake light switch and brake pedal switch	81
2.7 Checking clutch pedal switch	84
2.8 Checking intake manifold sender	86
2.9 Checking intake air temperature sender	89
2.10 Checking fuel temperature sender	92
2.11 Checking modulating piston movement sender and quantity adjuster	95
2.12 Checking needle lift sender	101
2.13 Checking injection timing control range	103
2.14 Checking throttle valve positioner	108
2.15 Checking exhaust gas recirculation and air mass meter function	111



2.16	Checking speedometer sender	115
3	Replacing, coding and matching engine control unit	117
3.1	Replacing, coding and matching engine control unit	117
3.2	Replacing engine control unit	117
3.3	Coding engine control unit	118
3.4	Matching engine control unit to electronic immobilizer	120
28	Glow plug system	122
1	Checking glow plug system	122
1.1	Checking glow plug system	122
1.2	Checking glow plugs	122