



Contents

00 - Technical data	1
1 Technical data	1
1.1 Technical data	1
1.2 Engine number	1
1.3 Engine data	1
10 - Removing and installing engine	3
1 Removing and installing engine	3
1.1 Removing and installing engine	3
1.2 Notes on removing	4
1.3 Securing engine to assembly stand	7
1.4 Notes on installing	8
1.5 Tightening torques	10
1.6 Assembly mountings	10
1.7 Renewing bonded rubber bushes on subframe	12
1.8 Additional information and removal instructions for vehicles with air conditioner	13
13 - Crankshaft group	15
1 Dismantling and assembling engine	15
1.1 Dismantling and assembling engine	15
1.2 Removing and installing ribbed belt	25
2 Removing and installing sealing flange and pressure plate/flywheel/drive plate	27
2.1 Removing and installing sealing flange and pressure plate/flywheel/drive plate	27
2.2 Renewing crankshaft oil seal -pulley end	32
2.3 Removing and installing front sealing flange	35
3 Removing and installing crankshaft	38
3.1 Removing and installing crankshaft	38
3.2 Crankshaft dimensions	41
4 Dismantling and assembling pistons and conrods	42
4.1 Dismantling and assembling pistons and conrods	42
4.2 Checking piston projection at TDC	48
4.3 Piston and cylinder dimensions	49
15 - Cylinder head, Valve gear	50
1 Removing and installing cylinder head	50
1.1 Removing and installing cylinder head	50
1.2 Dismantling and assembling intake manifold	55
1.3 Removing, installing and tensioning toothed belt	60
1.4 Checking semi-automatic toothed belt tensioning roller	66
1.5 Removing and installing cylinder head	68
1.6 Checking compression pressures	70
2 Servicing valve gear	72
2.1 Servicing valve gear	72
2.2 Reworking valve seats	79
2.3 Checking valve guides	80
2.4 Renewing valve guides	81
2.5 Renewing valve stem seals	82
2.6 Removing and installing camshaft	85
2.7 Checking hydraulic bucket tappets	89
17 - Lubrication	91
1 Removing and installing parts of the lubrication system	91
1.1 Removing and installing parts of the lubrication system	91



1.2	Removing and installing sump	102
1.3	Checking oil pressure and oil pressure switch	105
19	- Cooling system	107
1	Removing and installing parts of cooling system	107
1.1	Removing and installing parts of cooling system	107
1.2	Parts of cooling system body side	108
1.3	Parts of cooling system engine side	112
1.4	Draining and filling cooling system	115
1.5	Removing and installing radiator	118
1.6	Removing and installing coolant pump	120
1.7	Removing and installing thermostat	122
20	- Fuel supply system	124
1	Removing and installing parts of fuel supply system	124
1.1	Removing and installing parts of fuel supply system	124
1.2	Removing and installing fuel tank with its attachments, Polo Classic, Polo Estate	125
1.3	Removing and installing fuel tank with its attachments, Caddy	130
1.4	Servicing fuel filter	136
1.5	Safety precautions when working on the fuel supply system	138
1.6	Rules for cleanliness	139
1.7	Removing and installing fuel tank	139
1.8	Servicing accelerator mechanism	142
1.9	Checking accelerator pedal position sender	144
1.10	Adjusting pedal position sender	147
21	- Charging	149
1	Charge air system with turbocharger	149
1.1	Charge air system with turbocharger	149
1.2	Safety precautions	149
1.3	Rules for cleanliness	149
1.4	Removing and installing turbocharger with attachments	149
1.5	Removing and installing parts of charge air cooling	160
1.6	Turbocharger hose/pipe connections	163
2	Checking charge pressure system	164
2.1	Checking charge pressure system	164
2.2	Checking pressure unit for charge pressure regulating valve	164
2.3	Removing and installing pressure unit for charge pressure regulating valve	165
2.4	Checking charge pressure control	166
26	- Exhaust system	173
1	Removing and installing parts of exhaust system	173
1.1	Removing and installing parts of exhaust system	173
2	Exhaust gas recirculation system: Engine codes AGR, ALH, ASV	177
2.1	Exhaust gas recirculation system: Engine codes AGR, ALH, ASV	177
2.2	Removing and installing parts of exhaust gas recirculation system	178
2.3	Vacuum hose connection diagram	180
2.4	Checking exhaust gas recirculation valve (mechanical)	180
2.5	Checking exhaust gas recirculation	182
2.6	Checking EGR valve	184
3	Exhaust gas recirculation system: Engine codes AGP, AQM, AYQ	186
3.1	Exhaust gas recirculation system: Engine codes AGP, AQM, AYQ	186
3.2	Removing and installing parts of exhaust gas recirculation system	187
3.3	Vacuum hose connection diagram	188
3.4	Checking exhaust gas recirculation valve (mechanical)	189
3.5	Checking EGR valve	190