

001 - Basic equipment	1-21
1. Basic equipment	1
2. Battery, ignition/starter switch, X contact relief relay, terminal 30 junction box	2
3. Control unit with display in dash panel insert, belt switch, driver's side, lights switched on warning buzzer alternator warning lamp, seat belt warning system warning lamp	3
4. Control unit with display in dash panel insert, rev. counter, reserve fuel warning lamp, digital display illumination, odometer display	4
5. Control unit with display in dash panel insert, handbrake warning switch, brake fluid level warning contact, main beam warning lamp, brake system warning lamp, digital clock	5-6
6. Turn signal switch, headlight dipper/flasher switch, parking light switch, twin filament bulb for headlight, left side light bulb, left	7
7. Hazard warning light switch, turn signal relay, hazard warning light system warning lamp, twin filament bulb for headlight, right side light bulb, right turn signal bulb, front right	8
8. Reversing light switch, turn signal bulb, rear right reversing light bulb, right brake and tail light bulb, right	9
9. Brake light switch, turn signal bulb, rear left reversing light bulb, left brake and tail light bulb, left	10
10. Door contact switch driver's side, door contact switch front passenger's side, door contact switch rear left, door contact switch rear right, front interior light	11
11. Cigarette lighter light bulb, radio, cigarette lighter self-diagnosis connection	12
12. Lighting switch, rear fog lights, lighting switch light bulb	13
13. Number plate light	14
14. Luggage compartment light switch, horn plate horn, luggage compartment light	15
15. Switches and instruments - lighting control, headlight range control adjuster	16
16. Fresh air blower switch, fresh air/air recirculating flap switch, fresh air/air recirculation warning lamp, fresh air control light bulb	17
17. Heated rear window switch, heated rear window warning lamp, heated rear window switch bulb, high level brake light bulb, heated rear window	18
18. Rear wiper switch, rear window wiper/washer relay, rear window wiper motor, windscreen and rear window washer pump	19
19. Intermittent wiper switch, automatic intermittent wash/wipe relay, windscreen wiper motor	20
20. Immobilizer control unit, immobilizer reading coil	21
003 - 1.4 l/74 kW Motronic, engine codes AQQ	22-33
1. 1.4 l/74 kW Motronic, engine codes AQQ	22
2. Starter, battery, alternator, voltage regulator, ignition/starter switch, terminal 30 junction box, X contact relief relay	23
3. Motronic control unit, hall sender, ignition transformer, spark plug connector, spark plugs, fuel shut-off control unit (crash)	24
4. Motronic control unit, throttle valve control unit, coolant temperature sender, throttle valve drive (electric throttle operation)	25
5. Motronic control unit, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation frequency valve	26
6. Motronic control unit, engine speed sender, knock sensor I, accelerator pedal position sender, clutch pedal switch	27
7. Motronic control unit, injectors	28
8. Motronic control unit, lambda probe, lambda probe downstream of catalytic converter, lambda probe heater, activated charcoal filter system solenoid valve 1 (pulsed)	29
9. Motronic control unit, speedometer sender (hall sender, on gearbox), brake light switch, cruise control system brake pedal switch (diesel direct injection system), fuel pump relay	30
10. Radiator fan thermo-switch, oil pressure switch (0.3 bar), fuel gauge sender, fuel pump (pre-supply pump)	31
11. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, oil pressure warning lamp	32
12. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	33
004 - 1.9 l/50 kW naturally aspirated diesel engine, engine codes AGP/AQM	34-44
1. 1.9 l/50 kW naturally aspirated diesel engine, engine codes AGP/AQM	34
2. Battery, starter, alternator, voltage regulator, ignition/starter switch, terminal 30 junction box, X contact relief relay	35
3. Diesel direct injection system control unit, relay for glow plugs, glow plugs (engine), terminal 30 voltage supply relay, kick-down switch, idling switch, accelerator pedal position sender	36
4. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, needle lift sender	37
5. Diesel direct injection system control unit, exhaust gas recirculation valve, fuel temperature sender, modulating piston movement sender, metering adjuster	38
6. Diesel direct injection system control unit. relay for coolant heater elements. coolant heater	39

elements, intake manifold preheating heater element	
7. Diesel direct injection system control unit, coolant temperature sender, commencement of injection valve	40
8. Diesel direct injection system control unit, fuel shut-off control unit (crash), brake light switch, clutch pedal switch, cruise control system brake pedal switch (diesel direct injection system), fuel shut-off valve	41
9. Radiator fan thermo-switch, oil pressure switch, fuel gauge sender, speedometer sender (hall sender, on gearbox)	42
10. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp, odometer display	43
11. Control unit with display in dash panel insert, rev. counter oil pressure warning buzzer, alternator warning lamp	44
005 - 1.9 l/66 kW turbo-diesel engine, engine codes AGR/ALH	45-55
1. 1.9 l/66 kW turbo-diesel engine, engine codes AGR/ALH	45
2. Starter, battery, alternator, voltage regulator, ignition/starter switch, terminal 30 junction box, X contact relief relay	46
3. Diesel direct injection system control unit, relay for glow plugs, glow plugs (engine), terminal 30 voltage supply relay, kick-down switch, idling switch, accelerator pedal position sender	47
4. Diesel direct injection system control unit, engine speed sender, intake manifold pressure sender, needle lift sender, intake air temperature sender	48
5. Diesel direct injection system control unit, charge pressure control solenoid valve, intake manifold flap change-over valve, fuel temperature sender, modulating piston movement sender, metering adjuster	49
6. Diesel direct injection system control unit, relay for coolant heater elements, coolant heating elements, intake manifold preheating heater element, air mass meter	50
7. Diesel direct injection system control unit, coolant temperature sender, exhaust gas recirculation valve, commencement of injection valve	51
8. Diesel direct injection system control unit, fuel shut-off control unit (crash), brake light switch, clutch pedal switch for warning buzzer, cruise control system brake pedal switch (diesel direct injection system), fuel shut-off valve	52
9. Radiator fan thermo-switch, oil pressure switch, fuel gauge sender, speedometer sender (hall sender, on gearbox)	53
10. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp odometer display	54
11. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	55
006 - 1.6 l/55 kW Motronic, engine codes ALM	56-64
1. 1.6 l/55 kW Motronic, engine codes ALM	56
2. Battery, starter, alternator, voltage regulator, ignition/starter switch, terminal 30 junction box	57
3. Motronic control unit, hall sender, ignition transformer, ignition transformer output stage, ignition distributor, spark plug connector, spark plugs, fuel shut-off control unit (crash)	58
4. Motronic control unit, throttle valve control unit, throttle valve positioner, idling switch, coolant temperature sender, intake air temperature sender, intake manifold pressure sender	59
5. Motronic control unit, knock sensor 1, injector cylinder 1, injector cylinder 2, injector cylinder 3, injector cylinder 4	60
6. Motronic control unit, brake light switch, speedometer sender (hall sender, on gearbox), lambda probe, activated charcoal filter system solenoid valve 1 (pulsed), lambda probe heater, fuel pump relay	61
7. Radiator fan thermo-switch, oil pressure switch (0.3 bar), fuel gauge sender, fuel pump (pre-supply pump), coolant shortage indicator sender	62
8. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	63
9. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	64
007 - 1.6 l Simos/74 kW, engine codes APF	65-77
1. 1.6 l Simos/74 kW, engine codes APF	65
2. Battery, starter, ignition/starter switch, X contact relief relay	66
3. Alternator, voltage regulator, terminal 30 junction box	67
4. Simos control unit, hall sender, ignition transformer, spark plug connector, spark plugs, fuel shut-off control unit (crash)	68
5. Simos control unit, throttle valve control unit, coolant temperature sender, throttle valve drive (electric throttle operation)	69
6. Simos control unit. power assisted steering pressure switch. engine speed sender. exhaust gas	70

recirculation frequency valve, secondary air pump motor	
7. Simos control unit, knock sensor I, air mass meter, accelerator pedal position sender, secondary air inlet valve	71
8. Simos control unit, injector cylinder 1	72
9. Simos control unit, lambda probe, lambda probe downstream of catalytic converter, lambda probe heater, activated charcoal filter system solenoid valve 1 (pulsed), intake manifold change-over valve, current supply relay for Simos control unit	73
10. Simos control unit, brake light switch, clutch pedal switch, cruise control system brake pedal switch (diesel direct injection system), speedometer sender (hall sender, on gearbox), fuel pump relay	74
11. Radiator fan thermo-switch, oil pressure switch (0.3 bar), fuel gauge sender, fuel pump (pre-supply pump), coolant shortage indicator sender	75
12. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	76
13. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	77
008 - 1.6 I/74 kW Motronic, engine codes AKL	78-88
1. 1.6 I/74 kW Motronic, engine codes AKL	78
2. Battery, starter, alternator, voltage regulator, ignition/starter switch, terminal 30 junction box, X contact relief relay	79
3. Motronic control unit, hall sender, ignition transformer, spark plug connector, spark plugs, fuel shut-off control unit (crash)	80
4. Motronic control unit, idling switch, coolant temperature sender, engine speed sender, throttle valve control unit, throttle valve potentiometer, throttle valve positioner	81
5. Motronic control unit, clutch pedal switch, power assisted steering pressure switch	82
6. Motronic control unit, knock sensor 1, injectors	83
7. Motronic control unit, lambda probe, air mass meter, intake manifold change-over valve, lambda probe heater	84
8. Motronic control unit, brake light switch, speedometer sender (hall sender, on gearbox), activated charcoal filter system solenoid valve 1 (pulsed), fuel pump relay	85
9. Radiator fan thermo-switch, radiator fan, oil pressure switch (0.3 bar), fuel gauge sender, fuel pump (pre-supply pump), coolant shortage indicator sender	86
10. Control unit with display in dash panel insert, fuel gauge coolant temperature gauge, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	87
11. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	88
009 - 1.6 I Simos/74 kW, engine codes AEH	89-100
1. 1.6 I Simos/74 kW, engine codes AEH	89
2. Battery, starter, ignition/starter switch, X contact relief relay	90
3. Alternator, voltage regulator, terminal 30 junction box	91
4. Simos control unit, hall sender, ignition transformer, spark plug connector, spark plugs, fuel shut-off control unit (crash)	92
5. Simos control unit, throttle valve control unit, throttle valve potentiometer, throttle valve positioner, idling switch, coolant temperature sender, engine speed sender	93
6. Simos control unit, power assisted steering pressure switch	94
7. Simos control unit, knock sensor 1, injector cylinder 1, injector cylinder 2, injector cylinder 3, injector cylinder 4	95
8. Simos control unit, lambda probe, air mass meter, intake manifold change-over valve, lambda probe heater	96
9. Simos control unit, brake light switch, speedometer sender (hall sender, on gearbox), activated charcoal filter system solenoid valve 1 (pulsed), fuel pump relay	97
10. Radiator fan thermo-switch, oil pressure switch (0.3 bar), fuel gauge sender, fuel pump (pre-supply pump), coolant shortage indicator sender	98
11. Control unit with display in dash panel insert, fuel gauge, coolant temperature gauge, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	99
12. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	100
010 - 1.4 I/44 kW Motronic, engine codes AKK/ANW	101-112
1. 1.4 I/44 kW Motronic, engine codes AKK/ANW	101
2. Battery, starter, alternator, voltage regulator, ignition/starter switch, terminal 30 junction box, X contact relief relay	102
3. Motronic control unit, hall sender, ignition transformer, spark plug connector, spark plugs, fuel shut-off control unit (crash)	103
4. Motronic control unit, engine speed sender, intake air temperature sender, intake manifold pressure sender, exhaust gas recirculation frequency valve	104
5. Motronic control unit. coolant temperature sender. knock sensor I	105

6. Motronic control unit, throttle valve control unit, accelerator pedal position sender, accelerator pedal position sender -2-, throttle valve drive (electric throttle operation)	106
7. Motronic control unit, injectors	107
8. Motronic control unit, lambda probe, lambda probe downstream of catalytic converter, lambda probe heater, activated charcoal filter system solenoid valve 1 (pulsed)	108
9. Motronic control unit, brake light switch, cruise control system brake pedal switch (diesel direct injection system), speedometer sender (hall sender, on gearbox), fuel pump relay	109
10. Radiator fan thermo-switch, oil pressure switch (0.3 bar), fuel gauge sender, fuel pump (pre-supply pump), coolant shortage indicator sender	110
11. Control unit with display in dash panel insert fuel gauge, coolant temperature gauge, speedometer, oil pressure warning lamp, coolant temperature/coolant shortage warning lamp	111
12. Control unit with display in dash panel insert, rev. counter, oil pressure warning buzzer, alternator warning lamp	112
011 - Four-speed automatic gearbox (AG4)	113-117
1. Four-speed automatic gearbox (AG4)	113
2. Starter inhibitor and reversing light relay, reversing light switch	114
3. Automatic gearbox control unit, multi-function switch	115
4. Automatic gearbox control unit, kick-down switch, gearbox speed sender, oil temperature sender, solenoid valve 1, solenoid valve 2, solenoid valve 3	116
5. Automatic gearbox control unit, vehicle speed sender (inductive sender, 2 connections), selector lever position P/N warning lamp, selector lever display illumination	117
012 - Radiator fan, 2 speed	118-120
1. Radiator fan, 2 speed	118-119
2. Radiator fan thermo-switch, radiator fan V7 and V35 relay, 1st speed, radiator fan, radiator fan, right	120
013 - Dual tone horn	121-122
1. Dual tone horn	121
2. Horn/dual tone horn, horn plate, dual tone horn relay	122
014 - Air conditioner	123-126
1. Air conditioner	123
2. Fresh air blower switch, air conditioner switch, fresh air/air recirculating flap switch	124
3. Radiator fan control unit, air conditioner system, magnetic coupling, radiator fan, radiator fan right	125
4. Radiator fan control unit, radiator fan thermo-switch, ambient temperature switch, high pressure sender	126
015 - Air conditioner	127-130
1. Air conditioner	127
2. Fresh air blower switch, air conditioner switch, fresh air/air recirculating flap switch	128
3. Radiator fan control unit, air conditioner system magnetic coupling, radiator fan, radiator fan right	129
4. Radiator fan control unit, radiator fan thermo-switch, ambient temperature switch, high pressure sender	130
016 - Air conditioner	131-134
1. Air conditioner	131
2. Fresh air blower switch, air conditioner switch, fresh air/air recirculating flap switch	132
3. Radiator fan control unit, air conditioner system magnetic coupling, radiator fan, radiator fan right	133
4. Radiator fan control unit, radiator fan thermo-switch, ambient temperature switch, high pressure sender	134
017 - Interior monitoring	135-136
1. Interior monitoring	135
2. Alarm system switch, interior monitoring sensor	136
018 - Sliding / tilting sunroof	137-138
1. Sliding / tilting sunroof	137
2. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator, sliding sunroof motor	138
019 - Central locking, remote control and anti-theft alarm system	139-145
1. Central locking, remote control and anti-theft alarm system	139
2. Central locking control unit and anti-theft alarm system, luggage compartment light switch	140-141
3. Central locking control unit and anti-theft alarm system, central locking pump with control unit	142
4. Central locking control unit and anti-theft alarm system, tailgate/bootlid central locking switch (driver's side), tailgate/bootlid central locking switch (front passenger's side)	143
5. Anti-theft alarm system/rodent repellent system contact switch, anti-theft alarm system horn, central locking warning lamp -SAFE-	144
6. Door contact switch driver's side, door contact switch front passenger's side, door contact switch rear left. door contact switch rear right. front interior light	145

020 - Electric windows	146-148
1. Electric windows	146
2. Door control unit, driver's side, front left electric window switch, electric window motor, driver's side, window switch light bulb	147
3. Door control unit, passenger's side, front right electric window switch, electric window motor, passenger's side, window switch light bulb	148
021 - Airbag system	149-151
1. Airbag system	149
2. Airbag control unit, airbag coil connector, return spring with slip ring, side airbag crash sensor, driver's side, side airbag crash sensor, front passenger's side	150
3. Airbag control unit, igniter -1- belt tensioner, driver's side, igniter -2- belt tensioner front passenger's side	151
022 - Anti-lock brake system (ABS) und anti-lock brake system (ABS), with electronic differential lock (EDL)	152-155
1. Anti-lock brake system (ABS) und anti-lock brake system (ABS), with electronic differential lock (EDL)	152
2. ABS with EDL control unit	153
3. ABS with EDL control unit, differential lock valve 1, differential lock valve 2, ABS inlet valve, rear right, ABS inlet valve, rear left	154
4. ABS with EDL control unit, rear right speed sensor, front right speed sensor	155
023 - Exterior mirror, electrically adjustable and heated	156-158
1. Exterior mirror, electrically adjustable and heated	156
2. Mirror adjustment switch, mirror adjustment motor (driver's side), heated exterior mirrors driver's side	157
3. Mirror adjustment change-over switch, mirror adjustment switch illumination, mirror adjustment motor (front passenger's side), heated exterior mirrors front passenger's side	158
024 - Radio systems	159-162
1. Radio systems	159
2. Radio, CD changer	160
3. Radio, loudspeaker, rear left, loudspeaker, rear right, treble loudspeaker, front left, bass loudspeaker, front left, treble loudspeaker, front right, bass loudspeaker, front right	161
4. Radio, aerial, aerial amplifier	162
025 - Rain sensor, automatic anti-dazzle interior mirror	163-166
1. Rain sensor, automatic anti-dazzle interior mirror	163
2. Rain sensor, automatic anti-dazzle interior mirror	164
3. Intermittent wiper switch, windscreen wiper motor, windscreen and rear window washer pump	165
4. Heated rear window switch, heated rear window warning lamp, heated rear window switch bulb, heated rear window	166
026 - Heated front seats	167-168
1. Heated front seats	167
2. Heated driver seat, heated front passenger's seat	168
027 - Socket (12V)	169-170
1. Socket (12V)	169
2. 12 V socket	170
028 - Heated washer jets	171-172
1. Heated washer jets	171
2. Heater element, left washer jet, heater element, right washer jet	172
029 - Headlight washer system	173-174
1. Headlight washer system	173
2. Headlight washer system relay, headlight washer system pump	174
030 - Front and rear fog lights	175-177
1. Front and rear fog lights	175
2. Fog light bulb left, fog light bulb right	176-177
031 - Daytime driving lights	178-184
1. Daytime driving lights	178
2. Control unit with display in dash panel insert, main beam warning lamp, twin filament bulb for headlight left	179
3. Turn signal switch, headlight dipper/flasher switch, twin filament bulb for headlight right	180
4. Lighting switch, rear fog lights, lighting switch light bulb	181
5. Brake and tail light bulb left, brake and tail light bulb right	182-183
6. Number plate light	184
032 - 1.9 l turbo-diesel engine/ 81 kW, engine codes ASK, ASV	185-198
1. 1.9 l turbo-diesel engine/ 81 kW, engine codes ASK, ASV	185-186
2. Starter, battery, ignition/starter switch, fuse box / battery	187
3. Diesel direct injection system control unit, alternator, voltage regulator, glow plugs (engine), relay for glow plugs, voltage supply relay	188

4. Diesel direct injection system control unit, accelerator pedal position sender, intake manifold pressure sender, intake air temperature sender, kick-down switch, idling switch	189
5. Diesel direct injection system control unit, engine speed sender, needle lift sender, immobilizer control unit	190
6. Diesel direct injection system control unit, metering adjuster, exhaust gas recirculation valve, intake manifold flap change-over valve, fuel temperature sender, modulating piston movement sender	191
7. Diesel direct injection system control unit, air mass meter/coolant, heater element relay, coolant heating elements	192
8. Diesel direct injection system control unit, coolant temperature sender, intake manifold preheating heater element, charge pressure control solenoid valve, commencement of injection valve	193
9. Diesel direct injection system control unit, brake light switch, clutch pedal switch, cruise control system brake pedal switch/diesel direct inj. system	194
10. Diesel direct injection system control unit, fuel shut-off control unit (Crash), fuel shut-off valve	195
11. Oil pressure switch, fuel gauge sender, speedometer sender, radiator fan, radiator fan thermo-switch	196
12. Control unit with display in dash panel insert, oil pressure warning lamp, coolant shortage indicator sender	197
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, glow period warning lamp	198
033 - 1.6 l Simos/74 kW, engine codes AUR	199-214
1. 1.6 l Simos/74 kW, engine codes AUR	199
2. Starter, battery, ignition/starter switch	200-201
3. Alternator, ignition/starter switch, fuse box/battery	202
4. Simos control unit, ignition transformer	203
5. Simos control unit, accelerator pedal position sender, throttle valve control unit	204
6. Simos control unit, coolant temperature sender, engine speed sender, knock sensor I	205
7. Simos control unit, Hall sender, power assisted steering pressure switch, air mass meter	206
8. Exhaust gas recirculation potentiometer, exhaust gas recirculation frequency valve, activated charcoal filter system solenoid valve 1, secondary air inlet valve, Intake manifold change-over valve	207
9. Simos control unit, lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1, secondary air pump motor	208
10. Simos control unit, injectors, immobilizer control unit	209
11. Simos control unit, brake pedal switch, brake light switch, clutch pedal switch	210
12. Simos control unit, fuel pump relay, fuel shut-off control unit (Crash)	211
13. Oil pressure switch, fuel pump, speedometer sender, radiator fan, radiator fan thermo-switch, fuel gauge sender	212
14. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp, rev. counter, speedometer, odometer display	213
15. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, data bus diagnostic interface	214
034 - 1.4 l/55 kW - 4LV, engine codes APE, AUA	215-227
1. 1.4 l/55 kW - 4LV, engine codes APE, AUA	215
2. Starter, battery, ignition/starter switch, fuse box / battery	216
3. 4LV control unit (injection system), alternator, voltage regulator, voltage supply, ignition transformer	217
4. 4LV control unit (injection system), accelerator pedal position senders, throttle valve control unit	218
5. 4LV control unit (injection system), coolant temperature sender, intake air temperature sender, intake manifold pressure sender, Hall sender	219
6. 4LV control unit (injection system), engine speed sender, knock sensor I, exhaust gas recirculation frequency valve	220
7. 4LV control unit (injection system), injectors, immobilizer control unit	221
8. 4LV control unit (injection system), lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1	222
9. 4LV control unit (injection system), brake light switch, clutch pedal switch, brake pedal switch	223
10. 4LV control unit (injection system), fuel pump relay, fuel shut-off control unit (crash)	224
11. Oil pressure switch, fuel pump, speedometer sender, radiator fan thermo-switch, radiator fan, fuel gauge sender	225
12. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp, speedometer, odometer display	226
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, data bus diagnostic interface	227
035 - 1.4 l/44 kW Motronic, engine codes AUD	228-240
1. 1.4 l/44 kW Motronic. engine codes AUD	228

2. Starter, battery, ignition/starter switch, fuse box / battery	229
3. Motronic control unit, alternator, ignition transformer	230
4. Motronic control unit, accelerator pedal position senders, throttle valve control unit	231
5. Motronic control unit, coolant temperature sender, intake air temperature sender, intake manifold pressure sender, Hall sender	232
6. Motronic control unit, engine speed sender, knock sensor I, exhaust gas recirculation frequency valve	233
7. Motronic control unit, injectors, immobilizer control unit	234
8. Motronic control unit, lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1	235
9. Motronic control unit, brake light switch, brake pedal switch	236
10. Motronic control unit, fuel pump relay, fuel shut-off control unit (crash)	237
11. Oil pressure switch, fuel pump, speedometer sender, radiator fan, radiator fan thermo-switch, fuel pump, fuel gauge sender	238
12. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp	239
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, data bus diagnostic interface	240
036 - Air conditioner	241-246
1. Air conditioner	241-242
2. Fresh air blower switch, air conditioner switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	243
3. Radiator fan control unit, air conditioner magnetic coupling, radiator fan, radiator fan, right	244
4. Radiator fan control unit, ambient temperature switch, radiator fan thermo-switch, high pressure sender	245
5. Fuses	246
037 - Air conditioner	247-252
1. Air conditioner	247-248
2. Fresh air blower switch, air conditioner switch, fresh air/air recirculating flap switch, fresh air blower, fresh/recirculating air flap control motor	249
3. Radiator fan control unit, air conditioner magnetic coupling, radiator fan, radiator fan, right, high pressure sender	250
4. Radiator fan control unit, ambient temperature switch, radiator fan thermo-switch, high pressure sender	251
5. Fuses	252
038 - Airbags system	253-255
1. Airbags system	253
2. Airbag control unit, airbag coil connector, return spring with slip ring, side airbag crash sensor, driver's side, side airbag crash sensor, front passenger's side	254
3. Airbag control unit, belt tensioner igniter -1-, driver's side, belt tensioner igniter -1-, front passenger's side	255
039 - Four-speed automatic gearbox (AG4)	256-261
1. Four-speed automatic gearbox (AG4)	256
2. Starter inhibitor and reversing light relay	257
3. Automatic gearbox control unit, multi-function switch	258
4. Automatic gearbox control unit, solenoid valve, gearbox speed sender, gearbox oil temperature sender	259
5. Automatic gearbox control unit, vehicle speed sender, selector lever lock solenoid	260
6. Fuses, data bus diagnostic interface	261
040 - 1.9 l/50 kW naturally aspirated diesel engine, engine codes AGP, AQM	262-274
1. 1.9 l/50 kW naturally aspirated diesel engine, engine codes AGP, AQM	262
2. Starter, battery, ignition/starter switch, fuse box / battery	263
3. Diesel direct injection system control unit, alternator, voltage regulator, glow plugs (engine), relay for glow plugs, voltage supply relay	264
4. Diesel direct injection system control unit, accelerator pedal position sender, intake air temperature sender, kick-down switch, idling switch	265
5. Diesel direct injection system control unit, engine speed sender, needle lift sender, immobilizer control unit	266
6. Diesel direct injection system control unit, metering adjuster, exhaust gas recirculation valve, intake manifold flap change-over valve, fuel temperature sender, modulating piston movement sender	267
7. Diesel direct injection system control unit, coolant heater element relay, coolant heating elements	268
8. Diesel direct injection system control unit, coolant temperature sender, intake manifold preheating heater element, commencement of injection valve	269
9. Diesel direct injection system control unit, brake light switch, clutch pedal switch, cruise control system brake pedal switch/diesel direct ini. system	270

10. Diesel direct injection system control unit, fuel shut-off control unit (Crash), fuel shut-off valve	271
11. Oil pressure switch, fuel gauge sender, speedometer sender, radiator fan, radiator fan thermo-switch	272
12. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp	273
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, glow period warning lamp	274
041 - 1.9 l turbo-diesel engine/ 81 kW, engine codes ASK, ASV	275-288
1. 1.9 l turbo-diesel engine/ 81 kW, engine codes ASK, ASV	275-276
2. Starter, battery, ignition/starter switch, fuse box / battery	277
3. Diesel direct injection system control unit, alternator, voltage regulator, glow plugs (engine), relay for glow plugs, voltage supply relay	278
4. Diesel direct injection system control unit, accelerator pedal position sender, intake manifold pressure sender, intake air temperature sender, kick-down switch, idling switch	279
5. Diesel direct injection system control unit, engine speed sender, needle lift sender, immobilizer control unit	280
6. Diesel direct injection system control unit, metering adjuster, exhaust gas recirculation valve, intake manifold flap change-over valve, fuel temperature sender, modulating piston movement sender	281
7. Diesel direct injection system control unit, air mass meter/coolant, heater element relay, coolant heating elements	282
8. Diesel direct injection system control unit, coolant temperature sender, intake manifold preheating heater element, charge pressure control solenoid valve, commencement of injection valve	283
9. Diesel direct injection system control unit, brake light switch, clutch pedal switch, cruise control system brake pedal switch/diesel direct inj. system	284
10. Diesel direct injection system control unit, fuel shut-off control unit (Crash), fuel shut-off valve	285
11. Oil pressure switch, fuel gauge sender, speedometer sender, radiator fan, radiator fan thermo-switch	286
12. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp	287
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, glow period warning lamp	288
042 - 1.6 l Simos/74 kW, engine codes AUR	289-304
1. 1.6 l Simos/74 kW, engine codes AUR	289
2. Starter, battery, ignition/starter switch	290-291
3. Alternator, ignition/starter switch, fuse box/battery	292
4. Simos control unit, ignition transformer	293
5. Simos control unit, accelerator pedal position sender, throttle valve control unit	294
6. Simos control unit, coolant temperature sender, engine speed sender, knock sensor I	295
7. Simos control unit, Hall sender, power assisted steering pressure switch, air mass meter	296
8. Exhaust gas recirculation potentiometer, exhaust gas recirculation frequency valve, activated charcoal filter system solenoid valve 1, secondary air inlet valve, Intake manifold change-over valve	297
9. Simos control unit, lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1, secondary air pump motor	298
10. Simos control unit, injectors, immobilizer control unit	299
11. Simos control unit, brake pedal switch, brake light switch, clutch pedal switch	300
12. Simos control unit, fuel pump relay, fuel shut-off control unit (Crash)	301
13. Oil pressure switch, fuel pump, speedometer sender, radiator fan, radiator fan thermo-switch, fuel gauge sender	302
14. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp, rev. counter, speedometer, odometer display	303
15. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, data bus diagnostic interface	304
043 - Basic equipment	305-334
1. Basic equipment	305
2. Fuses, battery, ignition/starter switch, X contact relief relay	306
3. Fuses, belt switch, driver's side, dash panel insert	307-308
4. Fuses, speedometer sender, dash panel insert	309-310
5. Handbrake warning switch, brake fluid level warning contact, dash panel insert	311-312
6. Fuses, turn signal switch, parking light switch, headlight, left, turn signal front left	313
7. Fuses, hazard warning light switch, headlight right, turn signal front right	314
8. Reversing light switch, brake and tail light bulb, right	315-316
9. Brake light switch, brake and tail light bulb, left	317-318
10. Interior light. door contact switch	319

11. Fuses, cigarette lighter, connection for radio, diagnostic connector	320
12. Light switch	321
13. Number plate light, illumination regulator	322-323
14. Luggage compartment light, tailgate/boot lid contact switch for anti-theft alarm	324-325
15. Fuses, horn plate	326-327
16. Fuses, headlight range control, illumination regulator	328
17. Fuses, fresh air blower, fresh air/air recirculating flap	329
18. Fuses, heated rear window switch, high level brake light bulb	330-331
19. Windscreen and rear window washer pump, rear window wiper motor	332
20. Windscreen wiper motor	333
21. Fuses, immobilizer control unit	334
044 - Central locking, remote control and anti-theft alarm system aerial	335-344
1. Central locking, remote control and anti-theft alarm system aerial	335
2. Fuses	336
3. Luggage compartment light, tailgate/boot lid contact switch for anti-theft alarm	337
4. Luggage compartment light, tailgate/boot lid contact switch for anti-theft alarm	338
5. Interior locking switch, driver's side, central locking pump with control unit	339-340
6. Central locking switch (driver's side), tailgate/bootlid central locking switch (front passenger's side)	341
7. Interior monitoring sensor, central locking and anti-theft alarm system aerial	342
8. Anti-theft alarm system horn, anti-theft alarm/vermin repellent system contact switch, central locking warning lamp -SAFE-	343
9. Interior light, door contact switch	344
045 - Electric window lifter	345-352
1. Electric window lifter	345
2. Window lifter motor, driver's side, central locking switch, door control unit, driver's side	346
3. Front left window lifter switch, door control unit, driver's side, fuses	347
4. Front right window lifter switch, door control unit, front passenger's side	348
5. Central locking switch (front passenger's side), door control unit, front passenger's side, fuses, window lifter motor, front passenger's side	349
6. Rear window lifter isolation switch, rear left window lifter switch	350
7. Window lifter motor, rear left	351
8. Window lifter motor, rear right	352
046 - Daytime driving lights	353-360
1. Daytime driving lights	353
2. Headlight, left, turn signal front right, turn signal bulb, rear, dash panel insert	354
3. Right headlight, front right turn signal, turn signal switch	355
4. Light switch	356
5. Brake and tail light bulb	357-358
6. Number plate light	359-360
047 - 1.4 l/55 kW - 4LV, engine codes APE, AUA	361-373
1. 1.4 l/55 kW - 4LV, engine codes APE, AUA	361
2. Starter, battery, ignition/starter switch, fuse box / battery	362
3. 4LV control unit (injection system), alternator, voltage regulator, voltage supply, ignition transformer	363
4. 4LV control unit (injection system), accelerator pedal position senders, throttle valve control unit	364
5. 4LV control unit (injection system), coolant temperature sender, intake air temperature sender, intake manifold pressure sender, Hall sender	365
6. 4LV control unit (injection system), engine speed sender, knock sensor I, exhaust gas recirculation frequency valve	366
7. 4LV control unit (injection system), injectors, immobilizer control unit	367
8. 4LV control unit (injection system), lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1	368
9. 4LV control unit (injection system), brake light switch, clutch pedal switch, brake pedal switch	369
10. 4LV control unit (injection system), fuel pump relay, fuel shut-off control unit (crash)	370
11. Oil pressure switch, fuel pump, speedometer sender, radiator fan thermo-switch, radiator fan, fuel gauge sender	371
12. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp, speedometer, odometer display	372
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, data bus diagnostic interface	373
048 - 1.4 l/44 kW Motronic, engine codes AUD	374-386
1. 1.4 l/44 kW Motronic, engine codes AUD	374
2. Starter, battery, ignition/starter switch, fuse box / battery	375
3. Motronic control unit. alternator. ignition transformer	376

4. Motronic control unit, accelerator pedal position senders, throttle valve control unit	377
5. Motronic control unit, coolant temperature sender, intake air temperature sender, intake manifold pressure sender, Hall sender	378
6. Motronic control unit, engine speed sender, knock sensor I, exhaust gas recirculation frequency valve	379
7. Motronic control unit, injectors, immobilizer control unit	380
8. Motronic control unit, lambda probe, lambda probe after catalyst, activated charcoal filter system solenoid valve 1	381
9. Motronic control unit, brake light switch, brake pedal switch	382
10. Motronic control unit, fuel pump relay, fuel shut-off control unit (crash)	383
11. Oil pressure switch, fuel pump, speedometer sender, radiator fan, radiator fan thermo-switch, fuel pump, fuel gauge sender	384
12. Control unit with display in dash panel insert, coolant shortage indicator sender, oil pressure warning lamp	385
13. Control unit with display in dash panel insert, diagnostic connector, alternator warning lamp, data bus diagnostic interface	386
601 - Polo Classic	387-391
1. Polo Classic	387
2. Bosch Motronic MP9 Control Unit, ignition system, knock sensor, engine RPM sender	388
3. Bosch Motronic MP9 Control Unit, senders for intake manifold and coolant temperature, throttle valve potentiometer	389
4. Bosch Motronic MP9 Control Unit, injectors, thermo switch for run-on fan	390
5. Oil pressure switch, sender for speedometer	391