



## Contents

<b>1</b>	<b>Engine list</b>	<b>1</b>
<b>2</b>	<b>Service work</b>	<b>6</b>
2.1	Service tables	6
2.2	Delivery inspection	8
2.3	Oil change service	9
2.4	Inspection service	11
<b>3</b>	<b>General information</b>	<b>17</b>
3.1	Lifting the vehicle	17
3.2	Sticker	18
3.3	Connecting vehicle diagnostic tester	20
3.4	Vehicle identification number	22
3.5	Vehicle data sticker	22
3.6	Countries where diesel has a high sulphur content	23
3.7	Engine code and engine number	23
3.8	RME fuel (biodiesel)	23
3.9	Type plate	24
<b>4</b>	<b>Descriptions of work:</b>	<b>25</b>
4.1	Swivel joints: inspecting	26
4.2	Automatic gearbox: checking ATF level, topping up if necessary	26
4.3	Battery: checking	26
4.4	Battery: checking battery terminal clamps for secure seating	27
4.5	Tyres: checking condition, wear pattern, inflation pressure, tread depth	28
4.6	Brake system: inspecting for leaks and damage	32
4.7	Front and rear brake pads/linings: checking thickness	32
4.8	Brake system: changing brake fluid	34
4.9	Brake fluid level: checking	37
4.10	Electric windows: initialising (activation)	38
4.11	Vehicle system test: carrying out test	38
4.12	Folding fabric sunroof: cleaning and lubricating guide rails	39
4.13	Boots: inspecting	40
4.14	Checking first aid box expiry date	40
4.15	Poly V-belt: checking condition, tensioning if necessary	40
4.16	Fuel filter: renewing	42
4.17	Fuel filter: draining water (diesel engine)	44
4.18	Cooling system: checking frost protection and coolant level	46
4.19	Idling speed: checking and adjusting if necessary	49
4.20	Air filter: cleaning housing and renewing filter element	49
4.21	Engine cover panel -top-: removing and installing	57
4.22	Engine cover panel, -bottom- (noise insulation): removing and installing	58
4.23	Engine oil level: checking	58
4.24	Engine oil: draining or extracting and replenishing; renewing oil filter	59
4.25	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	64
4.26	Carrying out road test	64
4.27	Wheel bolts: tightening to specified torque	65
4.28	Radio and radio-navigation system: sticking serial number and code number onto unit card	67
4.29	Radio/radio-navigation system: activating anti-theft coding	67
4.30	Manual gearbox/final drive: checking oil level, topping-up oil if necessary	68
4.31	Headlight adjustment: checking, adjusting if necessary	69
4.32	Sunroof: checking function, cleaning and greasing guide rails	76
4.33	Window wash/wipe system and headlight washer system: checking function	77
4.34	Wiper blades: checking park position and setting angle	82
4.35	Power assisted steering: checking fluid level	84



4.36	Service interval display: resetting	86
4.37	Track rod ends: checking clearance, firm seating and boots	101
4.38	Dust and pollen filter: renewing filter element	101
4.39	Door arrester: lubricating	102
4.40	Clock: setting to correct time	103
4.41	Underbody protection: visual check for damage	104
4.42	Toothed belt: checking for wear	104
4.43	Camshaft drive toothed belt and tensioning roller: renewing, PD diesel engine	106
4.44	Toothed belt: renewing	106
4.45	Toothed belt: checking condition and tensioning, tensioning toothed belt if necessary	107
4.46	Spark plugs: renewing	108
4.47	Camshaft drive toothed belt: checking (4-cylinder petrol engine)	112
4.48	Driver and front passenger airbags: visual check of airbag units	113
<b>5</b>	<b>Exhaust emissions test</b>	<b>115</b>
5.1	Exhaust emissions test for petrol engines without OBD	115
5.2	Exhaust emissions test for petrol engines with OBD	134
5.3	Exhaust emissions test for diesel engines without OBD	137
<b>6</b>	<b>Glossary</b>	<b>153</b>