



Contents

27 - Starter, current supply, CCS	1
1 Battery	1
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery terminal connection	1
2 Checking battery	2
3 Charging battery	3
4 Disconnecting and reconnecting battery	4
4.1 Disconnecting and reconnecting battery	4
5 Removing and installing battery	7
5.1 Removing and installing battery	7
6 Starter	9
6.1 Removing and installing starter (petrol engine)	9
6.2 Removing and installing starter (diesel engine)	11
7 Removing and installing alternator with poly V-belt	13
7.1 4-cylinder fuel injection engine with basic belt drive, vehicles ▶ 04.99	13
7.2 4-cylinder fuel injection engine with basic belt drive, vehicles 05.99 ▶	14
7.3 4-cylinder fuel injection engine with power assisted steering, vehicles ▶ 04.99	15
7.4 4-cylinder fuel injection engine with power assisted steering, vehicles 05.99 ▶	17
7.5 4-cylinder fuel injection engine with air conditioning compressor and power assisted steering, vehicles ▶ 04.99	18
7.6 4-cylinder fuel injection engine with air conditioning compressor and power assisted steering, vehicles 05.99 ▶	19
7.7 4-cylinder diesel engine, vehicles ▶ 04.99	20
7.8 4-cylinder diesel engine, vehicles 05.99 ▶	21
7.9 3-cylinder diesel engine	22
7.10 Poly V-belt drives	23
7.11 Checking V-belt	24
7.12 Removing and installing poly V-belt	25
7.13 Compact alternator with poly V-belt drive, vehicles ▶ 04.99	29
7.14 Checking carbon brushes for alternator, vehicles ▶ 04.99	30
7.15 Removing and installing voltage regulator for alternator, vehicles ▶ 04.99	30
7.16 Compact alternator with poly V-belt drive, vehicles 05.99 ▶	30
7.17 Checking carbon brushes for alternator, vehicles 05.99 ▶	31
7.18 Removing and installing voltage regulator for alternator, vehicles 05.99 ▶	32
7.19 Removing and installing poly V-belt pulley without freewheel	32
7.20 Removing and installing poly V-belt pulley with freewheel	33
90 - Gauges, instruments	36
1 Dash panel insert for vehicles ▶ 1997	36
1.1 Removing and installing dash panel insert	36
1.2 Renewing bulbs in dash panel insert (VDO)	37
1.3 Renewing bulbs in dash panel insert (MOTOMETER)	38
1.4 Dash panel insert (MOTOMETER) warning lamp symbols	39
1.5 Pin assignment on dash panel insert	40
1.6 Checking voltages and bulbs with test box V.A.G 1598	40
2 Dash panel insert for vehicles 1998 ▶	43
2.1 Renewing dash panel insert	43
2.2 Removing and installing dash panel insert	43
2.3 Dash panel insert, rear view	45
2.4 Warning lamp symbols in dash panel insert	47
2.5 Pin assignment of connectors on dash panel insert	50



3	Dash panel insert for vehicles 10.99 ▶	52
3.1	Renewing dash panel insert	52
3.2	Removing and installing dash panel insert	52
3.3	Rear view of panel insert for vehicles 10.99 ▶	53
3.4	Warning lamp symbols in dash panel insert	54
3.5	Description of instruments	57
3.6	Pin assignment of connectors on dash panel insert	59
4	Service interval display	61
4.1	Resetting service interval display	61
92	- Windscreen wash/wipe system	62
1	Windscreen wiper system	62
1.1	Removing and installing windscreen wiper system, vehicles ▶ 09.99	62
1.2	Removing and installing window wiper system, vehicles 10.99 ▶	63
1.3	Removing and installing wiper rubber	68
2	Window washer system	70
2.1	Assembly overview of window washer system, vehicles ▶ 09.99	70
2.2	Assembly overview of window washer system, vehicles 10.99 ▶	71
2.3	Adjusting windscreen washer system spray jets	71
2.4	Renewing windscreen washer system spray jets, vehicles 10.99 ▶	73
2.5	Removing washer fluid reservoir, vehicles 10.99 ▶	73
3	Rear window wipe/wash system	74
3.1	Rear window wipe/wash system, vehicles ▶ 09.99	74
3.2	Rear window wipe/wash system, vehicles 10.99 ▶	76
4	Headlight washer system	79
4.1	Assembly overview of headlight washer system, vehicles ▶ 09.99	79
4.2	Assembly overview of headlight washer system, vehicles 10.99 ▶	80
94	- Lights, bulbs, switches - exterior	83
1	Headlights, vehicles ▶ 09.99	83
1.1	Assembly overview of headlights, vehicles ▶ 09.99	83
1.2	Removing and installing headlight, vehicles ▶ 09.99	84
1.3	Renewing headlight bulbs, vehicles ▶ 09.99	84
1.4	Removing and installing headlight range control motor	85
1.5	Adjusting headlights, vehicles ▶ 09.99	86
2	Headlights, vehicles 10.99 ▶	87
2.1	Assembly overview of headlights, vehicles 10.99 ▶	87
2.2	Removing and installing headlight, vehicles 10.99 ▶	88
2.3	Renewing headlight bulbs, vehicles 10.99 ▶	88
2.4	Removing and installing headlight range control motor, vehicles 10.99 ▶	91
2.5	Repairing retaining tabs on headlight	92
2.6	Headlight conversion for driving on left/right	94
2.7	Adjusting headlights, vehicles 10.99 ▶	97
3	Headlights with gas discharge bulbs	98
3.1	Assembly overview of headlights with gas discharge bulbs	98
3.2	Removing and installing headlight	99
3.3	Renewing gas discharge headlight bulb	99
3.4	Removing and installing headlight range control motor for headlights with gas discharge bulb	104
3.5	Removing and installing gas discharge bulb control unit	105
3.6	Repairing retaining tabs on headlight	106
3.7	Adjusting headlights	108
4	Fog lights	109
4.1	Removing and installing fog lights, vehicles ▶ 09.99	109
4.2	Removing and installing fog lights, vehicles 10.99 ▶	109



4.3	Removing and installing fog light bulb, vehicles ▶ 09.99	110
4.4	Removing and installing fog light bulb, vehicles 10.99 ▶	111
5	Front turn signals	113
5.1	Removing and installing front turn signals, vehicles ▶ 09.99	113
5.2	Removing and installing front turn signals, vehicles 10.99 ▶	113
5.3	Renewing turn signal bulb, vehicles ▶ 09.99	115
5.4	Renewing turn light signal bulb, vehicles 10.99 ▶	115
6	Turn signal repeater	116
6.1	Removing and installing turn signal repeater	116
7	Tail lights	117
7.1	Assembly overview of tail light, vehicles ▶ 09.99	117
7.2	Removing and installing tail light, vehicles ▶ 09.99	118
7.3	Removing and installing bulb carrier for tail light, vehicles ▶ 09.99	118
7.4	Assembly overview of tail light, vehicles 10.99 ▶	119
7.5	Removing and installing tail light, vehicles 10.99 ▶	119
7.6	Removing and installing bulb carrier for tail light, vehicles 10.99 ▶	120
8	Number plate light	121
8.1	Removing and installing number plate light, vehicles ▶ 09.99	121
8.2	Removing and installing number plate light, vehicles 10.99 ▶	121
9	Additional brake light	123
9.1	Assembly overview, vehicles ▶ 09.99	123
9.2	Removing and installing additional brake light, vehicles ▶ 09.99	123
9.3	Removing and installing additional brake light, vehicles 10.99 ▶	124
9.4	Removing and installing additional brake light, Polo GTI 10.99 ▶	126
10	Steering column switch and ignition/starter switch	127
10.1	Assembly overview of steering column, vehicles ▶ 09.99	127
10.2	Assembly overview of steering column, vehicles 10.99 ▶	129
10.3	Removing and installing steering column switch, vehicles ▶ 09.99	131
10.4	Removing and installing steering column switch, vehicles 10.99 ▶	132
10.5	Removing and installing steering lock housing, vehicles ▶ 09.99	134
10.6	Removing and installing steering lock housing, vehicles 10.99 ▶	136
10.7	Lock cylinder, vehicles ▶ 09.99	138
10.8	Lock cylinder, vehicles 10.99 ▶	139
10.9	Removing and installing ignition/starter switch	140
10.10	Pin assignment for ignition switch	141
96 -	Lights, bulbs, switches - interior	142
1	Immobilizer	142
1.1	Assembly overview of immobilizer, vehicles ▶ 09.99	142
1.2	Removing and installing immobilizer control unit, vehicles ▶ 09.99	142
1.3	Removing and installing immobilizer reader coil D2 , vehicles ▶ 09.99	143
1.4	Assembly overview of immobilizer, vehicles 10.99 ▶	143
1.5	Removing and installing immobilizer control unit, vehicles 10.99 ▶	144
1.6	Removing and installing immobilizer reader coil D2 , vehicles 10.99 ▶	145
1.7	Transponder	145
2	Interior lights and switches	146
2.1	Removing and installing switches in dash panel, vehicles ▶ 09.99	146
2.2	Removing and installing switches in dash panel, vehicles 10.99 ▶	147
2.3	Removing and installing light switch, vehicles ▶ 09.99	147
2.4	Removing and installing light switch, vehicles 10.99 ▶	148
2.5	Removing and installing headlight range control regulator E102 with switches and instruments illumination regulator E20 , vehicles 10.99 ▶	149
2.6	Removing and installing switches in centre of dash panel, vehicles ▶ 09.99	149
2.7	Removing and installing switches in centre of dash panel, vehicles 10.99 ▶	150
2.8	Removing and installing hazard warning light switch E3 , vehicles 10.99 ▶	150



2.9	Removing and installing interior light, vehicles 10.99 ▶	151
2.10	Removing and installing sliding sunroof adjustment regulator E139 , vehicles 10.99 ▶	151
2.11	Removing and installing window regulator switches, vehicles 10.99 ▶	152
2.12	Removing and installing mirror adjustment switch E43 with mirror adjustment change-over switch E48 , vehicles 10.99 ▶	153
2.13	Removing and installing door contact switch, vehicles 10.99 ▶	153
97 - Wiring		155
1	Removing and installing relay carrier, coupling station and fuse holder	155
1.1	Removing and installing relay plate, vehicles ▶ 1997	155
1.2	Removing and installing multi-pin connector on back of relay plate, vehicle ▶ 1997	155
1.3	Removing and installing fuse holder and relay carrier, vehicles 1998 ▶ 09.99	156
1.4	Removing and installing relay carrier in front left footwell, vehicles 1998 ▶ 09.99	156
1.5	Removing and installing fuse holder in front left footwell, vehicles 1998 ▶ 09.99	157
1.6	Removing and installing relay carrier, vehicles 10.99 ▶	157
1.7	Removing and installing coupling station below relay carrier, vehicles 10.99 ▶	160
1.8	Removing and installing fuse holder in front left footwell, vehicles 10.99 ▶	161
2	Wiring harness and connector repairs	163