



Contents

01 - Self-diagnosis	1
1 Self-diagnosis	1
1.1 Self-diagnosis	1
1.2 Tools	1
1.3 Connecting fault reader	2
2 Self-diagnosis for radio generation 10.99 >	4
2.1 Self-diagnosis for radio generation 10.99 >	4
2.2 Performing self-diagnosis	4
2.3 Final control diagnosis	9
2.4 Coding "BETA" radio	11
2.5 Coding "GAMMA" radio	11
2.6 Read measured value block	13
2.7 Display group overview	14
3 Self-diagnosis of Radio/Navigation system (RNS) with multi-function display (MFD)	18
3.1 Self-diagnosis of Radio/Navigation system (RNS) with multi-function display (MFD)	18
3.2 Self-diagnosis RNS with MFD	18
3.3 Self-diagnosis of radio part in RNS with MFD	19
3.4 Final control diagnosis	24
3.5 Coding radio functions	26
3.6 Read measured value block	27
3.7 Display group overview	28
3.8 Self-diagnosis of navigation part in RNS with MFD	32
3.9 Coding navigation system	37
3.10 Read measured value block	39
3.11 Display group overview	40
3.12 Table for tyre circumference	46
4 Radio/Navigation system self-diagnosis (RNS)	49
4.1 Radio/Navigation system self-diagnosis (RNS)	49
4.2 Self-diagnosis RNS	49
4.3 Self-diagnosis of radio part in RNS	50
4.4 Final control diagnosis	55
4.5 Coding radio functions	57
4.6 Read measured value block	58
4.7 Display group overview	59
4.8 Self-diagnosis of navigation part in RNS	63
4.9 Coding navigation system	69
4.10 Read measured value block	70
4.11 Display group overview	71
4.12 Adaption	76
91 - Radio, telephone, navigation	80
1 Radio systems	80
1.1 Radio systems	80
1.2 Radio systems > 09.99	80
1.3 Radio system "alpha" > 09.99	80
1.4 Radio system "beta" > 09.99	81
1.5 Removing and installing radio > 09.99	82
1.6 Activating radio anti-theft coding > 09.99	83
1.7 Radio systems 10.99 >	83
1.8 Radio system "ALPHA" 10.99 >	84
1.9 Radio system "BETA" 10.99 >	85
1.10 Radio system "GAMMA" 10.99 >	87
1.11 Removing and installing radio 10.99 >	89
1.12 Removing and installing CD player 10.99 >	90



1.13	Removing and installing CD changer 10.99 >	92
1.14	Electronic anti-theft system for "alpha" radio 10.99 >	92
1.15	Electronic anti-theft system for "BETA" and "GAMMA" radios 10.99 >	93
2	Aerial systems	97
2.1	Aerial systems	97
2.2	Roof aerial for radio operation -R11-, vehicles > 09.99	98
2.3	Roof aerial for radio operation -R11-, vehicles 10.99 >	99
2.4	Roof aerial for radio, telephone and navigation system -R52- vehicles 10.99 >	100
3	Loudspeaker system	102
3.1	Loudspeaker system	102
3.2	Removing and installing loudspeaker, vehicles >09.99	102
3.3	Removing and installing loudspeaker, vehicles 10.99 >	103
4	Radio/Navigations System (RNS) with multi-function display (MFD)	105
4.1	Radio/Navigations System (RNS) with multi-function display (MFD)	105
4.2	General description	106
4.3	Electronic anti-theft system	106
4.4	Connections on radio navigation system	108
4.5	Removing and installing radio/navigation system	111
5	Radio navigation system (RNS)	113
5.1	Radio navigation system (RNS)	113
5.2	General description	113
5.3	Electronic anti-theft system	114
5.4	Connections on radio navigation system	118
5.5	Removing and installing radio/navigation system	122
6	Notes for mobile telephone and two-way radio operation	124
6.1	Notes for mobile telephone and two-way radio operation	124
6.2	General notes	124
6.3	Notes on performing repair work	124
6.4	Overview of battery, transmitter/receiver unit, fuse and wiring harness	126
6.5	Transmitted output and aerial fitting locations	128
7	Suppression measures	129
7.1	Suppression measures	129