



## Contents

<b>68 - Interior equipment</b>	<b>1</b>
<b>1 Interior mirror</b>	<b>1</b>
1.1 Removing and installing interior mirror	1
1.2 Bonding retaining plate for interior mirror	1
1.3 Automatic anti-dazzle interior mirror 10.99 ▶	2
1.4 Removing and installing interior mirror (with rain sensor) 10.99 ▶	3
1.5 Bonding on interior mirror base with rain sensor 10.99 ▶	4
<b>2 Compartments, covers and trims</b>	<b>6</b>
2.1 Removing and installing centre console ▶ 09.99	6
2.2 Removing and installing centre console 10.99 ▶	6
2.3 Removing and installing handbrake lever handle and trim ▶ 09.99	10
2.4 Removing and installing handbrake lever handle 10.99 ▶	11
2.5 Removing driver side storage compartment ▶ 07.97	13
2.6 Removing driver side storage compartment 08.97 ▶ 09.99	14
2.7 Removing and installing driver side storage compartment 10.99 ▶	15
2.8 Removing and installing footwell cover on driver side	16
2.9 Removing and installing glove box ▶ 09.99	16
2.10 Removing and installing glove box 10.99 ▶	17
2.11 Removing and installing passenger side storage compartment ▶ 09.99	18
2.12 Removing trim for dash panel insert ▶ 09.99	19
2.13 Removing trim for instrument cluster 10.99 ▶	19
2.14 Removing sun visor	20
2.15 Removing centre sun visor 10.99 ▶	20
<b>3 Grab handles</b>	<b>21</b>
3.1 Removing and installing grab handle (roof) ▶ 09.99	21
3.2 Removing grab handle (roof) 10.99 ▶	21
<b>4 Sill panel trims</b>	<b>22</b>
4.1 Removing and installing sill panel trim	22
<b>69 - Passenger protection</b>	<b>23</b>
<b>1 Seat belts</b>	<b>23</b>
1.1 Safety regulations for belt tensioners	23
1.2 Disposal of belt tensioner units	23
1.3 Checking belt tensioner	23
1.4 Removing and installing front seat belts with belt tensioner ▶ 09.99	24
1.5 Removing and installing front seat belts with belt tensioner 10.99 ▶	25
1.6 Removing and installing belt height adjustment ▶ 09.99	26
1.7 Removing and installing belt height adjustment 10.99 ▶	27
1.8 Removing and installing front fitting (2-door)	27
1.9 Removing and installing front fitting (4-door)	28
1.10 Removing and installing front belt buckle	28
1.11 Removing and installing rear seat belts	28
1.12 Removing and installing belt reel ▶ 09.99	29
1.13 Removing and installing belt reel 10.99 ▶	30
1.14 Removing and installing lap belt and double buckle	31
<b>2 Inspecting seat belts</b>	<b>32</b>
2.1 Points to check	32
<b>3 Airbag</b>	<b>35</b>
3.1 Tools	35
3.2 Overview - installation locations	35
3.3 Safety precautions when working on the airbag	38
3.4 Disposal of airbag units	39



3.5	Deactivating the airbag . . . . .	39
3.6	Renewing airbag units following an accident . . . . .	39
3.7	Removing and installing driver side airbag unit ▶ 09.99 . . . . .	40
3.8	Removing and installing driver side airbag unit 10.99 ▶ . . . . .	43
3.9	Removing and installing steering wheel ▶ 09.99 . . . . .	45
3.10	Removing and installing steering wheel 10.99 ▶ . . . . .	47
3.11	Removing and installing coil connector with slip ring ▶ 09.99 . . . . .	49
3.12	Removing and installing coil connector with slip ring 10.99 ▶ . . . . .	49
3.13	Removing and installing passenger side airbag unit ▶ 09.99 (without glove box) . . . . .	51
3.14	Removing and installing passenger side airbag unit ▶ 09.99 (with glove box) . . . . .	54
3.15	Removing and installing passenger side airbag unit 10.99 ▶ . . . . .	56
3.16	Removing and installing airbag control unit J234 . . . . .	58
3.17	Removing and installing driver and front passenger side airbag 10.99 ▶ . . . . .	59
3.18	Removing and installing sensor for driver/passenger side airbag 10.99 ▶ . . . . .	62
<b>70</b>	<b>- Trim, insulation . . . . .</b>	<b>65</b>
<b>1</b>	<b>Dash panel . . . . .</b>	<b>65</b>
1.1	Tools . . . . .	65
1.2	Removing and installing dash panel ▶ 09.99 . . . . .	66
1.3	Removing and installing dash panel 10.99 ▶ . . . . .	72
<b>2</b>	<b>Door trims . . . . .</b>	<b>78</b>
2.1	Tools . . . . .	78
2.2	Removing and installing front door trim ▶ 09.99 . . . . .	78
2.3	Removing and installing window crank ▶ 09.99 . . . . .	81
2.4	Removing and installing front door trim 10.99 ▶ . . . . .	81
2.5	Removing and installing window crank 10.99 ▶ . . . . .	84
2.6	Removing and installing rear door trim ▶ 09.99 . . . . .	84
2.7	Removing and installing rear door window crank ▶ 09.99 . . . . .	86
2.8	Removing and installing rear door trim 10.99 ▶ . . . . .	86
2.9	Removing and installing rear door window crank 10.99 ▶ . . . . .	89
2.10	Removing and installing door insulation film . . . . .	89
<b>3</b>	<b>Trim . . . . .</b>	<b>94</b>
3.1	Tools . . . . .	94
3.2	Removing and installing A-pillar trim . . . . .	94
3.3	Removing and installing B-pillar trim ▶ 09.99 . . . . .	95
3.4	Removing and installing B-pillar trim 10.99 ▶ . . . . .	97
3.5	Removing and installing upper C-pillar trim ▶ 09.99 . . . . .	99
3.6	Removing and installing upper C-pillar trim 10.99 ▶ . . . . .	101
3.7	Removing and installing lower C-pillar trim (4-door Polo) ▶ 09.99 . . . . .	103
3.8	Removing and installing lower C-pillar trim (4-door Polo) 10.99 ▶ . . . . .	104
3.9	Removing and installing side trim (2-door Polo) ▶ 09.99 . . . . .	105
3.10	Removing and installing side trim (2-door Polo) 10.99 ▶ . . . . .	105
3.11	Removing and installing support for right luggage compartment cover . . . . .	108
3.12	Removing and installing support for left luggage compartment cover 10.99 ▶ . . . . .	108
3.13	Removing and installing luggage compartment floor trim . . . . .	110
3.14	Removing and installing left luggage compartment side trim ▶ 09.99 . . . . .	111
3.15	Removing and installing left luggage compartment side trim 10.99 ▶ . . . . .	112
3.16	Removing and installing right luggage compartment side trim ▶ 09.99 . . . . .	113
3.17	Removing and installing right luggage compartment side trim 10.99 ▶ . . . . .	114
3.18	Removing and installing rear lock carrier cover ▶ 09.99 . . . . .	115
3.19	Removing and installing rear lock carrier cover 10.99 ▶ . . . . .	116
3.20	Removing and installing rear lid trim ▶ 09.99 . . . . .	117
3.21	Removing and installing rear lid trim 10.99 ▶ . . . . .	118
<b>4</b>	<b>Roof trims . . . . .</b>	<b>119</b>
4.1	Removing and installing moulded headlining ▶ 09.99 . . . . .	119



4.2	Removing and installing moulded headlining 10.99 ▶ . . . . .	122
4.3	Removing and installing moulded headlining with sliding/tilting sunroof ▶ 09.99 . . . . .	125
4.4	Removing and installing moulded headlining with sliding/tilting sunroof 10.99 ▶ . . . . .	128
<b>72 - Seat frames</b>	.....	<b>132</b>
1	<b>Front seats</b> .....	132
1.1	Tools .....	132
1.2	Removing and installing seat ▶ 09.99 .....	132
1.3	Removing and installing front seat 10.99 ▶ .....	133
1.4	Removing and installing front seat with side airbag 10.99 ▶ .....	135
1.5	Removing and installing backrest .....	137
1.6	Assembly overview - seat frame (normal and sport seat) .....	139
1.7	Assembly overview - backrest frame (normal and sport seat) .....	141
2	<b>Rear seats</b> .....	142
2.1	Removing and installing (split folding) bench seat and backrest .....	142
<b>74 - Seat - padding, covers</b>	.....	<b>144</b>
1	<b>Front seat covers and padding</b> .....	144
1.1	Tools .....	144
1.2	Removing and installing front seat cover and padding .....	144
1.3	Removing and installing front backrest cover and padding .....	147
2	<b>Seat heater elements</b> .....	150
2.1	Removing and installing seat heater element .....	150
2.2	Removing and installing heater element for backrest .....	150
3	<b>Rear seat covers and padding</b> .....	152
3.1	Tools .....	152
3.2	Removing and installing cover and padding for (one-piece) bench seat .....	152
3.3	Removing and installing cover and padding for (one-piece) backrest .....	153
3.4	Removing and installing covers and padding for (divided) bench seat .....	154
3.5	Removing and installing covers and padding for (divided) backrest .....	155