



Contents

50 - Body front	1
1 Body - front	1
1.1 Body - front	1
1.2 Body - front > 09.99	1
1.3 Removing and installing lock carrier with attachments	1
1.4 Removing and installing skirt	3
1.5 Removing and installing front wing	4
2 Body, front 10.99 >	6
2.1 Body, front 10.99 >	6
2.2 Tools	6
2.3 Lock carrier with attachments - Assembly overview	7
2.4 Removing and installing lock carrier with attachments	8
2.5 Lock carrier - service position	10
2.6 Front wing - Assembly overview	11
2.7 Wing dimensions	13
2.8 Noise insulation (petrol engine) - Assembly overview	14
2.9 Noise insulation (Diesel engine) - Assembly overview	15
55 - Bonnet, Flaps	16
1 Bonnet	16
1.1 Bonnet	16
1.2 Assembly overview	16
1.3 Removing and installing bonnet 10.99 >	18
1.4 Removing gas strut	19
1.5 Releasing gas from strut	20
1.6 Adjusting bonnet	20
1.7 Removing and installing bonnet lock cable	21
1.8 Removing and installing bonnet lock	23
2 Rear boot lid/tailgate	23
2.1 Rear boot lid/tailgate	23
2.2 Tools	23
2.3 Removing gas strut	24
2.4 Releasing gas from strut	25
2.5 Adjusting boot lid/tailgate	25
2.6 Removing and installing tailgate/boot lid lock	27
2.7 Removing and installing lock cylinder	29
2.8 Maintaining common key locking	32
3 Tank flap unit	32
3.1 Tank flap unit	32
3.2 Tools	32
3.3 Assembly overview	33
3.4 Removing and installing tank flap unit	34
3.5 Dismantling and assembling tank flap unit	36
57 - Front doors/Door components/Central locking system	38
1 Doors front	38
1.1 Doors front	38
1.2 Tools	38
1.3 Assembly overview	39
1.4 Removing and installing door	42
1.5 Adjusting door	42
1.6 Front door 09.96 >	43
1.7 Removing and installing front door 09.96 >	46
1.8 Adjusting front door 09.96 >	46



1.9	Driver's door of postal vehicles	47
1.10	Door lock - Assembly overview	49
1.11	Removing and installing door lock	50
1.12	Removing inner release handle	52
1.13	Door handle - Assembly overview	52
1.14	Removing and installing door handle	54
1.15	Maintaining common key locking	56
1.16	Door handle with inner profile key - Assembly overview	57
1.17	Removing and installing lock cylinder with inner profile key	59
1.18	Door seals	63
1.19	Removing and installing door inner seal	64
2	Central locking	65
2.1	Central locking	65
2.2	Assembly overview	65
2.3	New coupling and junction piece for pipe connector	68
2.4	Removing and installing bi-pressure pump	68
2.5	Removing and installing tank flap positioning element	69
2.6	Removing and installing front door positioning element	69
2.7	Removing and installing rear door lock positioning element	71
2.8	Removing and installing boot lid/tailgate positioning element	72
2.9	Activating individual door opening of central locking system	72
2.10	Functional check of central locking	73
2.11	Functional check of central locking with radio remote control	73
2.12	Matching ignition keys to radio wave remote control	74
2.13	Removing and installing batteries for the main key with radio wave remote control	74
58	Rear doors/Door components	75
1	Rear door	75
1.1	Rear door	75
1.2	Tools	75
1.3	Assembly overview	76
1.4	Removing and installing door	79
1.5	Rear door 09.96 >	80
1.6	Removing and installing rear door 09.96 >	83
1.7	Adjusting door	84
1.8	Door lock - Assembly overview	85
1.9	Removing and installing door lock	86
1.10	Removing inner release handle	88
1.11	Door handle - Assembly overview	89
1.12	Removing and installing door handle	90
1.13	Door seals	91
1.14	Removing and installing door inner seal	92
60	Sliding/tilting roof	93
1	Sliding/tilting roof with glass panel > 09.99	93
1.1	Sliding/tilting roof with glass panel > 09.99	93
1.2	Sliding/tilting roof with glass panel - Assembly overview	93
1.3	Removing sliding/tilting roof glass panel	97
1.4	Adjusting panel seal	97
1.5	Installing sliding/tilting roof glass panel	98
1.6	Removing sliding headlining	98
1.7	Installing sliding headlining	99
1.8	Checking parallel running	99
1.9	Adjusting parallel running	99
1.10	Adjusting height of sliding/tilting roof glass panel	100
1.11	Removing and installing carrier unit	101
1.12	Setting "Zero position" on sliding/tilting roof drive	103



1.13	Cleaning water drain hoses	104
1.14	Sliding/tilting sunroof with glass panel 10.99 >	106
1.15	Function	106
1.16	Sliding/tilting roof with glass panel - Assembly overview	107
1.17	Removing sliding/tilting sunroof glass panel	111
1.18	Installing sliding/tilting sunroof glass panel	111
1.19	Sliding/tilting roof glass panel (height adjustment)	112
1.20	Adjusting panel seal	113
1.21	Renewing panel seal	114
1.22	Removing wind deflector	115
1.23	Removing and installing sliding headlining	115
1.24	Removing sliding/tilting sunroof preselector switch	116
1.25	Removing drive for sliding/tilting sunroof	117
1.26	Adjusting drive for sliding/tilting sunroof ("0" position)	117
1.27	Checking parallel running	117
1.28	Adjusting parallel running	118
1.29	Removing coulisse guide	119
1.30	Removing and installing carrier unit	120
1.31	Removing guide and cable	122
1.32	Cleaning water drain hoses	124
2	Fabric folding roof	126
2.1	Fabric folding roof	126
2.2	Fabric folding roof assembly overview	126
2.3	Removing and installing fabric folding roof complete	130
2.4	Removing and installing folding roof with cover and trim panel	130
2.5	Renewing fabric folding roof cover or trim panel	133
2.6	Tensioning fabric folding roof	134
2.7	Checking parallel running	135
2.8	Adjusting parallel running	135
2.9	Renewing roof spoiler	135
63	- Bumpers	137
1	Front bumper >09.99	137
1.1	Front bumper >09.99	137
1.2	Assembly overview	137
2	Front bumper 10.99 >	140
2.1	Front bumper 10.99 >	140
2.2	Bumper cover - Assembly overview	140
2.3	Removing and installing bumper cover	143
2.4	Bumper carrier - Assembly overview	144
3	Rear bumper	145
3.1	Rear bumper	145
3.2	Rear bumper > 09.99	145
3.3	Assembly overview	145
4	Rear bumper 10.99 >	147
4.1	Rear bumper 10.99 >	147
4.2	Bumper cover - Assembly overview	147
4.3	Removing and installing bumper cover	149
4.4	Bumper carrier - Assembly overview	150
64	- Glazing	152
1	Flush bonded windows	152
1.1	Flush bonded windows	152
1.2	Tools	152
1.3	Materials	153
1.4	Windscreen - Assembly overview	154



1.5	Removing and installing plenum chamber trim	156
1.6	Removing windscreen	158
1.7	Installing windscreen	159
1.8	Side window - Assembly overview	160
1.9	Removing undamaged side window	160
1.10	Removing broken side window	162
1.11	Installing side window	162
1.12	Rear window - Assembly overview	163
1.13	Removing undamaged rear window	163
1.14	Removing broken rear window	165
1.15	Installing rear window	165
1.16	Preparing old undamaged window for glazing	166
1.17	Preparing new window for glazing	167
1.18	Preparing body flange for glazing	168
1.19	Installation instructions	169
1.20	Curing time	169
1.21	Touching up paint damage	170
1.22	Cleaning off surplus adhesive sealing material	170
2	Door windows	171
2.1	Door windows	171
2.2	Front door window - Assembly overview	171
2.3	Removing and installing window slot seal	172
2.4	Removing door window	173
2.5	Adjusting door window	174
2.6	Removing and installing window lifter	174
2.7	Servicing electric window lifters	175
2.8	Rear door window - Assembly overview	178
2.9	Removing and installing door window	179
2.10	Fitting door window to window lifter	181
2.11	Removing and installing window lifters	181
2.12	Removing and installing triangular window	183
66	- Exterior equipment	184
1	Roof moulding >09.99	184
1.1	Roof moulding >09.99	184
1.2	Removing and installing moulding for roof	184
1.3	Removing and installing roof moulding for door	185
2	Trim >09.99	186
2.1	Trim >09.99	186
2.2	Removing and installing radiator grille with trim frame	186
3	Protective strips	188
3.1	Protective strips	188
3.2	Renewing side protective strips	188
4	Removing and installing wheel housing liner	190
4.1	Removing and installing wheel housing liner	190
5	Rear view mirror >09.99	191
5.1	Rear view mirror >09.99	191
5.2	Tools	191
5.3	Assembly overview	192
6	Rear view mirror 10.99 >	194
6.1	Rear view mirror 10.99 >	194
6.2	Removing mirror housing	194
7	Spoiler >09.99	195
7.1	Spoiler >09.99	195
7.2	Removing and installing front spoiler	195
8	Rear spoiler	196



8.1	Rear spoiler	196
8.2	Tools	196
8.3	Rear spoiler	197
8.4	Assembly overview	197
8.5	Removing and installing rear spoiler 10.99 >	198