



Contents

00 - Technical data	1
1 Vehicle identification data	1
1.1 Type plate and vehicle identification number	1
1.2 Vehicle data sticker	1
2 Body dimensions	2
2.1 Body - front	2
2.2 Body, centre (2-door)	9
2.3 Body, centre (4-door)	11
2.4 Body - rear	15
2.5 Floor group	18
3 Alignment jig	20
3.1 Overview	20
4 Galvanized body parts	28
5 Strengthened steel sheet metal	29
50 - Body - front	30
1 Renewing engine bracket	30
1.1 Left engine console	30
1.2 Right engine bracket	31
2 Renewing support	33
2.1 Removing	33
3 Renewing front wheel housing	35
3.1 Removing	35
4 Renewing front wheel housing - part section	38
4.1 Removing	38
5 Renewing longitudinal member before subframe mounting - part section	40
5.1 Removing	40
6 Renewing longitudinal member behind subframe mounting - part section	43
6.1 Removing	43
7 Renewing front section of longitudinal member	45
7.1 Removing	45
51 - Body - centre	49
1 Renewing roof	49
1.1 Removing	49
2 Renewing front roof cross member	51
2.1 Removing	51
3 Renewing rear cross member	53
3.1 Removing	53
4 Renewing outer side panel - part section (2-door)	55
4.1 Removing	55
5 Renewing outer side panel - part section (4-door)	58
5.1 Removing	58
6 Renewing A-pillar - part section	60
6.1 Removing	60
7 Renewing B-pillar - part section (2-door)	64
7.1 Removing	64
8 Renewing B-pillar - part section 11.99 ► (2-door)	66
8.1 Removing	66
9 Renewing B-pillar (4-door)	69



9.1	Removing	69
10	Renewing outer side member (2-door)	73
10.1	Removing	73
11	Renewing inner side member reinforcement 11.99 > (2-door)	75
11.1	Removing	75
12	Renewing inner side member reinforcement 11.99 > (4-door)	78
12.1	Removing	78
13	Renewing outer side member (4-door)	81
13.1	Removing	81
14	Renewing inner side member (2-door)	84
14.1	Removing	84
15	Renewing inner side member (4-door)	86
15.1	Removing	86
16	Renewing floor panel	88
16.1	Removing	88
53 - Body - rear		93
1	Renewing rear cross panel	93
1.1	Removing	93
2	Renewing rear luggage compartment floor - part section	96
2.1	Removing	96
3	Renewing rear longitudinal member - part section	98
3.1	Removing	98
4	Renewing side panel - part section (2-door)	100
4.1	Removing	100
5	Renewing side panel - part section GTI 11.99 > (2-door)	103
5.1	Removing	103
6	Renewing side panel - part section GTI 11.99 > (2-door)	107
6.1	Removing	107
7	Renewing side panel - part section (4-door)	112
7.1	Removing	112
8	Renewing side panel - part section (2-door)	115
8.1	Removing	115
9	Renewing reinforcement for wheel housing	118
9.1	Removing	118
10	Renewing rear wheel housing	120
10.1	Removing	120
11	Renewing rear wheel housing - part section	124
11.1	Removing	124
12	Renewing outer wheel housing liner	126
12.1	Removing	126